


Maytag DE307 02 - CONTROL PANEL & COMPONENTS

MODEL DE-DG307 CONTROL PANEL & COMPONENTS

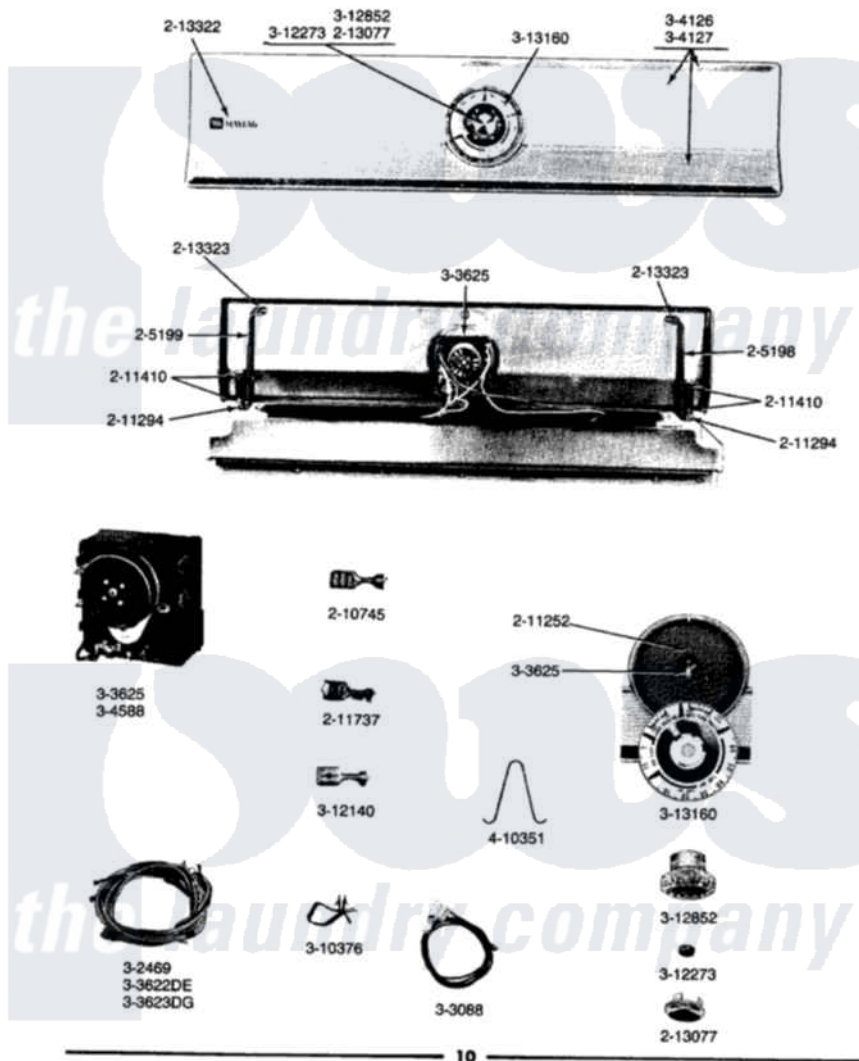

10

Maytag [Residential Maytag DE307 Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL & COMPONENTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205198		Not Available	BRACKET KIT - LEFT HAND
2	205199		Not Available	BRACKET KIT - RIGHT HAND
3	210745			Wire Terminal
4	211252			Screw, Ground Wire
5	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
6	211410			Screw, HeX Head No.8 X 3/8 Inch
7	211737	248562		Terminal
8	213077		Not Available	CAP FOR TIMER KNOB
9	213322		Not Available	MAYTAG DECAL
10	213323			Fastener, Exhaust Duct Kit
11	302469		Not Available	HARNES FOR SHROUD
12	303088		Not Available	GAS VALVE WIRES WITH PLUG
13	Y303622			Main Wire Harness
15	303625		Not Available	PUSH-TO-START TIMER

16	304126		Control Panel, Sea-Mist
17	304127	Not Available	CONTROL PANEL KIT, SEA-MIST
18	Y304585		Timer Motor RPR For 305214 Timer Only
19	Y310376		Clip, Door Switch Harness
20	Y312140		Wire Connector
21	312273		Nut, Control Knob
22	312852		Selector Knob-Clear Acrylic
23	312377	31-2377	Minimanual
24	Y313160	Not Available	TIMER DIAL
25	410351	Not Available	HARNES RETAINER

