

# Maytag DE312 02 - DOOR



30

Maytag [Residential Maytag DE312 Dryer Parts](#) Parts Diagram 02 - DOOR  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
2	Y313927			INSTRUCTION LABEL
3	<a href="#">306436</a>			Door Latch Kit-W
4	<a href="#">314286</a>			Seal For Front Panel
5	<a href="#">Y310376</a>			Clip, Door Switch Harness
6	212982	<a href="#">22001650</a>		Fastener, Spring
7	<a href="#">314077</a>			Door Seal
8	314347	<a href="#">400021-1</a>		Screw
9	Y305753	<a href="#">W10169313</a>		Switch-Dor
10	<a href="#">Y314062</a>			Screw, Door Hinge And Panel
11	<a href="#">Y313910</a>			Clip, Door Liner To Outer Panel
12	<a href="#">Y313911</a>			Door Strike Retainer
13	303942		Not Available	KNOB AND SCREW
14	Y313908			DOOR PANEL-WHITE
15	Y304579			DOOR (WHT)
"	Y306668			DOOR (WHT)
				INNER DOOR WITH KNOB &

16	305835		Not Available	INNER DOOR WITH KNOB & SCRE
"	306676		Not Available	INNER DOOR WITH KNOB
18	Y304577	<a href="#">33001230</a>		Hinge, Door
19	<a href="#">Y313907</a>			Fastener, Twin
20	304595	<a href="#">3369903</a>		Dishrack
21	<a href="#">204439</a>			Screw And Fstner Assembly

