


Maytag DE408 01 - CONTROLS & COMPONENTS

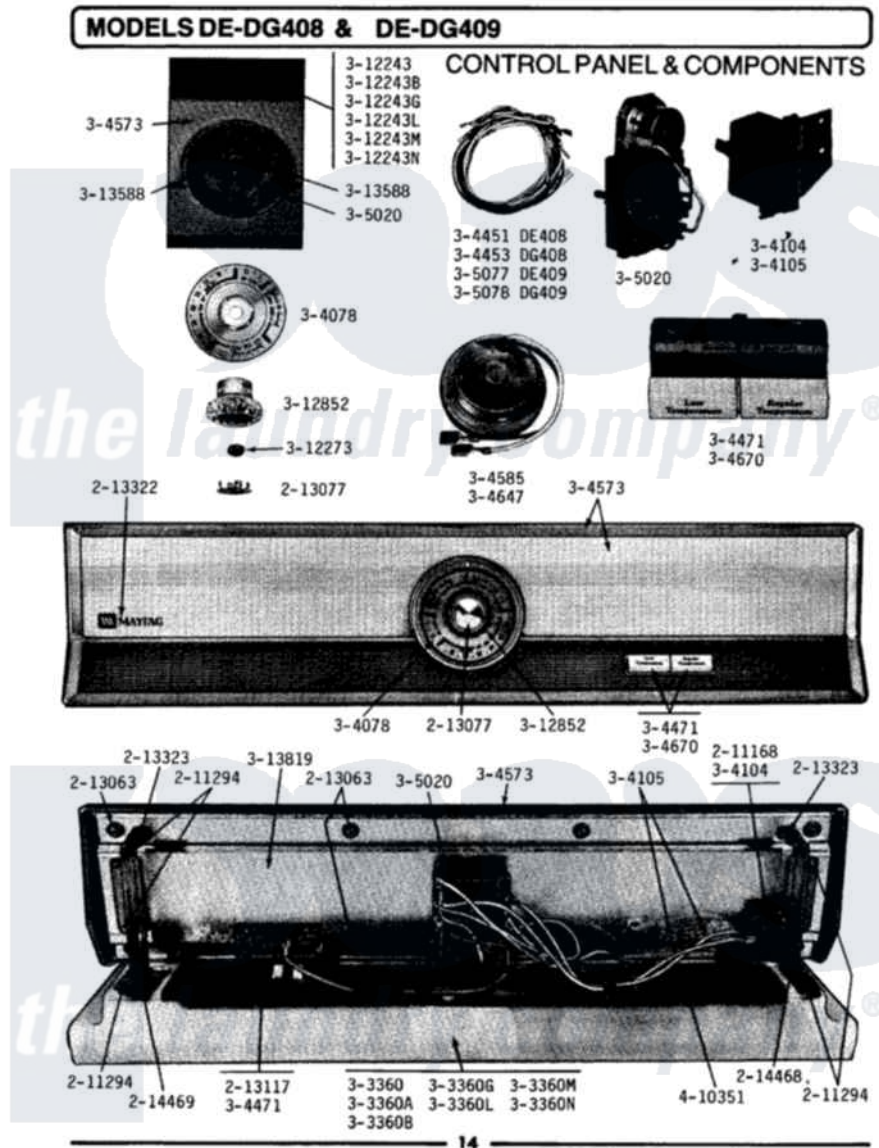

Maytag Residential Maytag DE408 Dryer Parts Parts Diagram 01 - CONTROLS & COMPONENTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211168	W10139210		Screw, 8-18 X 5/16
2	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	213063	703431		Palnut
4	213077		Not Available	CAP FOR TIMER KNOB
5	213117	67006908		Screw, Ice Rack
6	213322		Not Available	MAYTAG DECAL
7	213323			Fastener, Exhaust Duct Kit
8	214468		Not Available	BRACKET-LEFT HAND
9	214469		Not Available	BRACKET-RIGHT HAND
10	303360		Not Available	TOP COVER-WHITE
11	303360A		Not Available	TOP COVER-DARK AVOCADO
12	303360B		Not Available	TOP COVER-DARK COPPERTONE
13	303360G		Not Available	TOP COVER-DARK GOLD
14	303360L		Not Available	TOP COVER-ALMOND

15	303360M		Not Available	TOP COVER-HARVEST WHEAT
16	303360N		Not Available	TOP COVER-FRESH AVOCADO
17	304078		Not Available	TIMER DIAL, SUN-GLOW
18	Y304104			Buzzer
19	304105		Not Available	BUZZER HARNESS
20	304451		Not Available	MAIN WIRE HARNESS
22	Y304471			Temperature Switch
23	304573	4314961		Swtch-Lite
24	Y304585			Timer Motor RPR For 305214 Timer Only
25	304646		Not Available	TIMER MOTOR
26	304670			Button Kit
27	Y305020		Not Available	TIMER
28	305077		Not Available	WIRE HARNESS
29	305078		Not Available	WIRE HARNESS
30	312243		Not Available	CONTROL COVER-WHITE
31	312243B		Not Available	CONTROL COVER-DK COPPERTONE
32	312243G		Not Available	CONTROL COVER-DARK GOLD
33	312243L		Not Available	CONTROL COVER-ALMOND
34	312243M		Not Available	CONTROL COVER-HARVEST WHEAT
35	312243N		Not Available	CONTROL COVER-FRESH AVOCADO
36	312273			Nut, Control Knob
37	312852			Selector Knob-Clear Acrylic
38	Y313588	488234		Screw 8-32 X 1/4
39	313819		Not Available	BACK-UP PLATE
40	410351		Not Available	HARNESS RETAINER

