



[Maytag Residential Maytag DE701W Dryer Parts Parts Diagram 02 - CONTROL PANEL](#)  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y300538		Not Available	FLUORESCENT LAMP
2	300541		Not Available	COVER FOR CONTROL PANEL
3	300552		Not Available	LAMP SOCKET
4	<a href="#">301010</a>			Chime
5	301462		Not Available	TIMER
6	301465		Not Available	ELECTRONIC CONTROL
7	301690		Not Available	CAPACITOR 8.0 MICROFARADS
8	301698		Not Available	MAIN WIRE HARNESS
9	301711		Not Available	WIRE HARNESS-ELEC. CONTROL
10	<a href="#">Y310376</a>			Clip, Door Switch Harness
11	310744		Not Available	SCREW-LAMP RECEPTACLE TO BRACK
12	310844	<a href="#">W10068250</a>		Screw
13	311259		Not Available	SCREW, No.4-36 X 1/2 INCH
14	311503		Not Available	CONTROL PANEL

15	311504		Not Available	GLASS PANEL-LEFT HAND, GOLD
16	Y311505		Not Available	GLASS PANEL-RIGHT HAND, GOL
17	311535		Not Available	TIMER DIAL
18	311543		Not Available	CONTROL PANEL PL
19	311608	<a href="#">98165</a>		Screw
20	311612		Not Available	COVER, CIRCUIT BOARD TERMINALS
21	311613	<a href="#">Y311711</a>		Screw, Fuse Block
22	200860		Not Available	RECEPTACLE FOR LAMP-RIGHT
23	200862		Not Available	BALLAST
24	201580		Not Available	SWITCH FOR FLUORESCENT LAMP
25	202807		Not Available	RECEPT FOR FLUORESCENT LAMP
26	210310	<a href="#">31001575</a>		Bulb, Cylinder Light
27	<a href="#">211065</a>			Spring, Index Wheel
28	211238		Not Available	PANEL BRACKET, LEFT
29	211239		Not Available	PANEL BRACKET, RIGHT
30	211244		Not Available	GASKET
31	211246		Not Available	SPRING CLIP
32	211247		Not Available	RETAINER
33	211249		Not Available	FASTENER
34	<a href="#">211250</a>			Fastener
35	<a href="#">211252</a>			Screw, Ground Wire
36	211293		Not Available	SCREW, No.8 X 1/2 INCH
37	211294	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
38	211512		Not Available	WASHER
39	211836		Not Available	CONTROL KNOB - T
40	213077		Not Available	CAP FOR TIMER KNOB
41	052727		Not Available	HEX. NUT, 1/4-28

