


# Maytag DE710 02 - FRONT PANEL & DOOR ASSEMBLY

**MODELS DE-DG110-210-410-510-610-710-810**

**FRONT PANEL & DOOR ASSEMBLY  
ORIGINAL & SERIES 01**

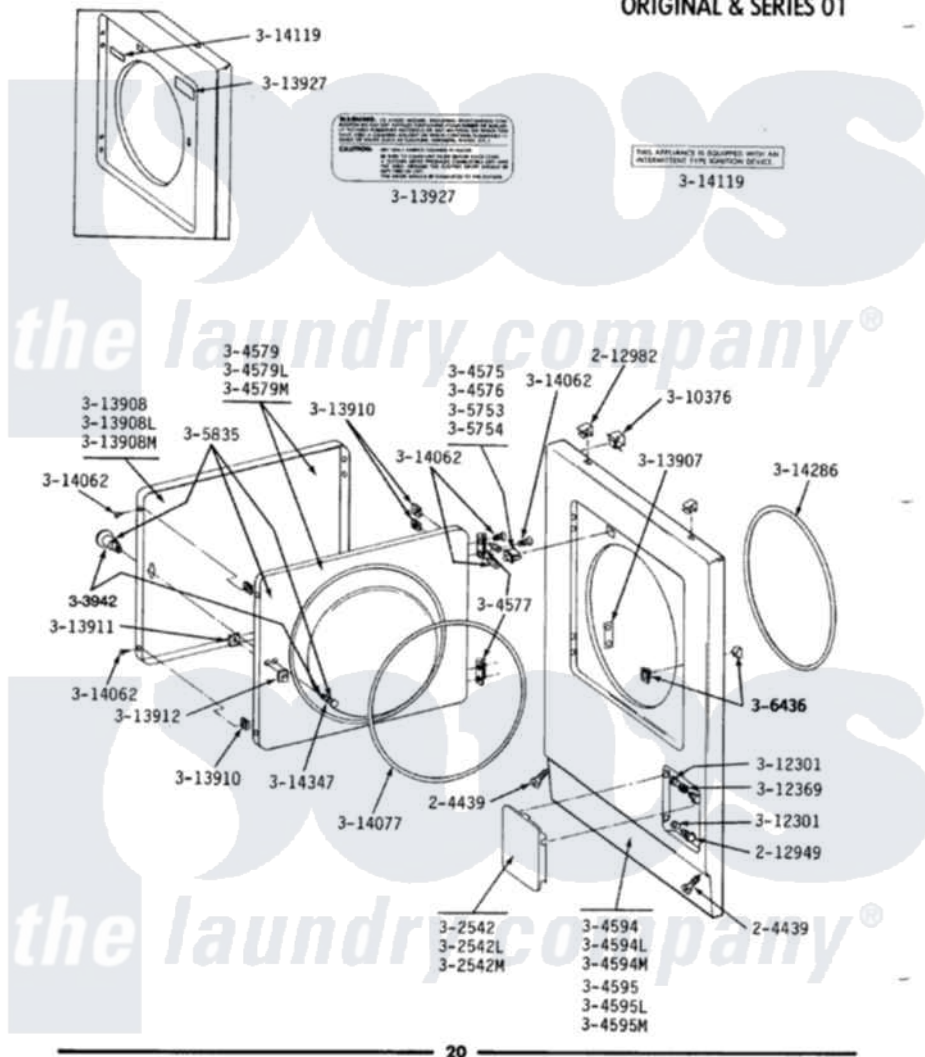

Maytag Residential Maytag DE710 Dryer Parts Parts Diagram 02 - FRONT PANEL & DOOR ASSEMBLY  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">204439</a>			Screw And Fstner Assembly
2	212949	<a href="#">22001866</a>		Screw, Relay
3	212982	<a href="#">22001650</a>		Fastener, Spring
4	302542		Not Available	PART NOT USED. (DG ONLY)
5	302542L		Not Available	PART NOT USED. (DG ONLY)
6	302542M		Not Available	ACCESS DOOR-HARVEST WHEAT
7	Y304575	<a href="#">W10169313</a>		Switch-Dor
8	Y304576	<a href="#">W10169313</a>		Switch-Dor
9	Y304577	<a href="#">33001230</a>		Hinge, Door
10	<a href="#">306436</a>			Door Latch Kit--W
11	Y304579			DOOR (WHT)
14	<a href="#">304594</a>			Front Panel-White
15	304594L		Not Available	FRONT PANEL-ALMOND
16	304594M	<a href="#">3369903</a>		Dishrack
17	304595	<a href="#">3369903</a>		Dishrack
20	Y305753	<a href="#">W10169313</a>		Switch-Dor

21	Y305754	<a href="#">W10169313</a>	Switch-Dor
22	305835	Not Available	INNER DOOR WITH KNOB & SCRE
23	303942	Not Available	KNOB AND SCREW
24	<a href="#">Y310376</a>		Clip, Door Switch Harness
25	312301	Not Available	BUSHING FOR ACCESS STUD
26	<a href="#">312369</a>		Sleeve, Access Panel Stud Part Not Used
27	<a href="#">Y313907</a>		Fastener, Twin
28	Y313908		DOOR PANEL-WHITE
31	<a href="#">Y313910</a>		Clip, Door Liner To Outer Panel
32	<a href="#">Y313911</a>		Door Strike Retainer
33	Y313912	<a href="#">306436</a>	Door Latch Kit-W
34	Y313927		INSTRUCTION LABEL
35	<a href="#">Y314062</a>		Screw, Door Hinge And Panel
36	<a href="#">314077</a>		Door Seal
37	314119	Not Available	GAS IGNITION LABEL
38	<a href="#">314286</a>		Seal For Front Panel
39	314347	<a href="#">400021-1</a>	Screw

