


Maytag DE806 02 - CABINET REMOVED

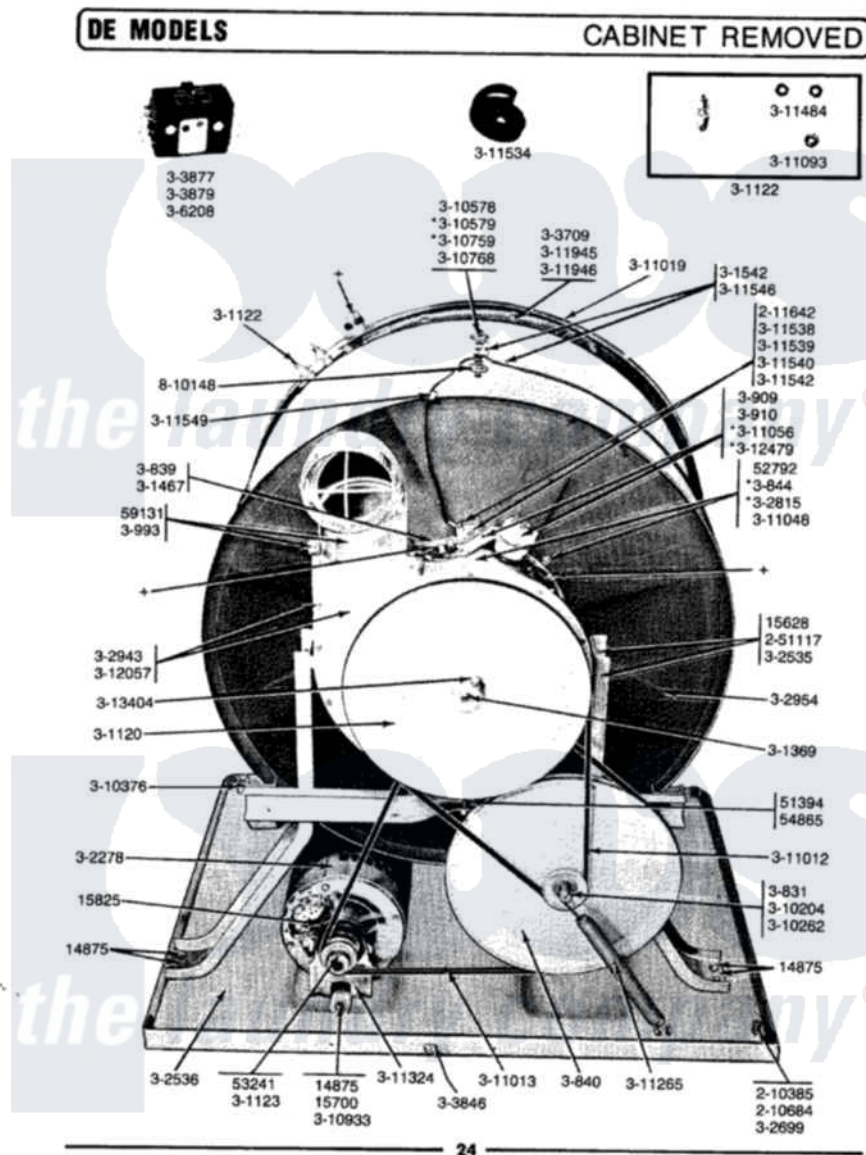

Maytag Residential Maytag DE806 Dryer Parts Parts Diagram 02 - CABINET REMOVED
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	014875		Not Available	CAP SCREW, No.14 X 1/2
2	015628		Not Available	BOLT, 5/16 X 3/4 HEX
3	015700		Not Available	CAP SCREW, 1/4-20 X 1/2
4	Y015825			Clip, Motor To Motor Support
5	051394		Not Available	BOLT, 5/16 X 2-1/8
6	052792			Screw, 1 1/4-20 X 5/16
7	Y053241			Set Screw, Motor Pulley
8	054865		Not Available	LOCK WASHER, 5/16 X 3/32
9	Y059131			Elbow, Venting
10	210385			Lock Nut For Adjustable Leg
11	210684			Foot, Adjustable Leg
12	211642		Not Available	SCREW, No.6-20 X 3/8 INCH
13	300831		Not Available	SHAFT AND SLIDE
14	300839		Not Available	SEAL
15	300840		Not Available	REDUCTION PULLEY
16	Y300844			Exhaust Housing

17	300909	8009		Bulb-Light
18	300910		Not Available	RECEPTACLE
19	Y301120			Drum Pulley
20	301122	Y304596		Terminal Insulator Assembly
21	301123		Not Available	MOTOR PULLEY
22	301369		Not Available	SHAFT WITH SPIDER
23	Y302278			Motor
24	302535		Not Available	SUPPORT
25	302536		Not Available	BASE
26	Y302699	22003428		Leg, Adjustable
27	Y302815			Blower Housing With Bearing
28	302943			COVER WITH LINT SEAL-BLOWER
29	302954		Not Available	DRUM W/FELT - PORCELAIN
30	303709			Clip And Insulator Assembly
32	303846	22003781		Screw, Ground Strap
33	Y310376			Clip, Door Switch Harness
34	310578		Not Available	WASHER
35	Y310759			Screw, Tumbler Baffles
36	310768		Not Available	WASHER
37	310933	33002194		Nut, Speed
38	Y311012			Drive Belt
39	Y311013			Motor Belt
40	311019	Y311946		Heater Wire 240 Volt
41	311093			Washer, Terminal Connection
42	311265			Spring
43	311324			Motor Base
44	311534			Felt Seal
45	Y311538			Carbon Brush Holder
46	Y312057	910624		Screw
47	312479		Not Available	LAMP SUPPORT FOR 3-2815
48	Y313404	Y301120		Drum Pulley
49	211642		Not Available	SCREW, No.6-20 X 3/8 INCH
50	251117		Not Available	LOCK WASHER
51	301467		Not Available	SLIP RING
52	301542		Not Available	WIRE HARNESS FOR DRUM
53	Y303877		Not Available	SWITCH, MOTOR EXTERNAL START No.303358-2, No.303358-4, 303358-7
54	Y303879			Switch, Motor External Start
55	306208	Y302278		Motor
56	310204		Not Available	SNAP RING
57	310262			Washer
58	310579		Not Available	SCREW, No.10-24 X 11/16 INCH
59	311048		Not Available	WASHER, ALUMINUM
60	311056			Lamp Support
61	311484	112432		Nut
62	Y311539			Spring For Carbon Brush
63	311540		Not Available	COVER FOR CARBON BRUSH
64	Y311542		Not Available	CARBON BRUSH
65	311546	911445		Wire Connector
66	810148		Not Available	SCREW