


Maytag DE882 01 - CONTROL PANEL

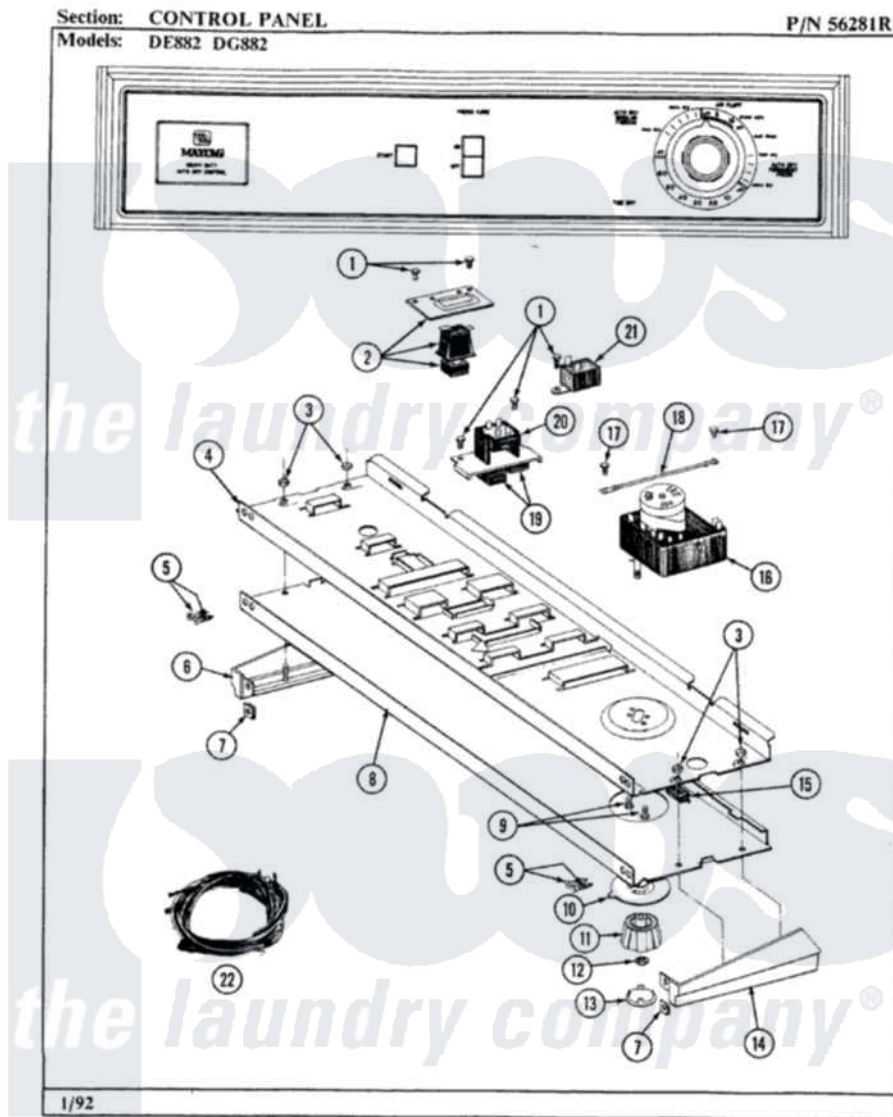

24

Maytag [Residential Maytag DE882 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	211168	W10139210		Screw, 8-18 X 5/16
2	306533			Switch, Push/To/Start W/Bkt
3	214872			Palnut, End Cap Note: Nut, Lamp Holder
4	314184			Back Up Plate
5	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
6	214815			End Cap F/Control Panel-LH
7	214894			Fastener, End Cap
8	306547		Not Available	CONTROL PANEL
9	910708	488234		Screw 8-32 X 1/4
10	314422	33001500		Dial, Timer Indicator
11	314421			Knob For Timer
12	312273			Nut, Control Knob
13	215163		Not Available	CAP FOR KNOB
14	214816			End Cap F/Control Panel-RH
15	214897			Pad, Control Panel

16	306545		Timer
17	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
18	204807		Ground Wire, Supp. Plte To Top Cover
19	215210		Button For Switch
20	305950	Not Available	DRYNESS-PRESS CARE SWITCH
21	305205	694419	Mini-Buzzer
22	306546	Not Available	MAIN WIRE HARNESS
"	306603	Not Available	MAIN WIRE HARNESS - CANADA
"	306818	Not Available	WIRE HARNESS
"	306823	Not Available	WIRE HARNESS

the laundry company[®]

the laundry company[®]

the laundry company[®]