


# Maytag DG100PN1 13 - SAIL SWITCH BURNER HI-LIMIT

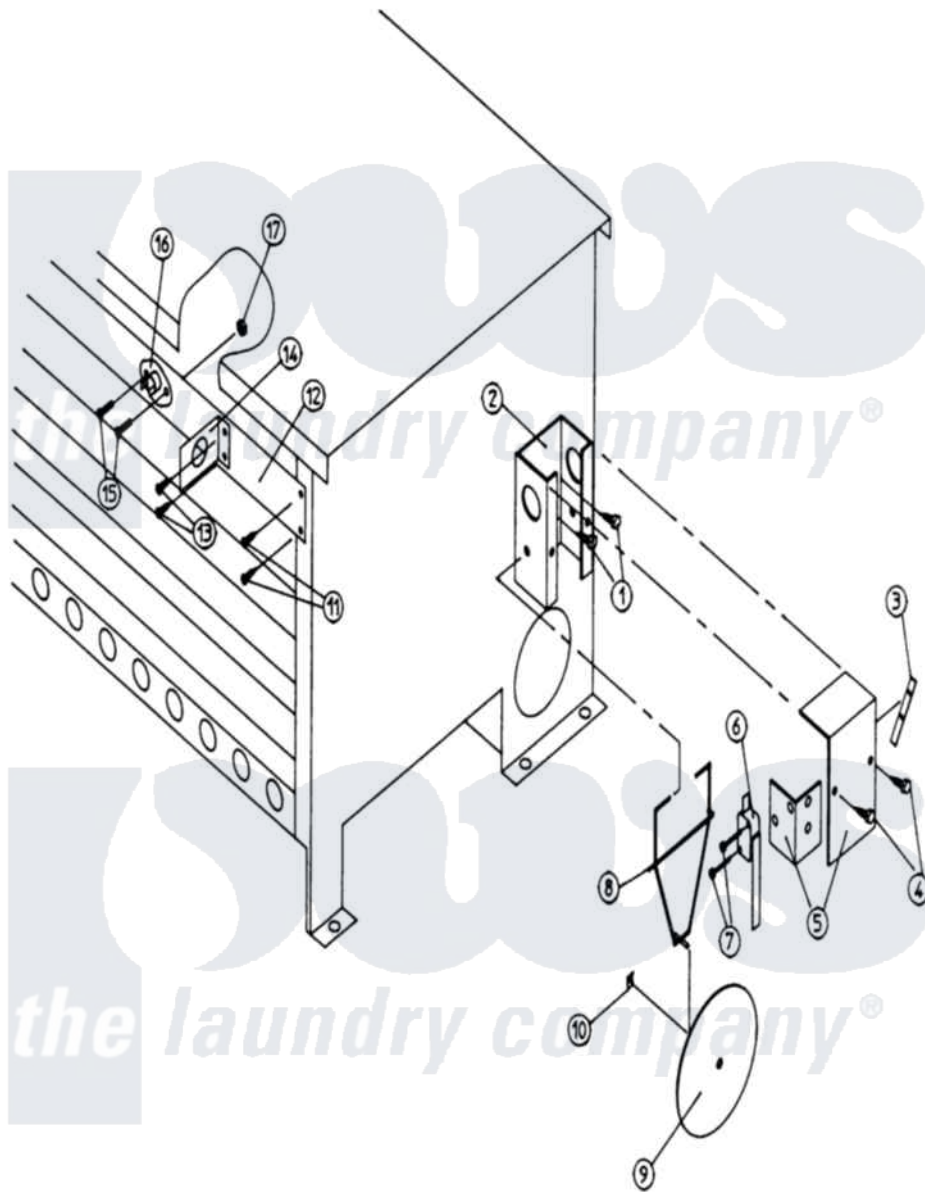

Maytag Residential Maytag DG100PN1 Dryer Parts Parts Diagram 13 - SAIL SWITCH BURNER HI-LIMIT  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
000	W10124350		Not Available	ORDER PARTS FROM AMERICAN DRYER CORP AT 508-678-9000
001	A150300	<a href="#">5307527001</a>		Switch
002	A802800	<a href="#">802800</a>		Sail Switch
"	A802801	<a href="#">802801</a>		Sail Switch
003	A154004	<a href="#">154004</a>		Tinnerman
004	A150415		Not Available	SCREW, CRIMPTITE (PH. RD.HD.) (No.10-16 X 1/2` PH. RD. HD.)
005	A802799	<a href="#">802799</a>		Sail Sw.bo
006	A122200	<a href="#">122200</a>		Sail Switch
007	A150303	<a href="#">150303</a>		4 X 3 4 P
008	A105500	<a href="#">W10146641</a>		Std Sail S
009	A319202	<a href="#">W10146866</a>		Sail Switch
010	A154002	<a href="#">154002</a>		1 8 Push O
011	A150300	<a href="#">5307527001</a>		Switch
012	A319702	<a href="#">319702</a>		100 Hi LI

013	A150300	<a href="#">5307527001</a>	Switch
014	A319703	<a href="#">319703</a>	100 120 Hi
015	A150001	<a href="#">150001</a>	6-32 X 1 2
016	A130401		HI-LIMIT (ONLY) (330 DEG.)
017	A151000	<a href="#">WH12X195</a>	Switch Assembly

