


Maytag DG107 01 - CONTROL PANEL & COMPONENTS

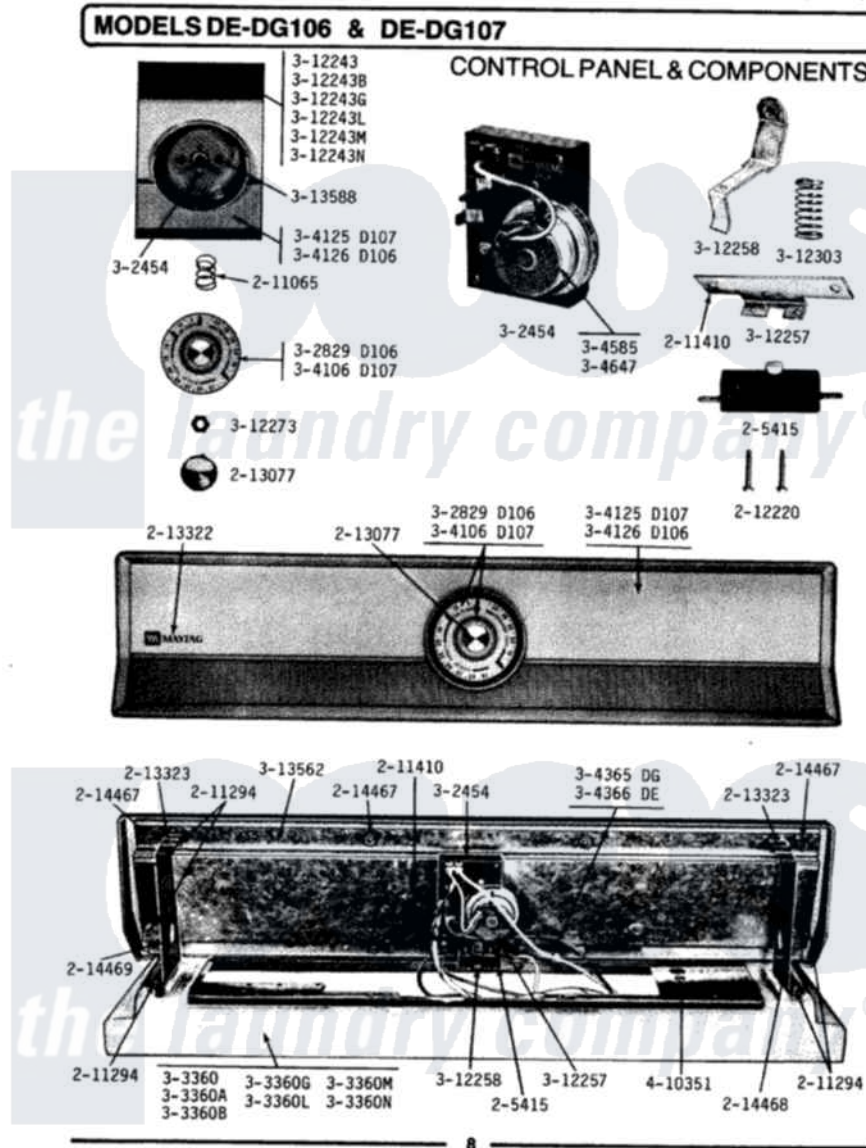

Maytag Residential Maytag DG107 Dryer Parts Parts Diagram 01 - CONTROL PANEL & COMPONENTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205415	279347		Switch-Lid
2	211065			Spring, Index Wheel
3	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	211410			Screw, HeX Head No.8 X 3/8 Inch
5	212220	213501		Screw, No.6-20 X 1-1/8 Inch
6	213077		Not Available	CAP FOR TIMER KNOB
7	213322		Not Available	MAYTAG DECAL
8	213323			Fastener, Exhaust Duct Kit
9	214467		Not Available	NUT
10	214468		Not Available	BRACKET-LEFT HAND
11	214469		Not Available	BRACKET-RIGHT HAND
12	Y302454	33302454		Timer
14	303360		Not Available	TOP COVER-WHITE
15	303360A		Not Available	TOP COVER-DARK AVOCADO

16	303360B	Not Available	TOP COVER-DARK COPPERTONE
17	303360G	Not Available	TOP COVER-DARK GOLD
18	303360L	Not Available	TOP COVER-ALMOND
19	303360M	Not Available	TOP COVER-HARVEST WHEAT
20	303360N	Not Available	TOP COVER-FRESH AVOCADO
21	Y304106	Not Available	TIMER DIAL & KNOB, SUN-GLOW
22	304125	Not Available	CONTROL PANEL, SUN-GLOW
24	304365	Not Available	MAIN WIRE HARNESS
25	304366	Not Available	MAIN WIRE HARNESS
26	Y304585		Timer Motor RPR For 305214 Timer Only
27	304647	Not Available	TIMER MOTOR
28	312243	Not Available	CONTROL COVER-WHITE
29	312243B	Not Available	CONTROL COVER-DK COPPERTONE
30	312243G	Not Available	CONTROL COVER-DARK GOLD
31	312243L	Not Available	CONTROL COVER-ALMOND
32	312243M	Not Available	CONTROL COVER-HARVEST WHEAT
33	312243N	Not Available	CONTROL COVER-FRESH AVOCADO
34	312257	Not Available	BRACKET
35	312258		Actuator
36	312273		Nut, Control Knob
37	312303		Spring
38	313562	Not Available	BACK-UP PLATE
39	Y313588	488234	Screw 8-32 X 1/4

