


Maytag DG110 01 - CONTROL PANEL

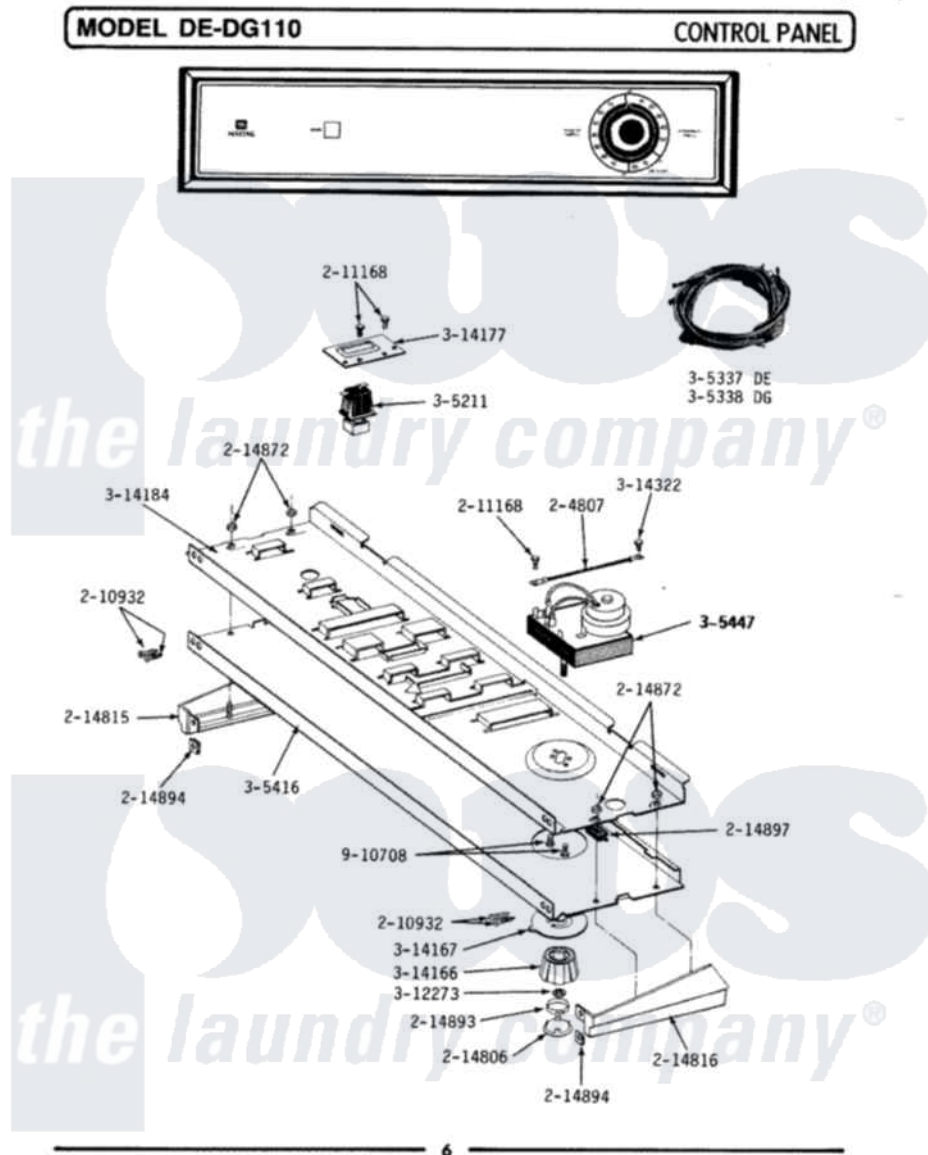

Maytag Residential Maytag DG110 Dryer Parts Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	204807			Ground Wire, Supp. Plte To Top Cover
2	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
3	211168	W10139210		Screw, 8-18 X 5/16
4	214806		Not Available	CAP FOR TIMER KNOB
5	214815			End Cap F/Control Panel-LH
6	214816			End Cap F/Control Panel-RH
7	214872			Palnut, End Cap Note: Nut, Lamp Holder
8	214893		Not Available	DETENT RING F/TIMER KNOB CA
9	214894			Fastener, End Cap
10	214897			Pad, Control Panel
11	305211			Push To Start Switch
12	305447		Not Available	TIMER
13	305337			Main Wire Harness
14	305338			Main Wire Harness

15	305416	Not Available	CONTROL PANEL
16	312273		Nut, Control Knob
17	Y314166		Knob For Timer
18	314167	Not Available	TIMER DIAL INDICATOR
19	314177	Not Available	BRACKET FOR START SWITCH
20	314184		Back Up Plate
21	Y314322	211251	Screw, Transformer
22	910708	488234	Screw 8-32 X 1/4

