


Maytag DG110 02 - FRONT PANEL & DOOR ASSEMBLY

MODELS DE-DG110-210-410-510-610-710-810

**FRONT PANEL & DOOR ASSEMBLY
ORIGINAL & SERIES 01**

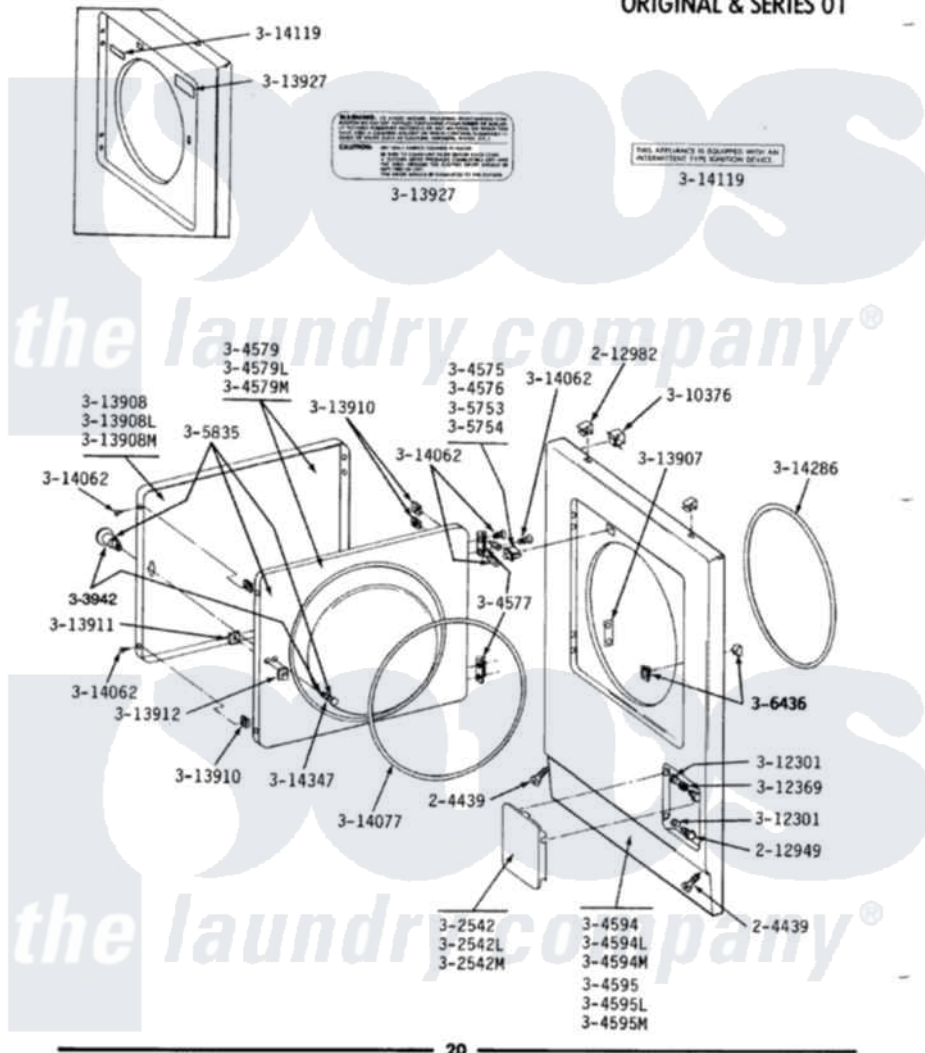

Maytag Residential Maytag DG110 Dryer Parts Parts Diagram 02 - FRONT PANEL & DOOR ASSEMBLY
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	204439			Screw And Fstner Assembly
2	212949	22001866		Screw, Relay
3	212982	22001650		Fastener, Spring
4	302542		Not Available	PART NOT USED. (DG ONLY)
7	Y304575	W10169313		Switch-Dor
8	Y304576	W10169313		Switch-Dor
9	Y304577	33001230		Hinge, Door
10	306436			Door Latch Kit-W
11	Y304579			DOOR (WHT)
14	304594			Front Panel-White
20	Y305753	W10169313		Switch-Dor
21	Y305754	W10169313		Switch-Dor
22	305835		Not Available	INNER DOOR WITH KNOB & SCRE
23	303942		Not Available	KNOB AND SCREW
24	Y310376			Clip, Door Switch Harness

25	312301	Not Available	BUSHING FOR ACCESS STUD
26	312369		Sleeve, Access Panel Stud Part Not Used
27	Y313907		Fastener, Twin
28	Y313908		DOOR PANEL-WHITE
31	Y313910		Clip, Door Liner To Outer Panel
32	Y313911		Door Strike Retainer
33	Y313912	306436	Door Latch Kit-W
34	Y313927		INSTRUCTION LABEL
35	Y314062		Screw, Door Hinge And Panel
36	314077		Door Seal
37	314119	Not Available	GAS IGNITION LABEL
38	314286		Seal For Front Panel
39	314347	400021-1	Screw

