



[Maytag Residential Maytag DG18CA Dryer Parts](#) Parts Diagram 03 - REAR VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y052740	62739		Nut, Lock
002	210385			Lock Nut For Adjustable Leg
003	210684			Foot, Adjustable Leg
004	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
005	211881			Grommet, Cord Part Not Used-Gas Models Only
006	NLA		Not Available	CONTROL COVER-WHITE
007	NLA		Not Available	CONTROL COVER-HARVEST WHEAT
008	302521		Not Available	CORD, POWER PART NOT USED-GAS MODELS ONLY
009	Y302699	22003428		Leg, Adjustable
010	NLA		Not Available	CONTROL CENTER-WHITE
011	NLA		Not Available	CABINET-WHITE
012	NLA		Not Available	CABINET-ALMOND
013	NLA		Not Available	CABINET-HARVEST WHEAT
014	Y303361		Not Available	BASE ASSY. (UPPER &

014	Y303381	Not Available	LOWER)
015	Y303383	33001735	Pipe And Bracket Assembly Series 18 Not Needed Use Vavle
016	NLA	Not Available	TOP COVER-WHITE
017	NLA	Not Available	TOP COVER-ALMOND
018	NLA	Not Available	TOP COVER-HARVEST WHEAT
019	Y303442		EXHAUST DUCT ASSEMBLY
020	NLA	Not Available	SCREW & WASHER ASSY.
021	NLA	Not Available	CONTROL COVER-WHITE
022	NLA	Not Available	CONTROL COVER-ALMOND
023	NLA	Not Available	CONTROL COVER-HARVEST WHEAT
024	Y305086		Adjustable Leg And Nut
025	310557		Washer
026	Y310632	1163839	Screw
027	NLA	Not Available	BACK FOR CONTROL PANEL
028	Y312905	Not Available	COVER, TERMINAL
029	Y312951	Not Available	ACCESS COVER, BACK
030	Y313559		Screw
031	Y313561		Screw---NA
032	Y314137		Foot, Rubber

