


# Maytag DG18CA 05 - CONTROL PANEL-REAR VIEW (SERIES 03)

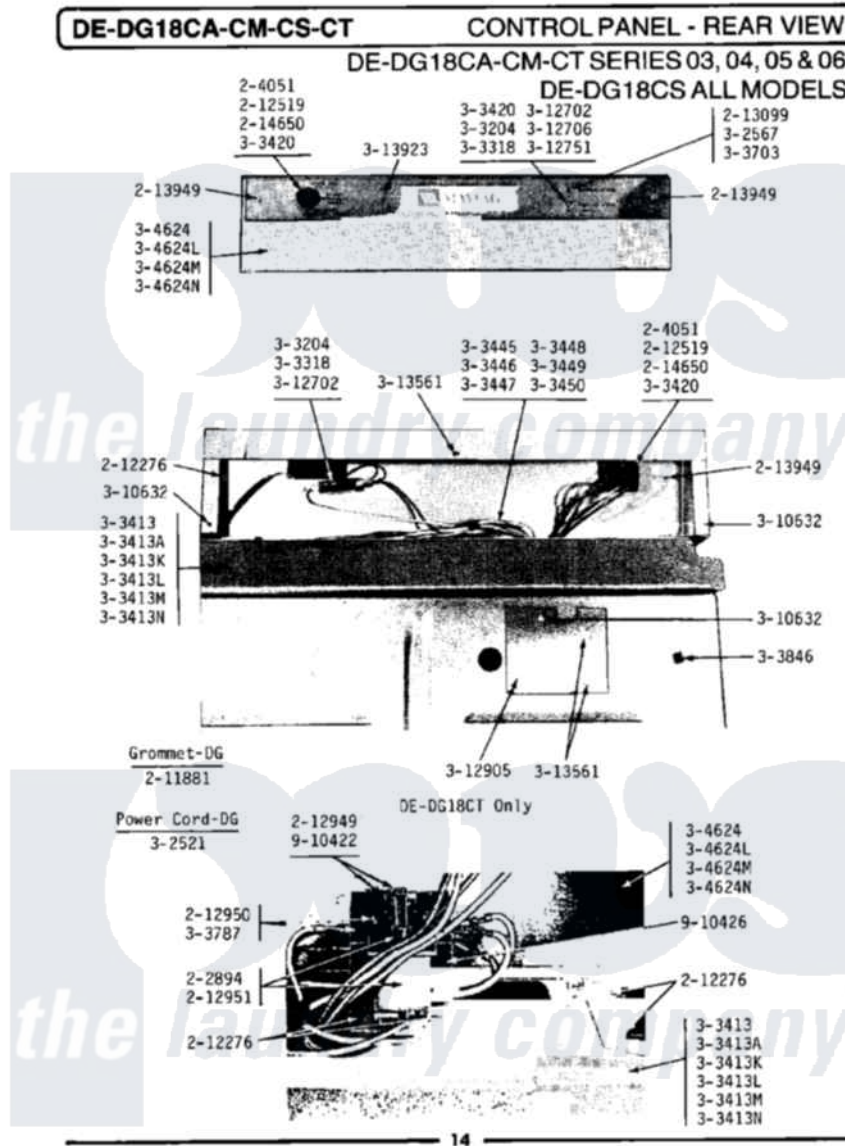

Maytag Residential Maytag DG18CA Dryer Parts Diagram 05 - CONTROL PANEL-REAR VIEW (SERIES 03)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204051	<a href="#">22204051</a>		Knob
002	<a href="#">211881</a>			Grommet, Cord Part Not Used-Gas Models Only
003	212276	<a href="#">W10116760</a>		Screw
004	212519	<a href="#">488234</a>		Screw 8-32 X 1/4
005	212949	<a href="#">22001866</a>		Screw, Relay
006	212950	<a href="#">M0227520</a>		Screw-Tc No.6-32 X 13/16", Preform SwiTch
007	<a href="#">212951</a>			Screw, No.6-32 X 1/4 Inch
008	<a href="#">213099</a>			Lens For Control Panel
009	<a href="#">213949</a>			Screw, No.8-18 X 5/16 Inch
010	<a href="#">214650</a>			Screw For 2-4051 Knob
011	302521		Not Available	CORD, POWER PART NOT USED-GAS MODELS ONLY
012	<a href="#">Y303204</a>			Start Switch With Nuts
013	NLA		Not Available	TOP COVER-WHITE
014	NLA		Not Available	TOP COVER-ALMOND

015	NLA		Not Available	TOP COVER-HARVEST WHEAT
016	Y303420		Not Available	SELECTOR SWITCH
017	NLA		Not Available	MAIN WIRE HARNESS
018	<a href="#">Y303703</a>			Pilot Light
019	NLA		Not Available	SCREW & WASHER ASSY.
020	NLA		Not Available	CONTROL COVER-WHITE
021	NLA		Not Available	CONTROL COVER-ALMOND
022	NLA		Not Available	CONTROL COVER-HARVEST WHEAT
023	Y310632	<a href="#">1163839</a>		Screw
024	Y311423	<a href="#">489483</a>		Screw 10-32 X 1/2
025	NLA		Not Available	BACK FOR CONTROL PANEL
026	<a href="#">Y312702</a>			Knurled Nut, Start Switch
027	Y312706	<a href="#">422617</a>		Nut
028	<a href="#">312751</a>			Lockwasher, Start Switch
029	Y312905		Not Available	COVER, TERMINAL
030	<a href="#">Y313561</a>			Screw---NA
031	NLA		Not Available	CONTROL PANEL

