


Maytag DG18CA 09 - TUMBLER FRONT, LINT SCREEN & RETAINER

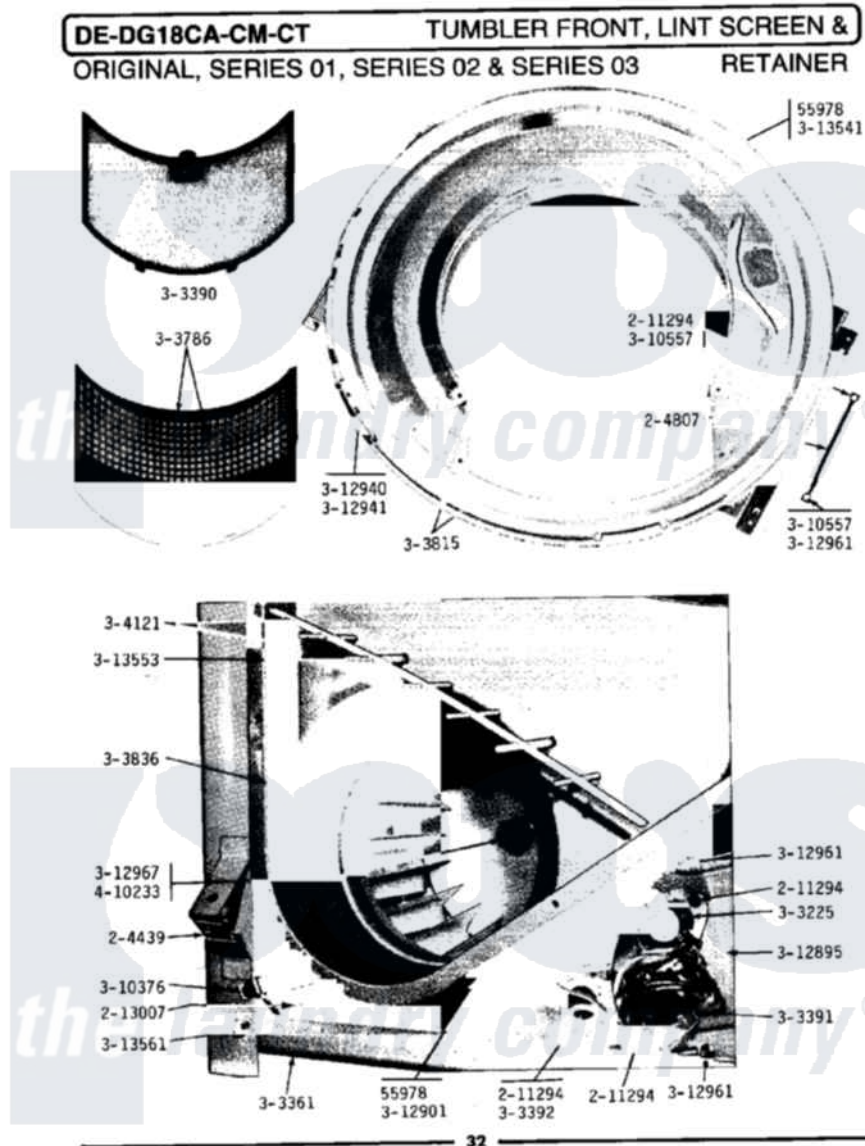

Maytag [Residential Maytag DG18CA Dryer Parts](#) Parts Diagram 09 - TUMBLER FRONT, LINT SCREEN & RETAINER
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y055978			Rubber Adhesive, 2 Oz Tube
002	204439			Screw And Fstner Assembly
003	204807			Ground Wire, Supp. Plte To Top Cover
004	210720			Rivet, Bearing To Tumbler Frmt
005	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
006	213007			Xfor Cabinet See Cabinet, Back
007	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
008	Y303390		Not Available	LINT SCREEN
009	Y303391	33303391		Thermostat, Cycling
010	303392			Thermostat, Cycling
011	Y303786		Not Available	LINT SCREEN WITH RETAINER
012	Y303815	33001231		Front- Tumbler
013	Y303836			Blower Wheel Assembly And Clamp

014	NLA		Not Available	OUTLET GRID AND DUCT
015	Y304810		Not Available	OUTLET DUCT ASSEMBLY---S
016	Y310376			Clip, Door Switch Harness
017	310557			Washer
018	Y312895		Not Available	COVER FOR BLOWER---NA
019	Y312901			Seal, Housing Cover
020	312940	306508		Tumbler Bearing Kit ---W
021	312941	306508		Tumbler Bearing Kit ---W
022	Y312961	W10116751		Screw
023	Y312964		Not Available	OUTLET DUCT - OUTER HALF
024	312967			Clamp, Blower Housing
025	Y313541	33313541		Seal- Tumbler
026	NLA		Not Available	GRID FOR OUTLET DUCT
027	Y313561			Screw---NA
028	Y313795			Guide For Lint Screen
029	Y313796			Lint Seal
030	410233	9703438		Ring-Retrnr

