


Maytag DG18CA 10 - LINT SCREEN, TUMBLER (FRONT & BACK)

DE-DG18CA-CM-CS-CT LINT SCREEN, TUMBLER, TUMBLER FRONT & TUMBLER BACK

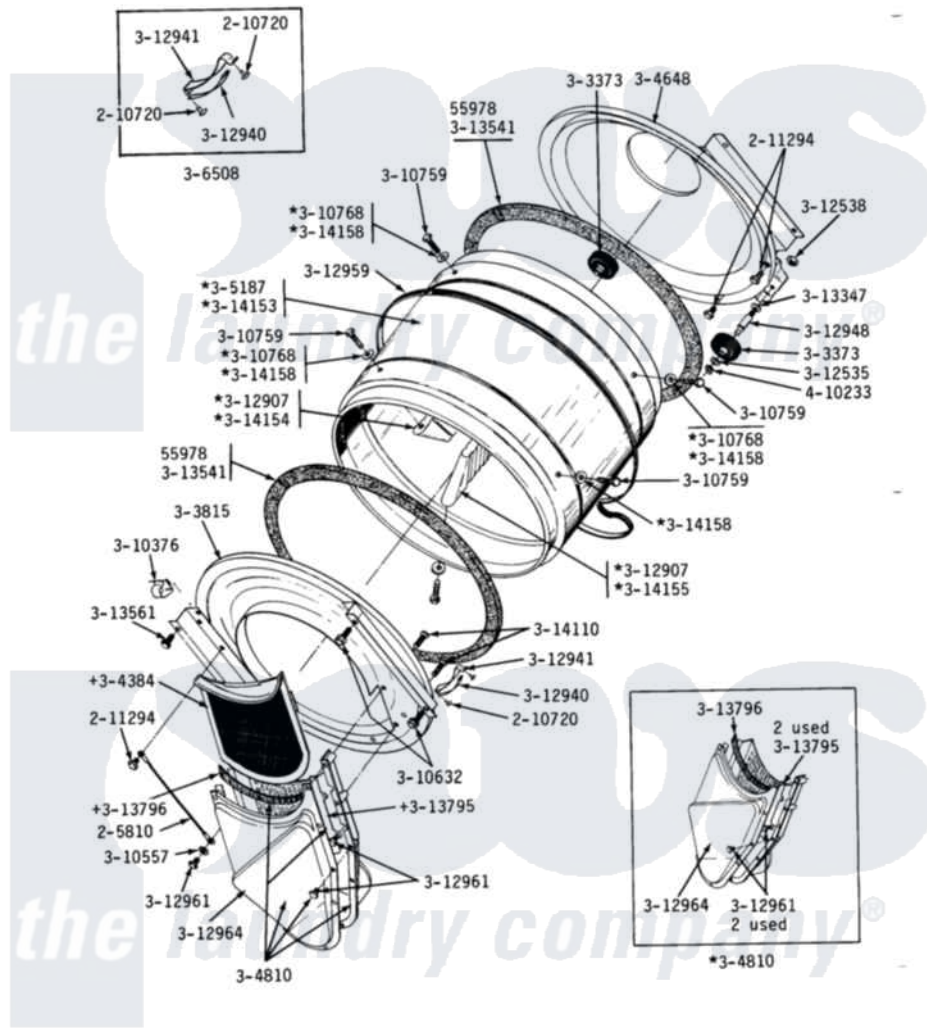

34

Maytag [Residential Maytag DG18CA Dryer Parts](#) Parts Diagram 10 - LINT SCREEN, TUMBLER (FRONT & BACK)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y053241			Set Screw, Motor Pulley
002	Y055978			Rubber Adhesive, 2 Oz Tube
003	205810			Wire, Ground
004	210720			Rivet, Bearing To Tumbler Frnt
005	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
006	Y303373	12001541		Drum Roller/Washer Assembly--W
007	Y303815	33001231		Front- Tumbler
008	Y304244			Motor Pulley With Set Screw
009	Y304384	33001003		Screen, Lint
010	Y304648	33001106		Back, Tumbler
011	Y304810		Not Available	OUTLET DUCT ASSEMBLY---S
012	Y305185	6-3051850		Pulley- MO
013	305187		Not Available	TUMBLER W/BAFFLES
014	306508			Tumbler Bearing Kit ---W

015	Y310376		Clip, Door Switch Harness
016	310557		Washer
017	Y310632	1163839	Screw
018	Y310759		Screw, Tumbler Baffles
019	NLA	Not Available	WASHER
020	312535		Washer, Vault Mounting Brk.
021	312538	33001443	Nut, Hex
022	Y312907		Tumbler Baffle
023	312940	306508	Tumbler Bearing Kit ---W
024	312941	306508	Tumbler Bearing Kit ---W
025	Y312948	6-3129480	Shaft- Tumbler
026	Y312959		Poly "V" Belt For Tumbler
027	Y312961	W10116751	Screw
028	Y312964	Not Available	OUTLET DUCT - OUTER HALF
029	Y313347	312535	Washer, Vault Mounting Brk.
030	Y313541	33313541	Seal- Tumbler
031	Y313561		Screw---NA
032	Y313795		Guide For Lint Screen
033	Y313796		Lint Seal
034	Y314110	33002917	Screw, No.10-16
035	Y314153	Not Available	TUMBLER No.
036	NLA	Not Available	TUMBLER BAFFLE - SHORT
037	314155	33001004	Baffle, Tall
038	314158		Washer, Baffle To Tumbler
039	410233	9703438	Ring-Retrn

the laundry company[®]

the laundry company[®]