



[Maytag Residential Maytag DG18CS Dryer Parts](#) Parts Diagram 02 - REAR VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y052740	62739		Nut, Lock
002	210385			Lock Nut For Adjustable Leg
003	210684			Foot, Adjustable Leg
004	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
005	211881			Grommet, Cord Part Not Used-Gas Models Only
006	302521		Not Available	CORD, POWER PART NOT USED-GAS MODELS ONLY
007	302521		Not Available	CORD, POWER PART NOT USED-GAS MODELS ONLY
008	Y302699	22003428		Leg, Adjustable
009	NLA		Not Available	CABINET-WHITE
010	NLA		Not Available	CABINET-ALMOND
011	NLA		Not Available	CABINET-HARVEST WHEAT
012	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
013	Y303383	33001735		Pipe And Bracket Assembly Series 18 Not Needed Use

014	NLA	Not Available	Valve	TOP COVER-WHITE
015	NLA	Not Available		TOP COVER-ALMOND
016	NLA	Not Available		TOP COVER-HARVEST WHEAT
017	Y303442			EXHAUST DUCT ASSEMBLY
018	NLA	Not Available		SCREW & WASHER ASSY.
019	NLA	Not Available		CONTROL COVER-WHITE
020	NLA	Not Available		CONTROL COVER-ALMOND
021	NLA	Not Available		CONTROL COVER-HARVEST WHEAT
022	NLA	Not Available		OUTER CASE-WHITE
023	NLA	Not Available		OUTER CASE-ALMOND
024	NLA	Not Available		OUTER CASE-HARVEST WHEAT----NA
025	Y305086			Adjustable Leg And Nut
026	Y310632	1163839		Screw
027	NLA	Not Available		BACK FOR CONTROL PANEL
028	Y312905	Not Available		COVER, TERMINAL
029	Y312951	Not Available		ACCESS COVER, BACK
030	Y313559			Screw
031	Y313561			Screw----NA
032	Y314137			Foot, Rubber

