


Maytag DG19CT 02 - CABINET-REAR

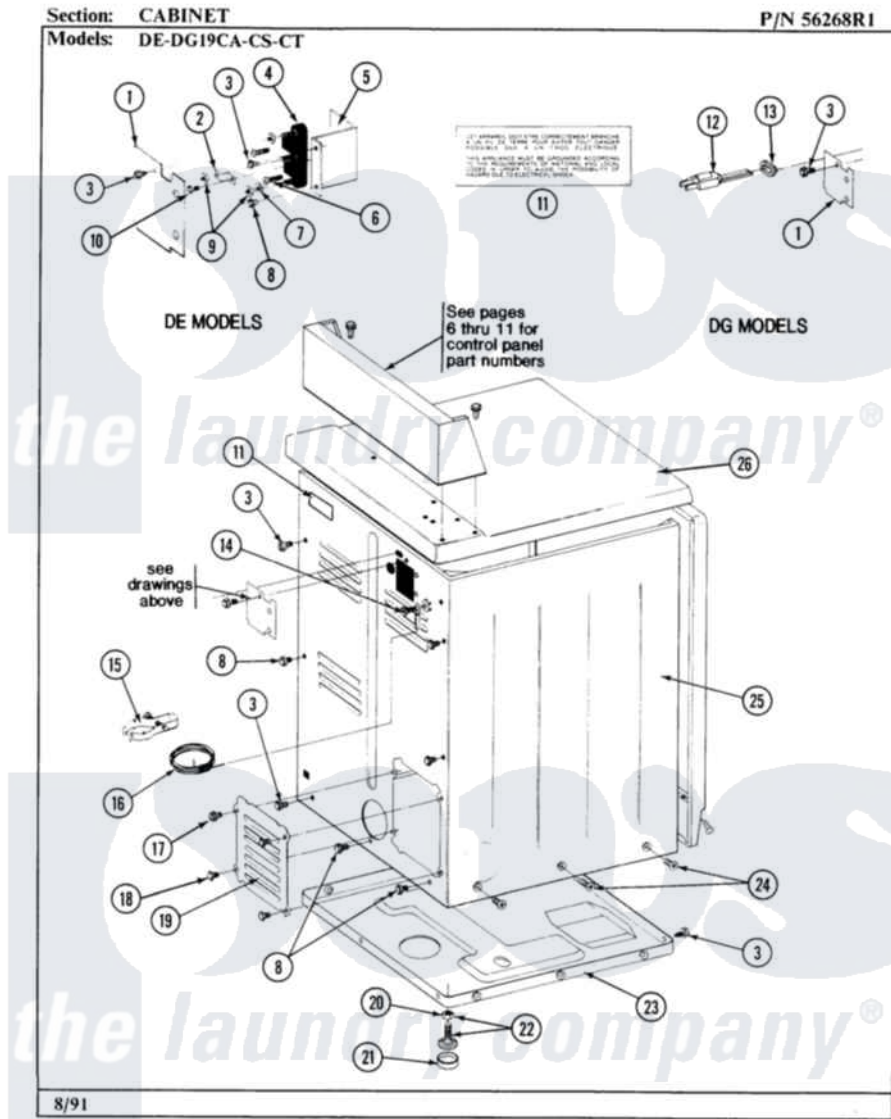

4

Maytag Residential Maytag DG19CT Dryer Parts Parts Diagram 02 - CABINET-REAR
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y312905		Not Available	COVER, TERMINAL
002	Y313561			Screw---NA
003	Y310632	1163839		Screw
004	214519			LABEL, ELECTRICAL INSTR. PART NOT USED-GAS MODELS ONLY
005	302521		Not Available	CORD, POWER PART NOT USED-GAS MODELS ONLY
006	211881			Grommet, Cord Part Not Used-Gas Models Only
007	NLA		Not Available	SCREW & WASHER ASSY.
008	301548			Clamp, Ground Wire
009	311155			Ground Wire And Clamp
010	Y313559			Screw
011	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
012	Y312951		Not Available	ACCESS COVER, BACK
013	Y052740	62739		Nut, Lock

014	Y314137		Foot, Rubber
015	Y305086		Adjustable Leg And Nut
016	Y303361	Not Available	BASE ASSY. (UPPER & LOWER)
017	213007		Xfor Cabinet See Cabinet, Back
018	NLA	Not Available	CABINET (WHT)
019	NLA	Not Available	(ALM)
020	NLA	Not Available	(H. WHEAT)
021	Y305191	Not Available	TOP COVER-WHITE
022	NLA	Not Available	(ALM)
023	NLA	Not Available	(H. WHEAT)

