


# Maytag DG210 05 - FRONT VIEW

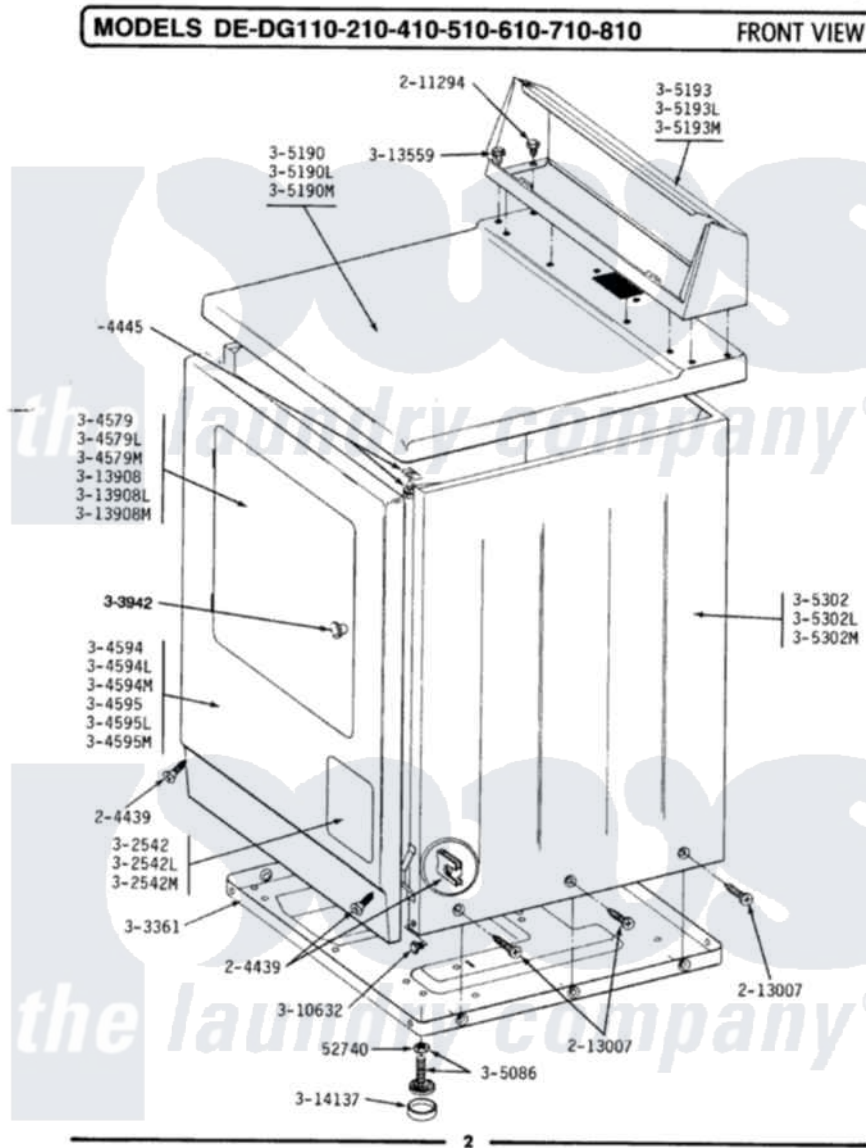

Maytag [Residential Maytag DG210 Dryer Parts](#) Parts Diagram 05 - FRONT VIEW  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y052740	<a href="#">62739</a>		Nut, Lock
2	<a href="#">204439</a>			Screw And Fstner Assembly
3	<a href="#">204445</a>			Screw And Fastener Assembly
4	211294	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
5	<a href="#">213007</a>			Xfor Cabinet See Cabinet, Back
6	302542		Not Available	PART NOT USED. (DG ONLY)
9	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
10	Y304579			DOOR (WHT)
13	<a href="#">304594</a>			Front Panel-White
16	304595	<a href="#">3369903</a>		Dishrack
17	304595L		Not Available	FRONT PANEL-ALMOND
18	304595M		Not Available	FRONT PANEL-HARVEST WHEAT
19	<a href="#">Y305086</a>			Adjustable Leg And Nut
20	Y305190	<a href="#">307104</a>		Top Cover Assembly

23	<a href="#">Y305193</a>		Console
26	305302	Not Available	CABINET-WHITE
29	303942	Not Available	KNOB AND SCREW
30	Y310632	<a href="#">1163839</a>	Screw
31	<a href="#">Y313559</a>		Screw
32	Y313908		DOOR PANEL-WHITE
35	<a href="#">Y314137</a>		Foot, Rubber

