


Maytag DG21CM 01 - FRONT VIEW

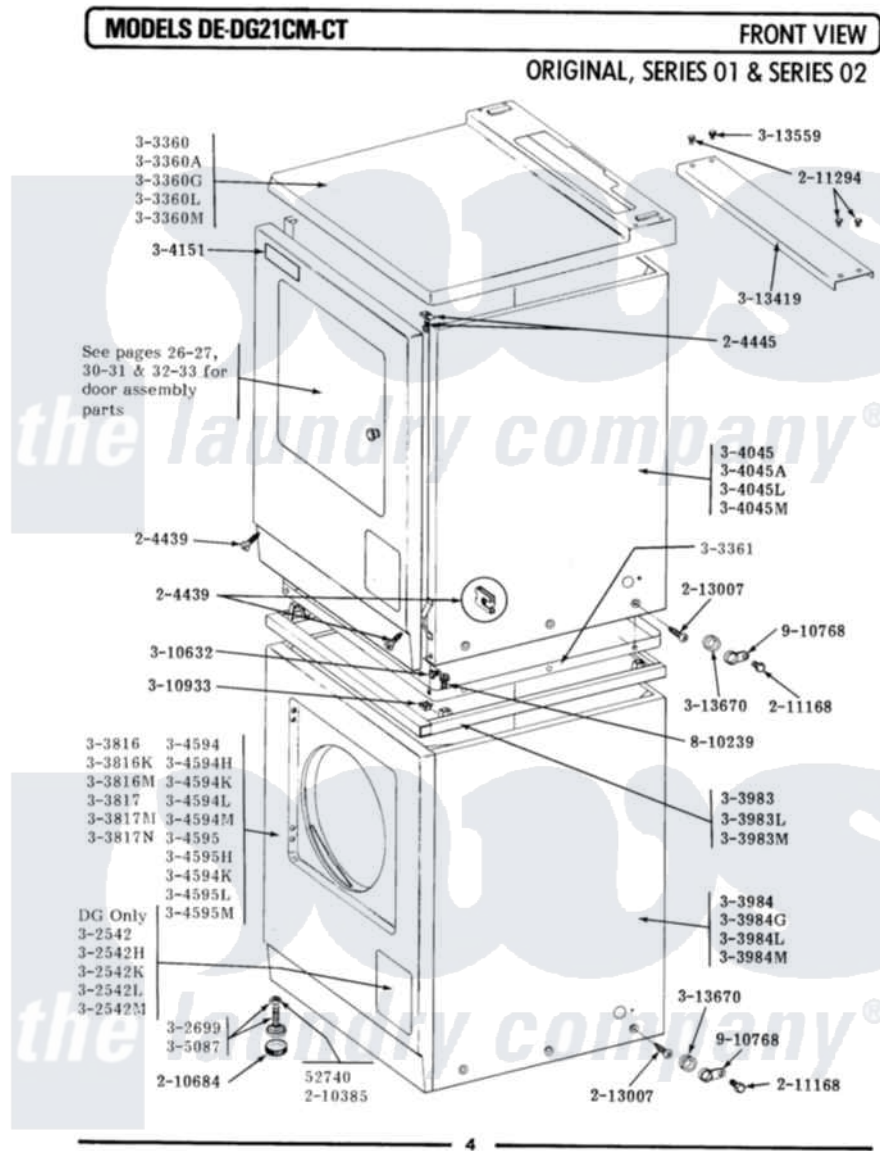

Maytag Residential Maytag DG21CM Dryer Parts Parts Diagram 01 - FRONT VIEW

Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|------------------------|---------------------------|---------------|---|
| 001 | Y052740 | 62739 | | Nut, Lock |
| 002 | 204439 | | | Screw And Fstner Assembly |
| 003 | 204445 | | | Screw And Fastener Assembly |
| 004 | 210385 | | | Lock Nut For Adjustable Leg |
| 005 | 210684 | | | Foot, Adjustable Leg |
| 006 | 211168 | W10139210 | | Screw, 8-18 X 5/16 |
| 007 | 211294 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 008 | 213007 | | | Xfor Cabinet See Cabinet, Back |
| 009 | NLA | | Not Available | ACCESS DOOR (WHITE) |
| 010 | Y302699 | 22003428 | | Leg, Adjustable |
| 011 | NLA | | Not Available | TOP COVER-WHITE |
| 012 | Y303361 | | Not Available | BASE ASSY. (UPPER & LOWER) |
| 013 | NLA | | Not Available | FRONT PANEL-WHITE |
| 014 | NLA | | Not Available | SPACER ASSM-WHITE |

| | | | | |
|-----|--------------------------|--------------------------|---------------|-------------------------------|
| 015 | NLA | | Not Available | CABINET-WHITE |
| 016 | 304045 | | Not Available | CABINET-WHITE |
| 017 | NLA | | Not Available | NAME PLATE ON CONTROL PANEL |
| 018 | NLA | | Not Available | FRONT PANEL-WHITE |
| 019 | Y305087 | 22003544 | | Adjustable Leg W/Foot And Nut |
| 020 | Y310632 | 1163839 | | Screw |
| 021 | 310933 | 33002194 | | Nut, Speed |
| 022 | NLA | | Not Available | COVER PLATE FOR TOP COVER |
| 023 | Y313559 | | | Screw |
| 024 | 33001303 | | | Grommet, Plate Hole |
| 025 | NLA | | Not Available | SCREW |
| 026 | 910768 | M0280301 | | Tie Electr |

