


Maytag DG21CT 09 - FRONT PANEL & DOOR ASSY (SERIES 02)

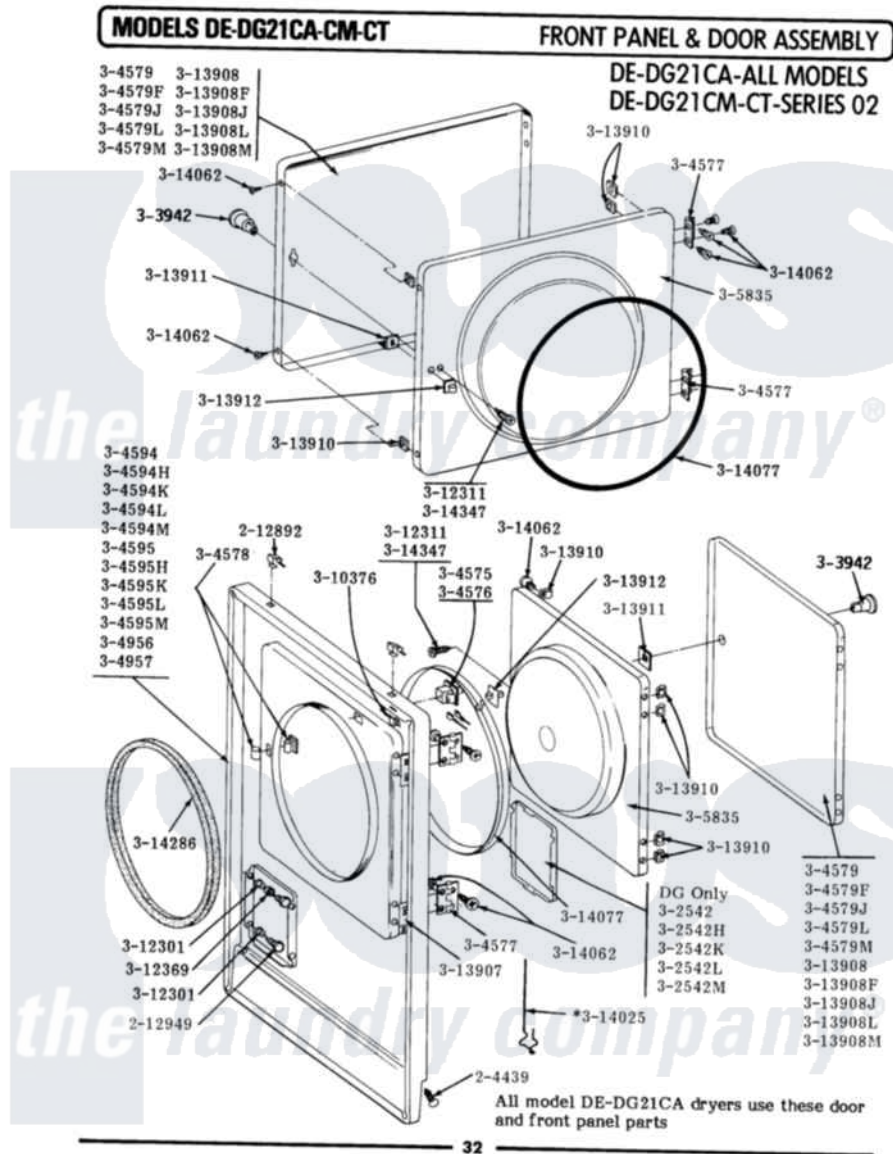

Maytag Residential Maytag DG21CT Dryer Parts Parts Diagram 09 - FRONT PANEL & DOOR ASSY (SERIES 02)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204439			Screw And Fstner Assembly
002	212949	22001866		Screw, Relay
003	212982	22001650		Fastener, Spring
004	NLA		Not Available	ACCESS DOOR (WHITE)
005	Y304576	W10169313		Switch-Dor
006	Y304577	33001230		Hinge, Door
007	Y304578	LA-1003		Door Catch Kit
008	Y304579			DOOR (WHT)
009	NLA		Not Available	FRONT PANEL-WHITE
010	NLA		Not Available	FRONT PANEL - DG MODELS
011	NLA		Not Available	INNER DOOR WITH KNOB & SCRE
012	NLA		Not Available	KNOB AND SCREW
013	Y310376			Clip, Door Switch Harness
014	NLA		Not Available	BUSHING FOR ACCESS STUD

015	NLA	Not Available	SCREW---NA
016	312369		Sleeve, Access Panel Stud Part Not Used
017	Y313340		LABEL, LINT SCREEN INSTRUCTION
018	Y313907		Fastener, Twin
019	Y313908		DOOR PANEL-WHITE
020	Y313910		Clip, Door Liner To Outer Panel
021	Y313911		Door Strike Retainer
022	Y313912	306436	Door Latch Kit--W
023	Y313927		INSTRUCTION LABEL
024	Y314025		Latch For Access Door
025	Y314062		Screw, Door Hinge And Panel
026	314077		Door Seal
027	NLA	Not Available	GAS IGNITION LABEL
028	314286		Seal For Front Panel
029	NLA	Not Available	SCREW FOR DOOR KNOB--- NA

