

016	303963	Not Available	LIGHT, INDICATOR
017	Y303981		Ground Wire For Latch
018	305393		Solenoid For Relay Assembly
019	305534	Not Available	VAULT ASSEMBLY
020	NLA	Not Available	CONTROL SHROUD (WHT)
021	NLA	Not Available	OUTER CASE (WHT)
022	Y310632	1163839	Screw
023	Y312702		Knurled Nut, Start Switch
024	Y312706	422617	Nut
025	312751		Lockwasher, Start Switch
026	NLA	Not Available	INSULATOR
027	Y313424		Screw, Vault Panel
028	Y313427	206637	Lock Kit
029	313428	Not Available	PLATE FOR LATCH
030	Y313559		Screw
031	Y313588	488234	Screw 8-32 X 1/4
032	Y313671	33001303	Grommet, Plate Hole
033	Y314261		Switch And Relay Bracket
034	314270	Not Available	CONTROL PANEL
035	NLA	Not Available	SPRING LEVER, RELAY
036	NLA	Not Available	RELAY BRACKET
037	910768	M0280301	Tie Electr
038	NLA	Not Available	SPACER, ADVANCE RELAY

