


Maytag DG25CS 01 - FRONT VIEW

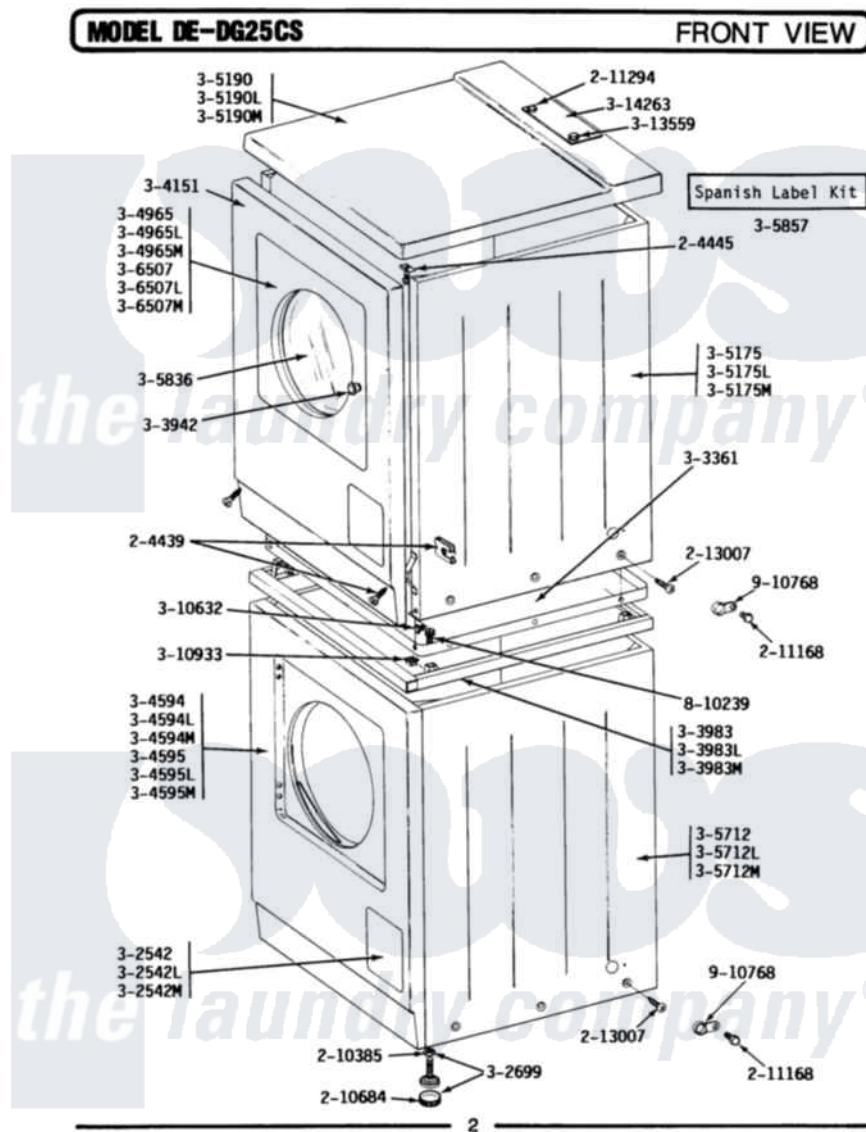

Maytag Residential Maytag DG25CS Dryer Parts Parts Diagram 01 - FRONT VIEW

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204439			Screw And Fstner Assembly
002	204445			Screw And Fastener Assembly
003	210385			Lock Nut For Adjustable Leg
004	210684			Foot, Adjustable Leg
005	211168	W10139210		Screw, 8-18 X 5/16
006	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
007	213007			Xfor Cabinet See Cabinet, Back
008	NLA		Not Available	ACCESS DOOR (WHITE)
009	Y302699	22003428		Leg, Adjustable
010	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
011	NLA		Not Available	KNOB AND SCREW
012	NLA		Not Available	SPACER ASSM-WHITE
013	NLA		Not Available	NAME PLATE ON CONTROL PANEL
014	NLA		Not Available	FRONT PANEL-WHITE

015	304965		Door Complete-White
"	NLA	Not Available	DOOR COMPLETE, ALMOND
016	NLA	Not Available	TOP COVER-ALMOND
"	Y305190	307104	Top Cover Assembly
017	NLA	Not Available	CABINET-WHITE
018	NLA	Not Available	CABINET-WHITE
019	NLA	Not Available	INNER DOOR WITH KNOB & SCRE
020	NLA	Not Available	SPANISH LABEL KIT
021	NLA	Not Available	DOOR PANEL-WHITE----NA
022	Y310632	1163839	Screw
023	310933	33002194	Nut, Speed
024	Y313559		Screw
025	NLA	Not Available	TOP COVER PLATE
026	NLA	Not Available	SCREW
027	910768	M0280301	Tie Electr

