


Maytag DG25CS 02 - REAR VIEW

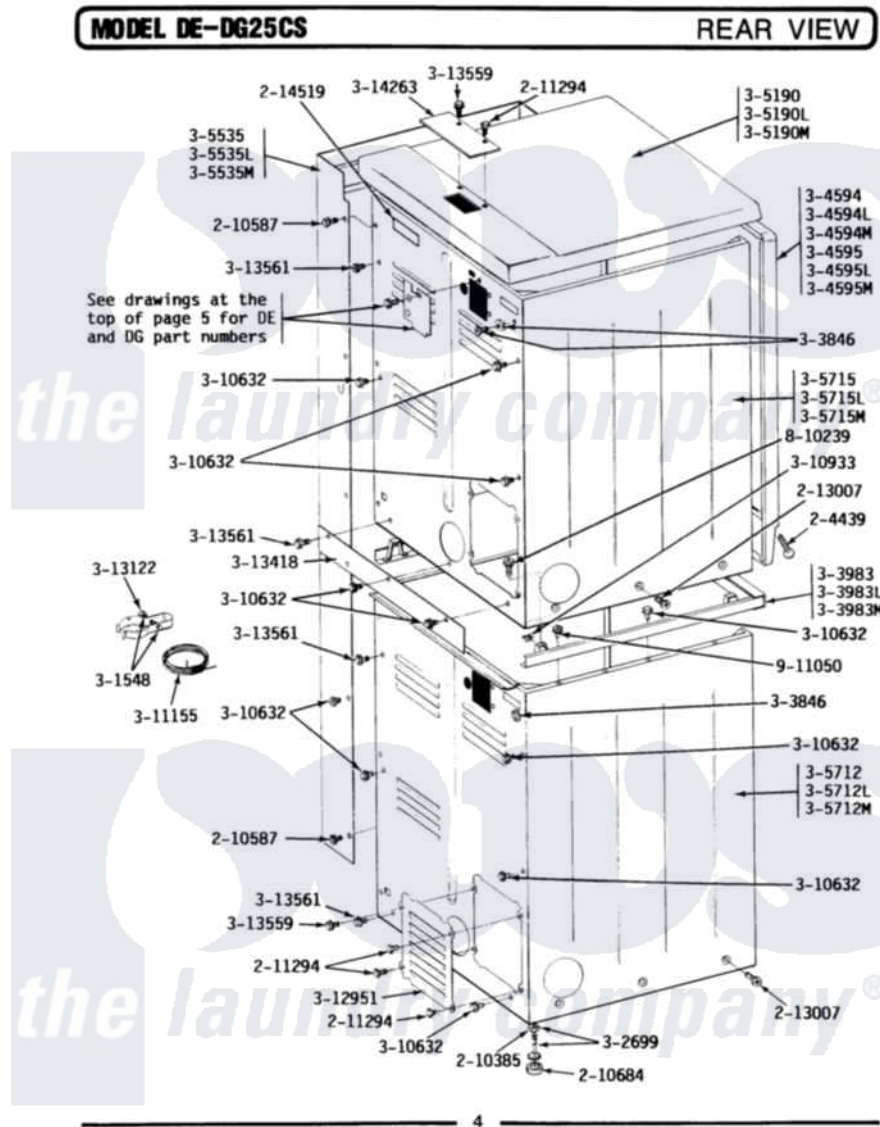

Maytag Residential Maytag DG25CS Dryer Parts Parts Diagram 02 - REAR VIEW

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204439			Screw And Fstner Assembly
002	210385			Lock Nut For Adjustable Leg
003	NLA		Not Available	SCREW
004	210684			Foot, Adjustable Leg
005	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
006	211881			Grommet, Cord Part Not Used-Gas Models Only
007	213007			Xfor Cabinet See Cabinet, Back
008	214519			LABEL, ELECTRICAL INSTR. PART NOT USED-GAS MODELS ONLY
009	301548			Clamp, Ground Wire
010	NLA		Not Available	WALL BRACKET
011	Y302699	22003428		Leg, Adjustable
012	NLA		Not Available	SCREW & WASHER ASSY.
013	NLA		Not Available	SPACER ASSM-WHITE

014	NLA		Not Available	FRONT PANEL-WHITE
015	NLA		Not Available	TOP COVER-ALMOND
"	Y305190	307104		Top Cover Assembly
016	NLA		Not Available	CONTROL SHROUD-WHITE
017	NLA		Not Available	CABINET-WHITE
018	NLA		Not Available	CABINET-WHITE
019	Y310632	1163839		Screw
020	310933	33002194		Nut, Speed
021	311155			Ground Wire And Clamp
022	Y311270			Washer, Terminal Block
023	Y311423	489483		Screw 10-32 X 1/2
024	311484	112432		Nut
025	Y312184			Strap, Grounding
026	Y312209	W10001200		Screw
027	Y312905		Not Available	COVER, TERMINAL
028	Y312951		Not Available	ACCESS COVER, BACK
029	313122			Screw - Baffle To Tumbler
030	NLA		Not Available	FILLER STRIP
031	Y313559			Screw
032	Y313561			Screw----NA
033	NLA		Not Available	TOP COVER PLATE
034	NLA		Not Available	SCREW
035	911050	4312464		Screw

