


Maytag DG25CS 04 - CONTROL CENTER SHROUD

MODEL DE-DG25CS CONTROL CENTER SHROUD

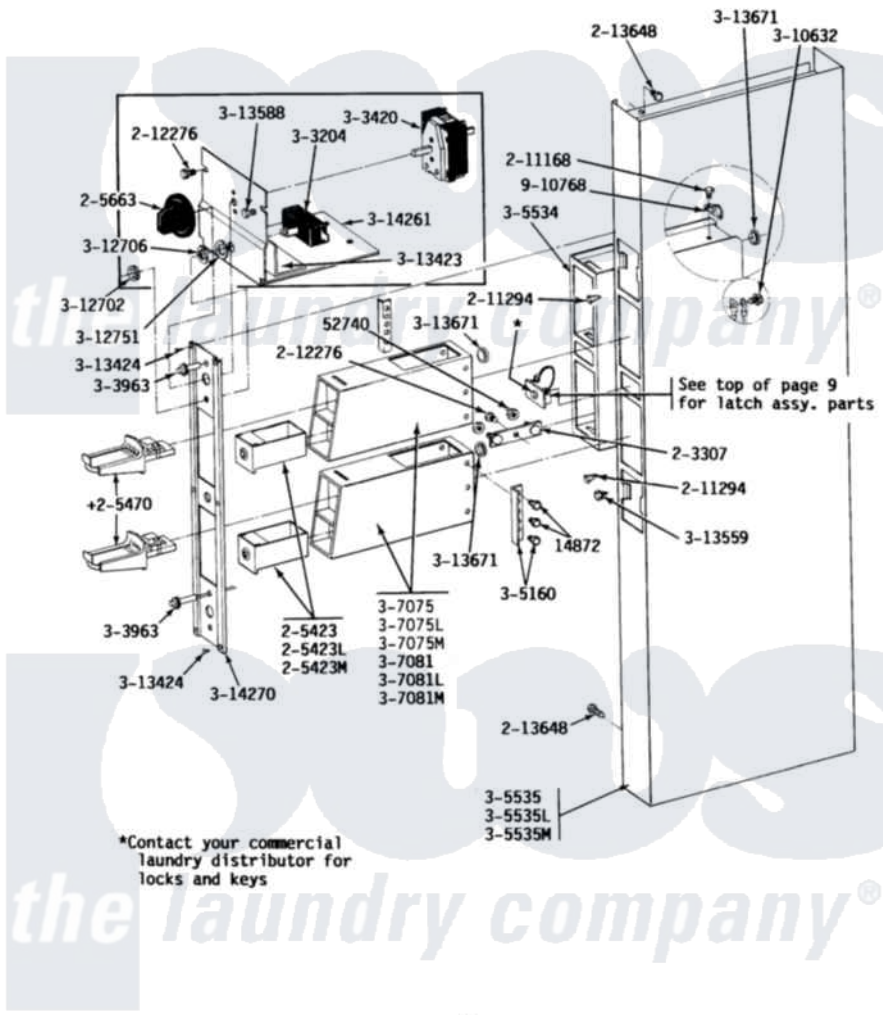

*Contact your commercial laundry distributor for locks and keys

Maytag Residential Maytag DG25CS Dryer Parts Parts Diagram 04 - CONTROL CENTER SHROUD
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y014872			Screw, Coin Meter Stop -
002	Y052740	62739		Nut, Lock
003	NLA		Not Available	MTG. STRAP---NA
004	205423	208883		Coin Box K
"	205423L	208883		Coin Box K
005	NLA		Not Available	MAYTAG COIN SLIDE
006	205663			Knob For Selector Switch
007	211168	W10139210		Screw, 8-18 X 5/16
008	211294	90767		Screw, 8A X 3/8 Hex Washer Head Tapping
009	212276	W10116760		Screw
010	212328	W10139762		Hex Nut, 3/4-27
011	NLA		Not Available	SPRING WASHER FOR LOCK
012	213648	98165		Screw
013	Y303204			Start Switch With Nuts
014	Y303420		Not Available	SELECTOR SWITCH

015	303963		Not Available	LIGHT, INDICATOR
016	Y303981			Ground Wire For Latch
017	NLA		Not Available	COIN METER STOP WITH SCREWS
018	305534		Not Available	VAULT ASSEMBLY
019	NLA		Not Available	CONTROL SHROUD-WHITE
020	NLA		Not Available	COIN METER BOX ASSEMBLY - D25C
021	Y307081			Coin Meter Weld Assembly
"	NLA		Not Available	COIN METER WELD ASSY-ALM----NA
022	Y310632	1163839		Screw
023	Y312702			Knurled Nut, Start Switch
024	Y312706	422617		Nut
025	312751			Lockwasher, Start Switch
026	NLA		Not Available	INSULATOR
027	Y313424			Screw, Vault Panel
028	Y313427	206637		Lock Kit
029	313428		Not Available	PLATE FOR LATCH
030	Y313559			Screw
031	Y313588	488234		Screw 8-32 X 1/4
032	Y313671	33001303		Grommet, Plate Hole
033	Y314261			Switch And Relay Bracket
034	314270		Not Available	CONTROL PANEL
035	910768	M0280301		Tie Electr

