


Maytag DG27CA 01 - FRONT VIEW

SECTION: FRONT VIEW
MODEL: DE-DG27CA

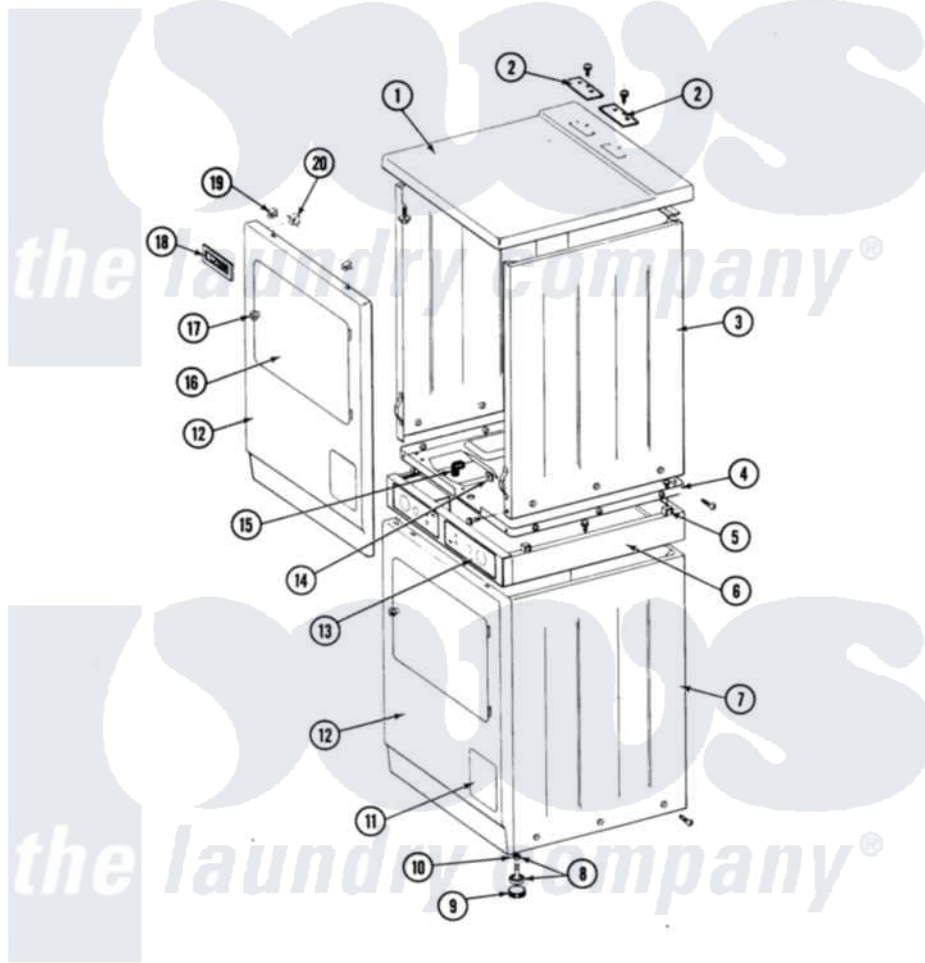

Issue Date: 10/90

4

Maytag [Residential Maytag DG27CA Dryer Parts](#) Parts Diagram 01 - FRONT VIEW
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	204445			Screw And Fastener Assembly
"	307104			Top Cover Assembly
002	NLA		Not Available	COVER PLATE
"	Y313559			Screw
003	204445			Screw And Fastener Assembly
"	NLA		Not Available	CABINET (WHT)
004	314663	214354		Screw, Top Cover To Cabnt.
"	Y307482		Not Available	BASE ASSY. (UPPER & LOWER)
005	310933	33002194		Nut, Speed
006	NLA		Not Available	SUPPORT ASSY. (WHITE)
"	Y310632	1163839		Screw
007	314663	214354		Screw, Top Cover To Cabnt.
"	NLA		Not Available	CABINET, LOWER (WHITE)
008	Y302699	22003428		Leg, Adjustable
009	210684			Foot, Adjustable Leg
010	210385			Lock Nut For Adjustable Leg

011	NLA		Not Available	ACCESS DOOR (WHITE)
012	NLA		Not Available	FRONT PANEL-WHITE
013	314664	212277		Screw, No.8 X 1/2 Inch
"	NLA		Not Available	CONTROL PANEL
014	NLA		Not Available	RETAINER FOR FRONT PANEL
015	314522			Grommet, Strain Relief
016	308062			Door Assembly Complete W/O Hinges
017	NLA		Not Available	KNOB AND SCREW
018	NLA		Not Available	NAME PLATE
019	212982	22001650		Fastener, Spring
020	Y310376			Clip, Door Switch Harness

the laundry company[®]

the laundry company[®]

the laundry company[®]