


Maytag DG27CT 08 - FRONT VIEW

SECTION: FRONT VIEW
MODEL: DE-DG27CS-CT

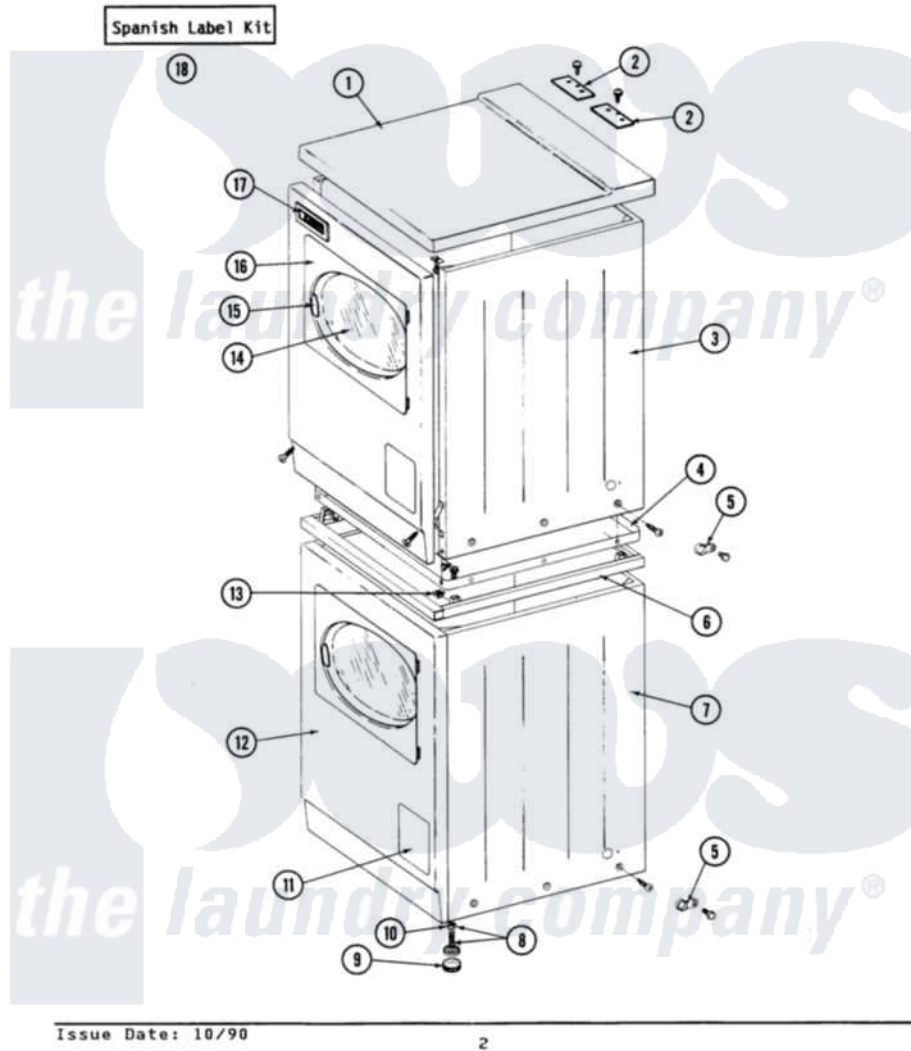

Issue Date: 10/90

Maytag [Residential Maytag DG27CT Dryer Parts](#) Parts Diagram 08 - FRONT VIEW
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	307104			Top Cover Assembly
"	NLA		Not Available	TOP COVER ASSY
002	NLA		Not Available	COVER PLATE
"	Y313559			Screw
003	204445			Screw And Fastener Assembly
"	213007			Xfor Cabinet See Cabinet, Back
"	NLA		Not Available	CABINET, UPPER (WHITE)
004	314663	214354		Screw, Top Cover To Cabnt.
"	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
005	211168	W10139210		Screw, 8-18 X 5/16
"	910768	M0280301		Tie Electr
006	NLA		Not Available	SPACER ASSM-WHITE
007	307125		Not Available	CABINET, LOWER (WHITE)
"	NLA		Not Available	CABINET, LOWER (ALMOND)
008	Y302699	22003428		Leg, Adjustable

009	210684		Foot, Adjustable Leg
010	210385		Lock Nut For Adjustable Leg
011	NLA	Not Available	ACCESS DOOR (WHITE)
012	204439		Screw And Fstner Assembly
"	307998L		Front Panel----NA
"	NLA	Not Available	FRONT PANEL-WHITE
013	310933	33002194	Nut, Speed
014	308069	Not Available	DOOR, INNER W/GASKET
015	314939		Handle, Door
"	314974		Handle, Door
"	314975		Handle, Door
016	NLA	Not Available	DOOR, COMPLETE LESS HINGES (WH
017	NLA	Not Available	NAME PLATE
018	NLA	Not Available	SPANISH LABEL KIT

