


# Maytag DG303 01 - CONTROL PANEL

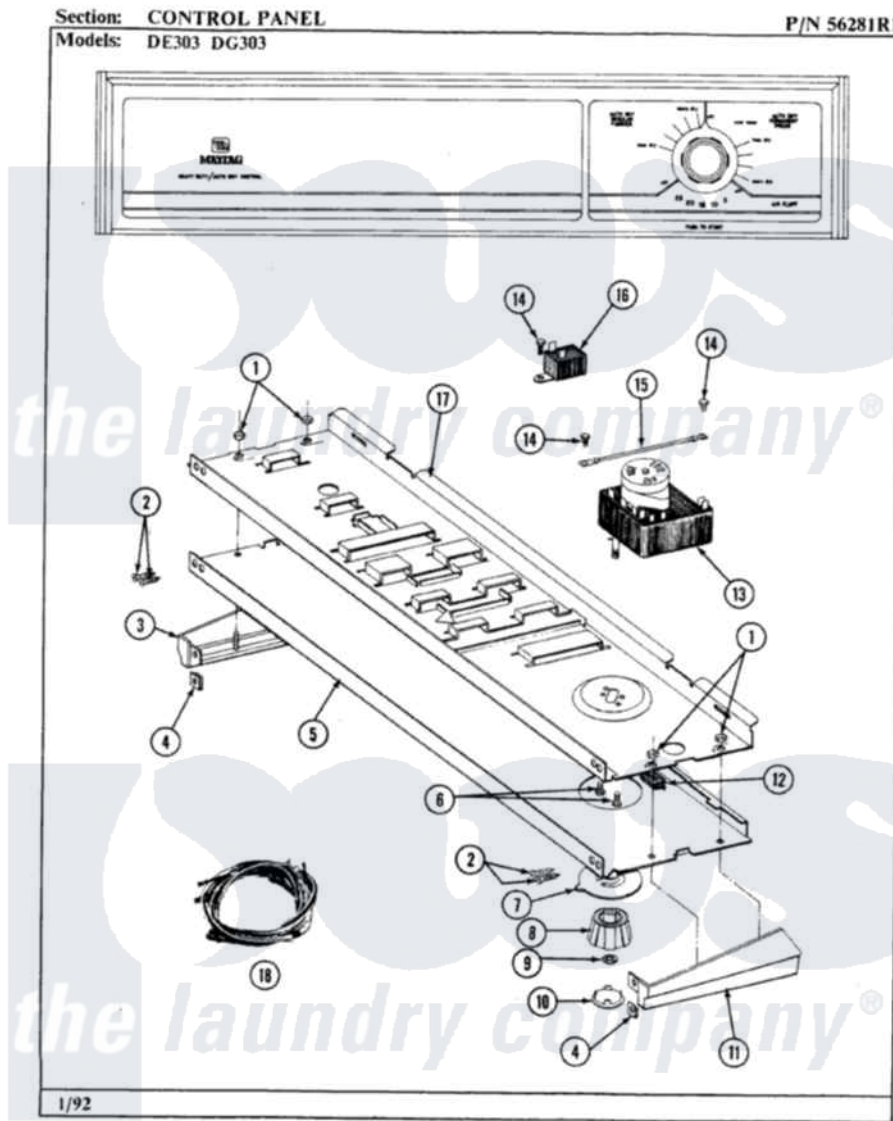

Maytag Residential Maytag DG303 Dryer Parts Parts Diagram 01 - CONTROL PANEL  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
2	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
3	314726		Not Available	END CAP - LEFT HAND
4	<a href="#">214894</a>			Fastener, End Cap
5	306484		Not Available	CONTROL PANEL
6	910708	<a href="#">488234</a>		Screw 8-32 X 1/4
7	314725	<a href="#">33001500</a>		Dial, Timer Indicator
8	<a href="#">314724</a>			Knob For Timer
9	<a href="#">312273</a>			Nut, Control Knob
10	314723	<a href="#">W10133501</a>		Cap, Knob
11	314727	<a href="#">207927</a>		End Cap, Control Panel
12	<a href="#">214897</a>			Pad, Control Panel
13	<a href="#">306483</a>			Timer
14	211294	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping

15	<a href="#">204807</a>		Ground Wire, Supp. Plte To Top Cover
16	305205	<a href="#">694419</a>	Mini-Buzzer
17	<a href="#">314184</a>		Back Up Plate
18	306808	Not Available	WIRE HARNESS
"	306587	Not Available	MAIN WIRE HARNESS

