


Maytag DG307 05 - FRONT PANEL, DOOR & DRUM COVER

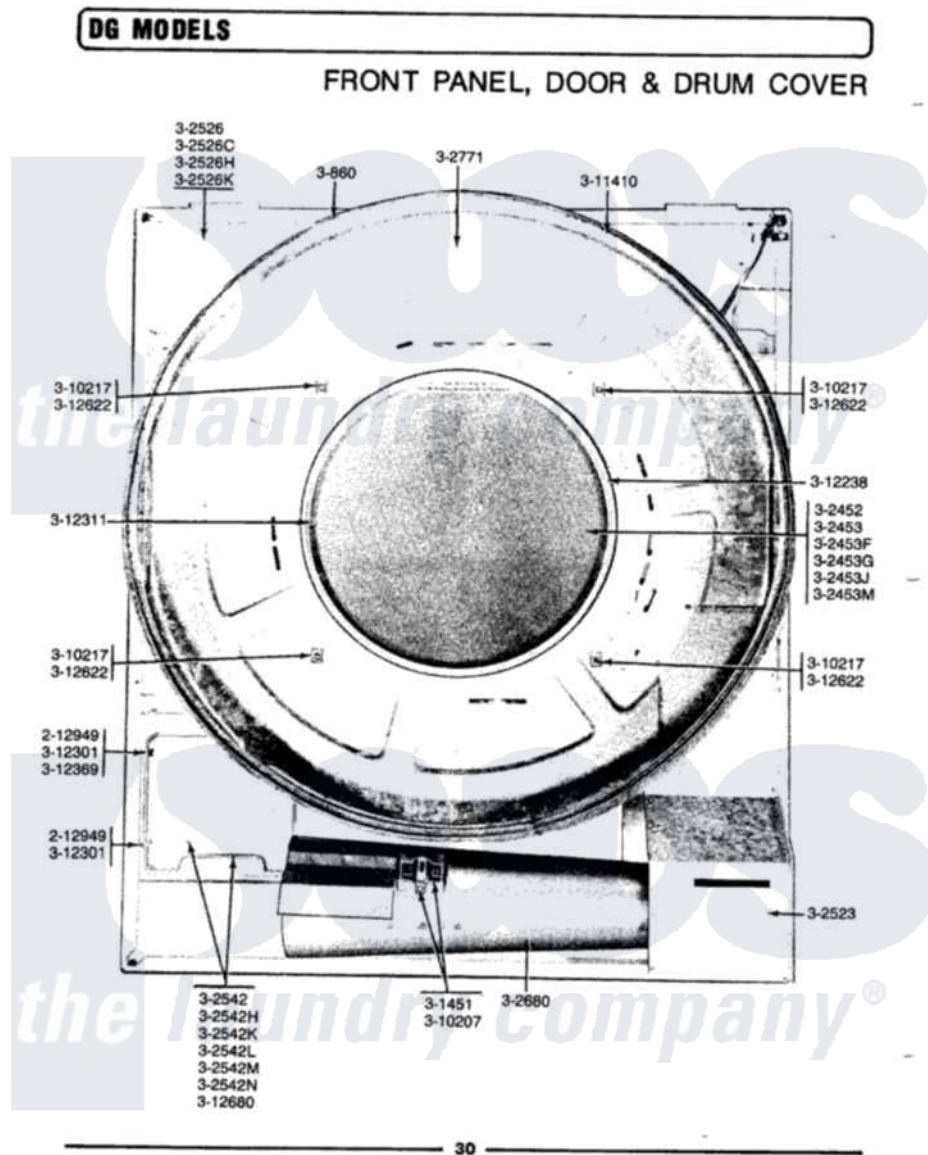

Maytag Residential Maytag DG307 Dryer Parts Parts Diagram 05 - FRONT PANEL, DOOR & DRUM COVER
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	212949	22001866		Screw, Relay
2	300860		Not Available	SEAL, DRUM COVER
3	Y301451		Not Available	HIGH LIMIT THERMOSTAT
4	302452			Door Liner
5	302453		Not Available	DOOR-WHITE
6	302453F		Not Available	DOOR-LIGHT GOLD
7	302453G		Not Available	DOOR-DARK GOLD
8	302453J		Not Available	DOOR-LIGHT AVOCADO
9	302453M		Not Available	DOOR-HARVEST WHEAT
10	302523		Not Available	MIXING CHAMBER
11	302526		Not Available	FRONT PANEL-WHITE
12	302526C		Not Available	FRONT PANEL-DARK COPPERTONE
13	302526H		Not Available	FRONT PANEL-SHADED GOLD
14	302526K		Not Available	FRONT PANEL-SHADED AVOCADO

15	302542	Not Available	PART NOT USED. (DG ONLY)
16	302542H	Not Available	ACCESS DOOR-SHADED GOLD
17	302542K	Not Available	ACCESS DOOR-SHADED AVOCADO
18	302542L	Not Available	PART NOT USED. (DG ONLY)
19	302542M	Not Available	ACCESS DOOR-HARVEST WHEAT
20	302542N	Not Available	ACCESS DOOR-FRESH AVOCADO
21	302680		Combustion Cone
22	302771	Not Available	DRUM COVER WITH FELT
23	310207		Screw, No.6 X 1/4 Inch
24	310217	Not Available	No Longer Available
25	311410		Band
26	312238		Door Seal
27	312301	Not Available	BUSHING FOR ACCESS STUD
28	312311	312311MAY	Screw
29	312369		Sleeve, Access Panel Stud Part Not Used
30	312622	22001496	Front Panel Fastener And Screw
31	312680	31-2680	Minimanual

