


CA TIMER, CM TIMER ACCUMULATOR & CT TICKET CONTROL

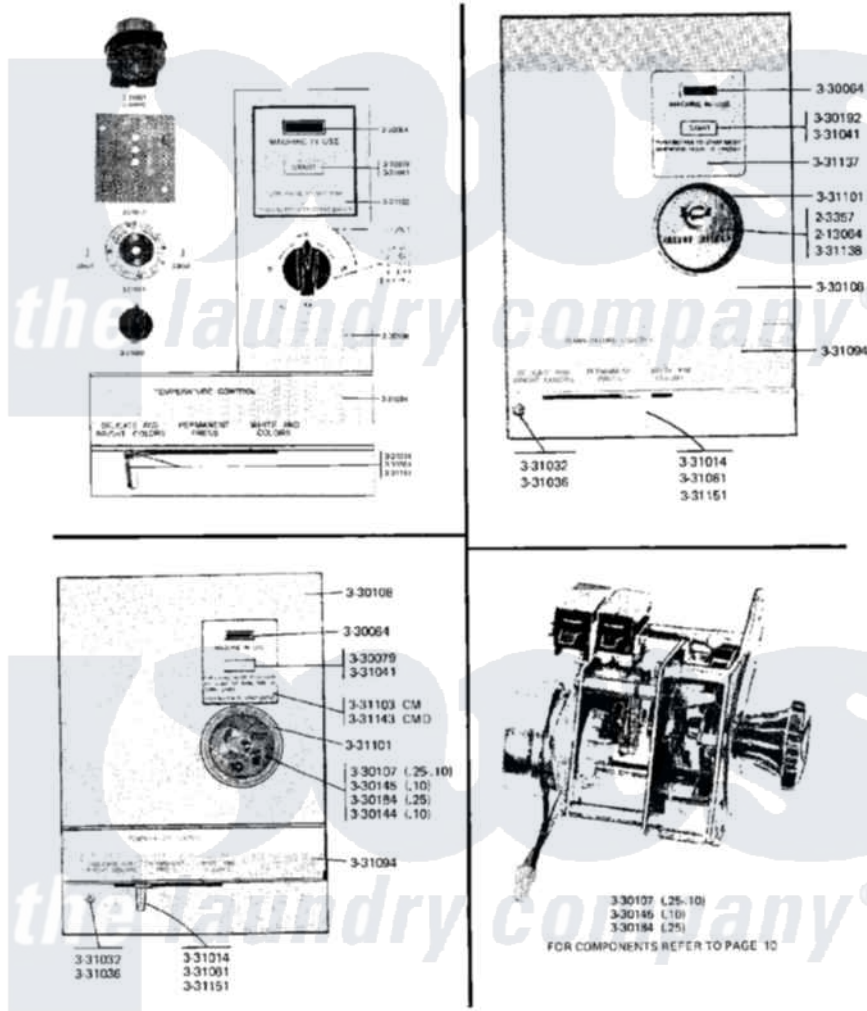

Copyright 1978 THE MAYTAG COMPANY • Newton, Iowa • Printed in U.S.A.

Maytag Residential Maytag DG32CT Dryer Parts Parts Diagram 03 - CA & CM TIMER ACCUMULATOR, CT TICKET  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	TOOL TO ADJUST TIMING SWITCH
002	NLA		Not Available	SCREW, No.5-40 X 3/8
003	NLA		Not Available	TICKET RECEIVER ASSEMBLY
004	NLA		Not Available	FRONT PLATE, TICKET CONTROL
005	<a href="#">Y330064</a>			Pilot Light
006	Y330079		Not Available	SWITCH, PUSH-TO-START
007	<a href="#">330081</a>			Timer - CA 60 Minutes
008	Y330082	<a href="#">330081</a>		Timer - CA 60 Minutes
009	NLA		Not Available	TIMER ACCUMULATOR - CM
010	NLA		Not Available	FRONT PANEL (WHT)
011	NLA		Not Available	MOUNTING PLATE (ACCUMULATOR)
012	Y330145		Not Available	CONTA ACCUMULATOR ASSEMBLY
013	<a href="#">330184</a>			Timer Accumulator-25

014	Y330192	Not Available	SWITCH, PUSH TO START
015	331014	<a href="#">8281196</a>	Screw
016	331032	<a href="#">61002031</a>	Screw, Handle
017	<a href="#">331036</a>		Washer-Front Panel Screws
018	<a href="#">331041</a>		Button-Push-To-Start Switch
019	NLA	Not Available	TIMER DIAL - CA 60 MINUTES
020	<a href="#">331061</a>		Knob For Temperature Contro
021	NLA	Not Available	KNOB, TIMER
022	NLA	Not Available	MOUNTING PLATE, TIMER
023	NLA	Not Available	TRIM BAR, UPPER PANEL
024	331101	Not Available	BEZEL FOR TIMER-ACCUMULATOR
025	NLA	Not Available	INSTRUCTION PLATE (CA)
026	NLA	Not Available	INSTRUCTION PLATE - CM
027	NLA	Not Available	INSTRUCTION PLATE-CT
028	NLA	Not Available	MOUNTING PLATE-TICKET CONT
029	NLA	Not Available	INSTRUCT LABEL - SINGLE COI
030	<a href="#">331151</a>		Lever-Temperature Control
031		Not Available	

