


Maytag DG407 03 - CONTROL PANEL & COMPONENTS (ORIGINAL)

MODEL DE-DG407 CONTROL PANEL & COMPONENTS

See pages 16 & 17 for Model DE-DG407 Series 01 Control Panel

ORIGINAL

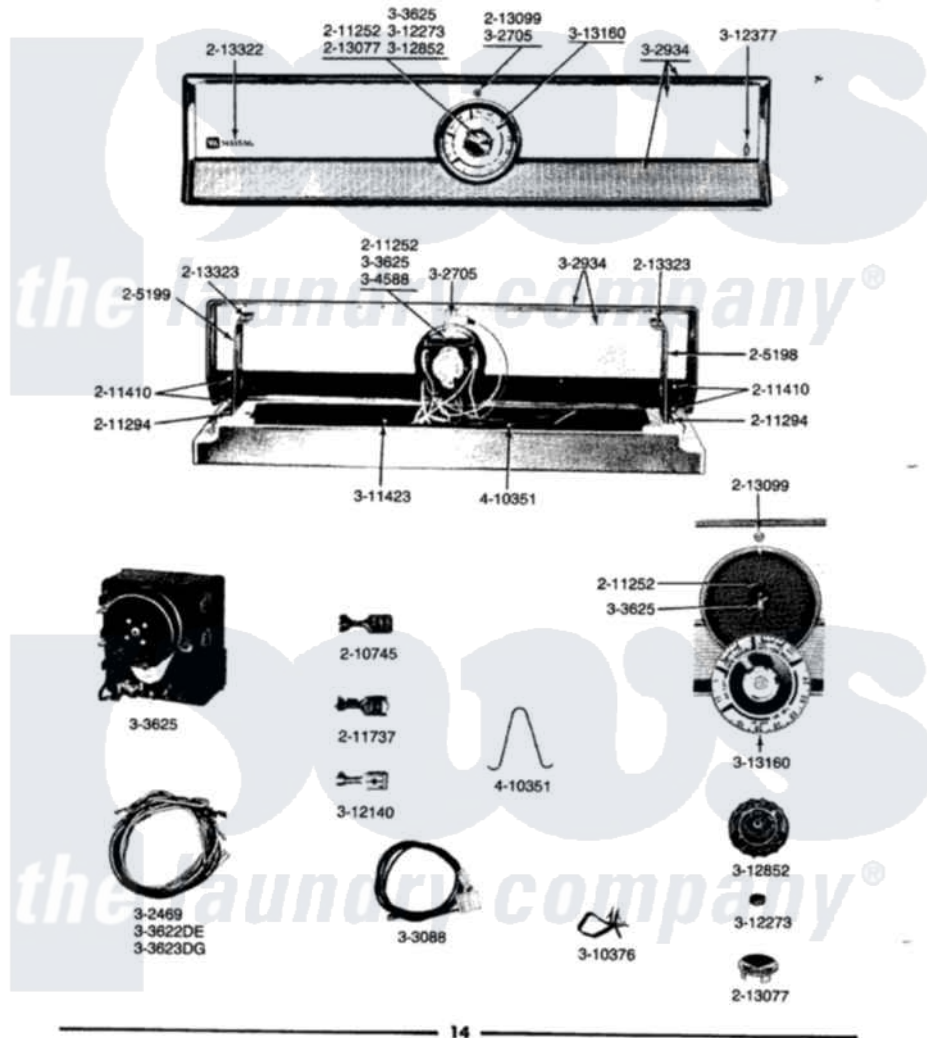

Maytag Residential Maytag DG407 Dryer Parts Parts Diagram 03 - CONTROL PANEL & COMPONENTS (ORIGINAL)

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205198		Not Available	BRACKET KIT - LEFT HAND
2	205199		Not Available	BRACKET KIT - RIGHT HAND
3	210745			Wire Terminal
4	211252			Screw, Ground Wire
5	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
6	211410			Screw, HeX Head No.8 X 3/8 Inch
7	211737	248562		Terminal
8	213077		Not Available	CAP FOR TIMER KNOB
9	213099			Lens For Control Panel
10	213322		Not Available	MAYTAG DECAL
11	213323			Fastener, Exhaust Duct Kit
12	302469		Not Available	HARNES FOR SHROUD
13	Y302705		Not Available	LIGHT
14	302934		Not Available	CONTROL PANEL WITH LENS

15	303088		Not Available	GAS VALVE WIRES WITH PLUG
16	Y303622			Main Wire Harness
17	303623		Not Available	MAIN WIRE HARNESS
18	303625		Not Available	PUSH-TO-START TIMER
19	304588		Not Available	TIMER MOTOR
20	Y310376			Clip, Door Switch Harness
21	Y311423	489483		Screw 10-32 X 1/2
22	Y312140			Wire Connector
23	312273			Nut, Control Knob
24	312852			Selector Knob-Clear Acrylic
25	312377	31-2377		Minimanual
26	Y313160		Not Available	TIMER DIAL
27	410351		Not Available	HARNESS RETAINER

the laundry company[®]

the laundry company[®]

the laundry company[®]