



[Maytag Residential Maytag DG500 Dryer Parts](#) Parts Diagram 04 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	301609		Not Available	COVER FOR CONTROL PANEL
2	301621		Not Available	WIRE HARNESS FOR CIRCUIT BOARD
3	301627		Not Available	WIRE HARNESS, MOTOR
4	301631		Not Available	INDICATOR LIGHT WITH WIRES
5	301641		Not Available	WIRE HARNESS FOR THERMOSTATS
6	301682		Not Available	ELECTRONIC CONTROL
7	301690		Not Available	CAPACITOR 8.0 MICROFARADS
8	301748		Not Available	CONTROL PANEL
9	Y301783		Not Available	CONTROL SWITCH - 4 BUTTON
10	<a href="#">Y310376</a>			Clip, Door Switch Harness
11	<a href="#">310551</a>			Fastener
12	310844	<a href="#">W10068250</a>		Screw
13	311608	<a href="#">98165</a>		Screw

14	311613	<a href="#">Y311711</a>	Screw, Fuse Block
15	<a href="#">311659</a>		Chime Wire
16	<a href="#">Y311660</a>		Chime
17	311661	Not Available	BRACKET FOR ELECTRONIC CONTROL
18	311662	Not Available	LINK - SOLENOID TO SWITCH
19	311665	Not Available	ESCUTCHEON
20	311666	Not Available	TRIM RING
21	311667	Not Available	BRACKET FOR CONTROL SWITCH
22	<a href="#">Y311711</a>		Screw, Fuse Block
23	<a href="#">211252</a>		Screw, Ground Wire
24	211294	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
25	212389	Not Available	LENS
26	212394	Not Available	CLIP FOR LAMP
27	052690	Not Available	HEX. NUT, No.10-32
28	054580	Not Available	SCREW, No.10-32 X 1/4
29	400015	Not Available	SOLENOID

