


# Maytag DG5910 03 - FRONT VIEW

SECTION: FRONT VIEW  
 MODEL: DE-DG MODELS

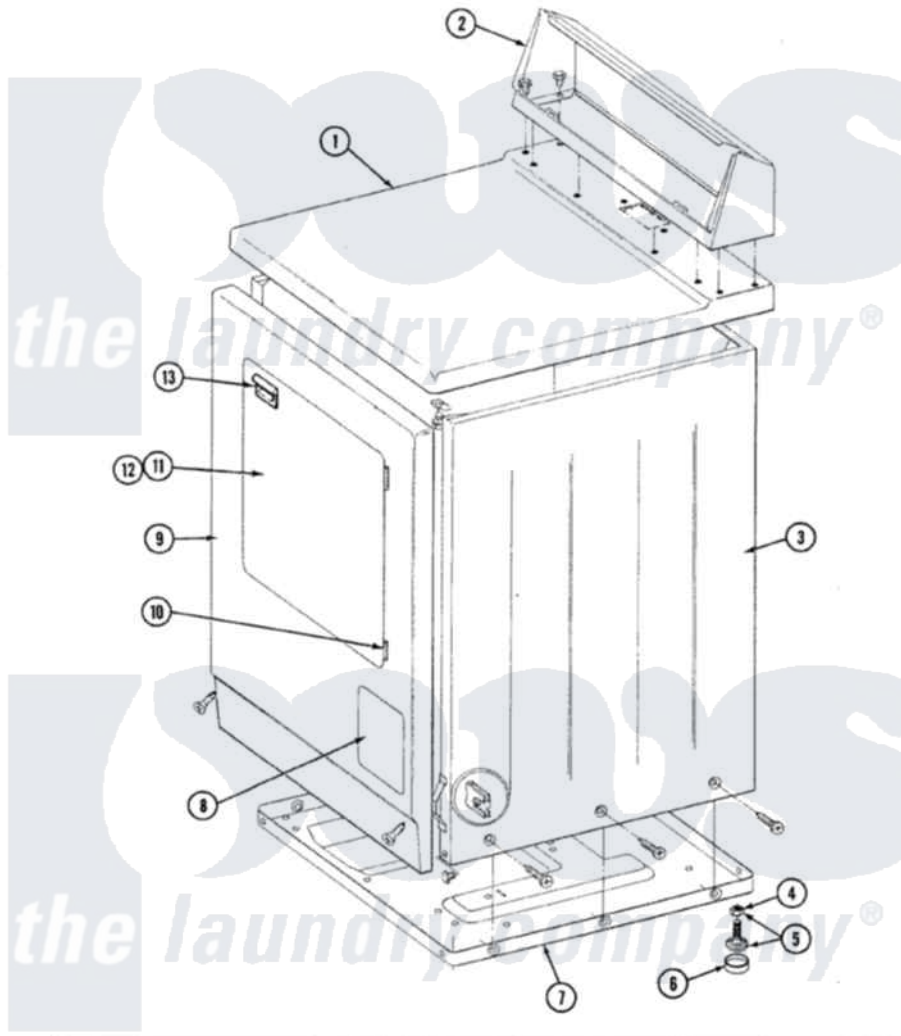

Issue Date: 6/90

56

Maytag Residential Maytag DG5910 Dryer Parts Parts Diagram 03 - FRONT VIEW  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">307104</a>			Top Cover Assembly
"	<a href="#">204445</a>			Screw And Fastener Assembly
2	<a href="#">Y305193</a>			Console
"	<a href="#">Y313559</a>			Screw
3	<a href="#">307124</a>			Cabinet
"	Y310632	<a href="#">1163839</a>		Screw
4	Y052740	<a href="#">62739</a>		Nut, Lock
5	<a href="#">Y305086</a>			Adjustable Leg And Nut
6	<a href="#">Y314137</a>			Foot, Rubber
7	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
8	302542		Not Available	PART NOT USED. (DG ONLY)
9	<a href="#">Y307998</a>			Front Panel
10	307099	<a href="#">33001230</a>		Hinge, Door
11	Y307111		Not Available	DOOR ASSY. COMPLETE (WHT)
12	<a href="#">314966</a>			Panel, Outer

