


Maytag DG612 01 - CONTROL PANEL

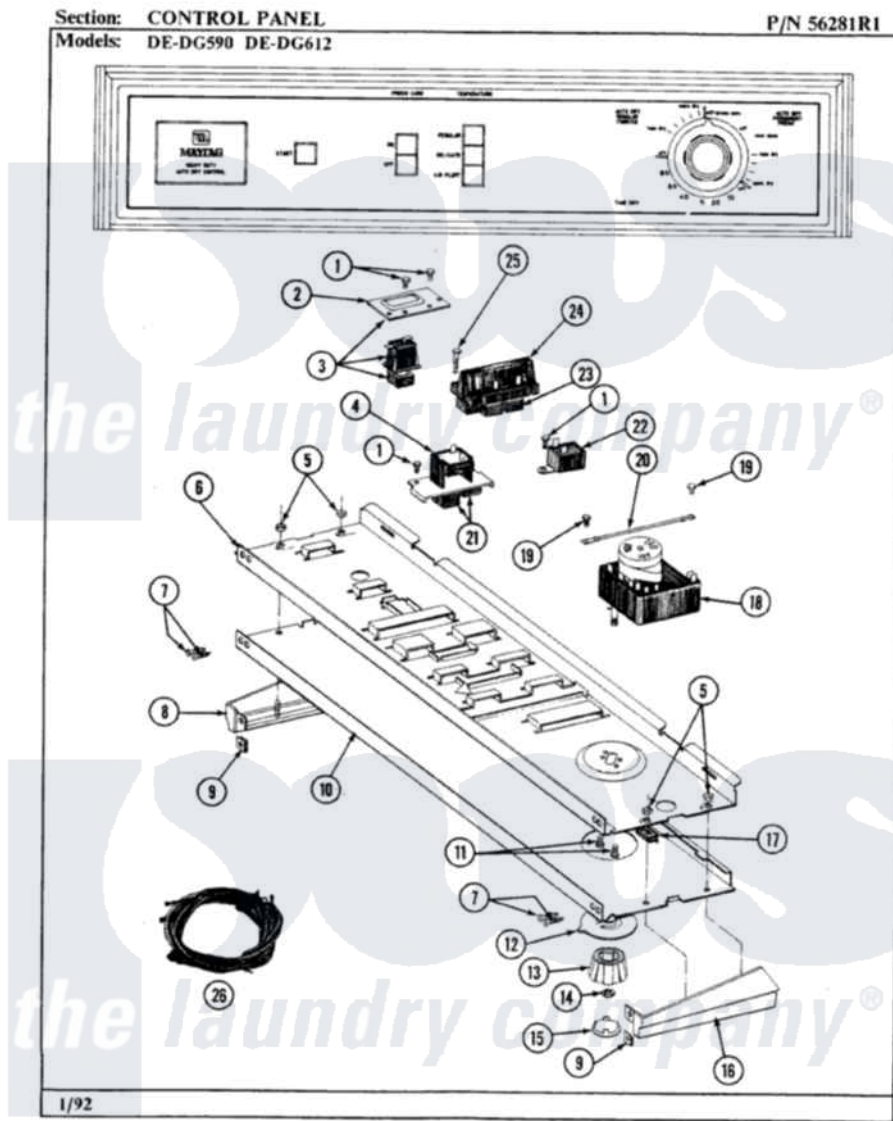

18

Maytag Residential Maytag DG612 Dryer Parts Parts Diagram 01 - CONTROL PANEL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211168	W10139210		Screw, 8-18 X 5/16
2	314177		Not Available	BRACKET FOR START SWITCH
3	306533			Switch, Push/To/Start W/Bkt
4	305950		Not Available	DRYNESS-PRESS CARE SWITCH
5	214872			Palnut, End Cap Note: Nut, Lamp Holder
6	314184			Back Up Plate
7	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
8	214815			End Cap F/Control Panel-LH
9	214894			Fastener, End Cap
10	305885	306385		Control Panel
"	306385			Control Panel
11	910708	488234		Screw 8-32 X 1/4
12	314422	33001500		Dial, Timer Indicator
13	314421			Knob For Timer

14	312273		Nut, Control Knob
15	215164	Not Available	CAP FOR KNOB
16	214816		End Cap F/Control Panel-RH
17	214897		Pad, Control Panel
18	305207		Timer
19	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
20	204807		Ground Wire, Supp. Plte To Top Cover
21	215210		Button For Switch
22	305205	694419	Mini-Buzzer
23	215211		Button For Switch
24	305958	Not Available	TEMPERATURE SWITCH
25	213117	67006908	Screw, Ice Rack
26	305346	Not Available	MAIN WIRE HARNESS
"	306181	Not Available	WIRE HARNESS

