



[Maytag Residential Maytag DG700 Dryer Parts Parts Diagram 04 - CONTROL PANEL](#)  
Click on the part number to view part

| Item | Original Part Number    | Replaced By               | Status        | Part Description               |
|------|-------------------------|---------------------------|---------------|--------------------------------|
| 1    | Y300538                 |                           | Not Available | FLUORESCENT LAMP               |
| 2    | 300541                  |                           | Not Available | COVER FOR CONTROL PANEL        |
| 3    | 300552                  |                           | Not Available | LAMP SOCKET                    |
| 4    | <a href="#">301010</a>  |                           |               | Chime                          |
| 5    | 301130                  |                           | Not Available | TIMER                          |
| 6    | 301432                  |                           | Not Available | TEMPERATURE SWITCH-GRAY        |
| 7    | <a href="#">Y310376</a> |                           |               | Clip, Door Switch Harness      |
| 8    | 310744                  |                           | Not Available | SCREW-LAMP RECEPTACLE TO BRACK |
| 9    | 310844                  | <a href="#">W10068250</a> |               | Screw                          |
| 10   | 311179                  |                           | Not Available | SWITCH BRACKET                 |
| 11   | 311259                  |                           | Not Available | SCREW, No.4-36 X 1/2 INCH      |
| 12   | 311266                  |                           | Not Available | SPRING                         |
| 13   | 311387                  |                           | Not Available | CONTROL KNOB                   |
| 14   | 311503                  |                           | Not Available | CONTROL PANEL                  |

|    |                        |                          |               |                                            |
|----|------------------------|--------------------------|---------------|--------------------------------------------|
| 15 | 311504                 |                          | Not Available | GLASS PANEL-LEFT HAND,<br>GOLD             |
| 16 | Y311505                |                          | Not Available | GLASS PANEL-RIGHT HAND,<br>GOL             |
| 17 | 311507                 | <a href="#">832840</a>   |               | Timer Dial Gray                            |
| 18 | 311608                 | <a href="#">98165</a>    |               | Screw                                      |
| 19 | 200860                 |                          | Not Available | RECEPTACLE FOR LAMP-<br>RIGHT              |
| 20 | 200862                 |                          | Not Available | BALLAST                                    |
| 21 | 201110                 |                          | Not Available | WIRE CONNECTOR                             |
| 22 | 201580                 |                          | Not Available | SWITCH FOR<br>FLUORESCENT LAMP             |
| 23 | 202807                 |                          | Not Available | RECEPT FOR<br>FLUORESCENT LAMP             |
| 24 | <a href="#">210198</a> |                          |               | Fastener                                   |
| 25 | 210310                 | <a href="#">31001575</a> |               | Bulb, Cylinder Light                       |
| 26 | 211238                 |                          | Not Available | PANEL BRACKET, LEFT                        |
| 27 | 211239                 |                          | Not Available | PANEL BRACKET, RIGHT                       |
| 28 | 211244                 |                          | Not Available | GASKET                                     |
| 29 | 211245                 |                          | Not Available | SPRING CLIP-CONTROL<br>COVER-REAR          |
| 30 | 211246                 |                          | Not Available | SPRING CLIP                                |
| 31 | 211247                 |                          | Not Available | RETAINER                                   |
| 32 | 211249                 |                          | Not Available | FASTENER                                   |
| 33 | <a href="#">211250</a> |                          |               | Fastener                                   |
| 34 | <a href="#">211252</a> |                          |               | Screw, Ground Wire                         |
| 35 | 211293                 |                          | Not Available | SCREW, No.8 X 1/2 INCH                     |
| 36 | 211294                 | <a href="#">90767</a>    |               | Screw, 8A X 3/8 HeX Washer<br>Head Tapping |
| 37 | 213077                 |                          | Not Available | CAP FOR TIMER KNOB                         |

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>