


Maytag DG713 01 - CONTROL PANEL

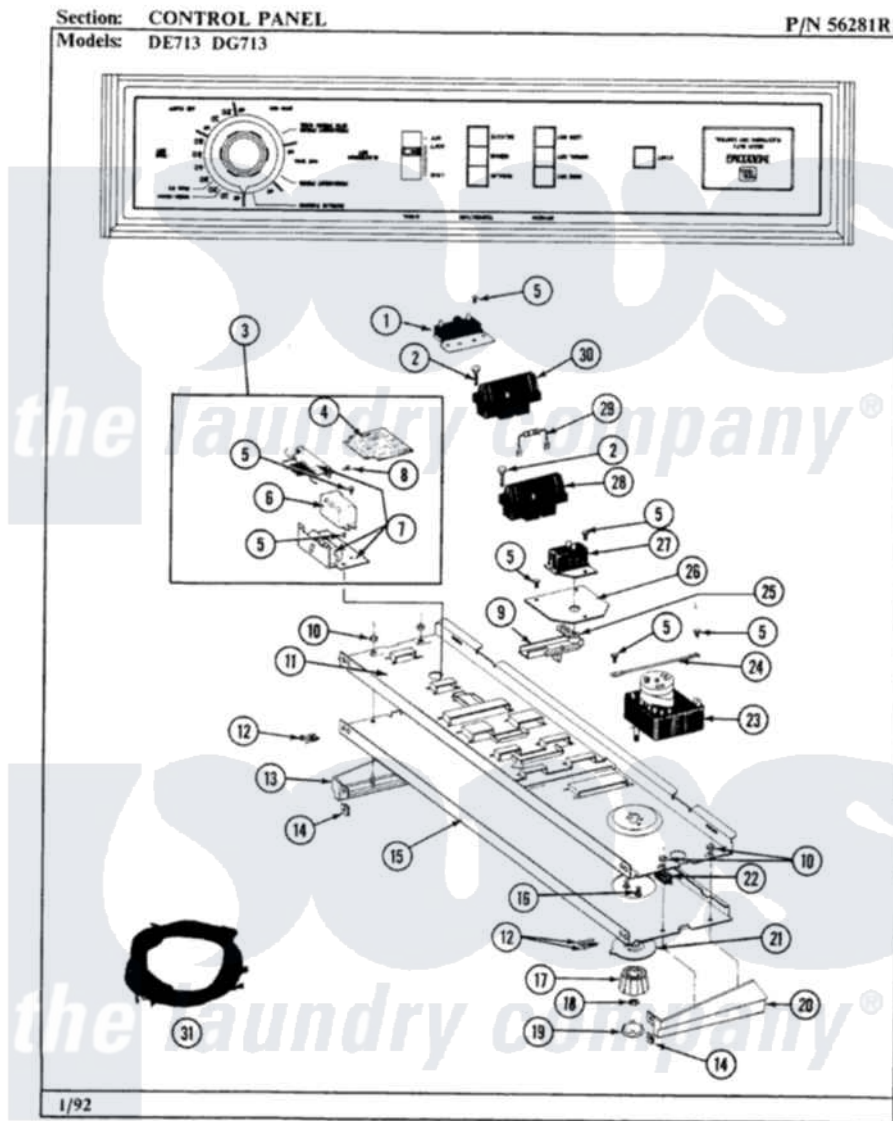

22

Maytag Residential Maytag DG713 Dryer Parts Parts Diagram 01 - CONTROL PANEL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	306533			Switch, Push/To/Start W/Bkt
2	213117	67006908		Screw, Ice Rack
3	306920			Elect Control Assembly Dg
4	306923			Pc Board Assembly----NA
5	Y251119	3177991		Screw
6	306914			Relay - Gas
7	306918			Connector, Assembly Edge Board
8	311863		Not Available	SCREW FOR CAUTION PLATE----NA
9	306922			Slide Assembly
10	214872			Palnut, End Cap Note: Nut, Lamp Holder
11	314184			Back Up Plate
12	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
13	214815			End Cap F/Control Panel-LH
14	214894			Fastener, End Cap

15	306927		Not Available	CONTROL PANEL
16	910708	488234		Screw 8-32 X 1/4
17	314421			Knob For Timer
18	312273			Nut, Control Knob
19	215164		Not Available	CAP FOR KNOB
20	214816			End Cap F/Control Panel-RH
21	314422	33001500		Dial, Timer Indicator
22	214897			Pad, Control Panel
23	306926		Not Available	TIMER
24	204807			Ground Wire, Supp. Plte To Top Cover
25	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
26	314169	313610		Hndle-Door
27	Y305204		Not Available	BUZZER - ADJUSTABLE
28	Y306924			Switch, Temperature Selecto
29	306917			Resistor, Med Temp Gas
30	Y306924			Switch, Temperature Selecto
31	306898			Wire Harness

