


Maytag DG882 03 - FRONT VIEW

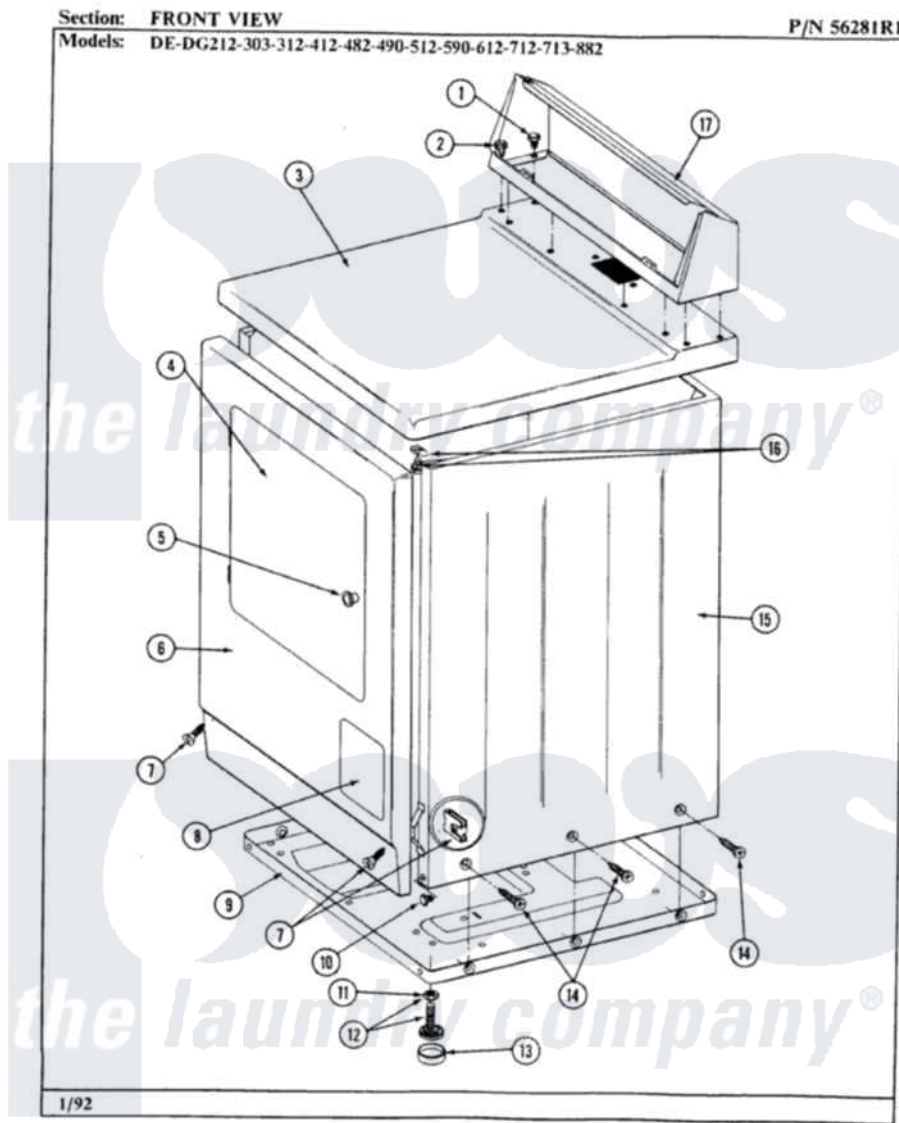

26

Maytag [Residential Maytag DG882 Dryer Parts](#) Parts Diagram 03 - FRONT VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211194		Not Available	LOCK WASHER
2	Y313559			Screw
3	307104			Top Cover Assembly
4	Y306668			DOOR (WHT)
5	303942		Not Available	KNOB AND SCREW
6	304594			Front Panel-White
7	204439			Screw And Fstner Assembly
8	302542		Not Available	PART NOT USED. (DG ONLY)
9	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
10	Y310632	1163839		Screw
11	Y052740	62739		Nut, Lock
12	Y305086			Adjustable Leg And Nut
13	Y314137			Foot, Rubber
14	213007			Xfor Cabinet See Cabinet, Back
15	305302		Not Available	CABINET-WHITE

"	305302M	Not Available	CABINET-HARVEST WHEAT
16	204445		Screw And Fastener Assembly
17	Y305193		Console

