


Maytag GA282 04 - CONTROL PANEL

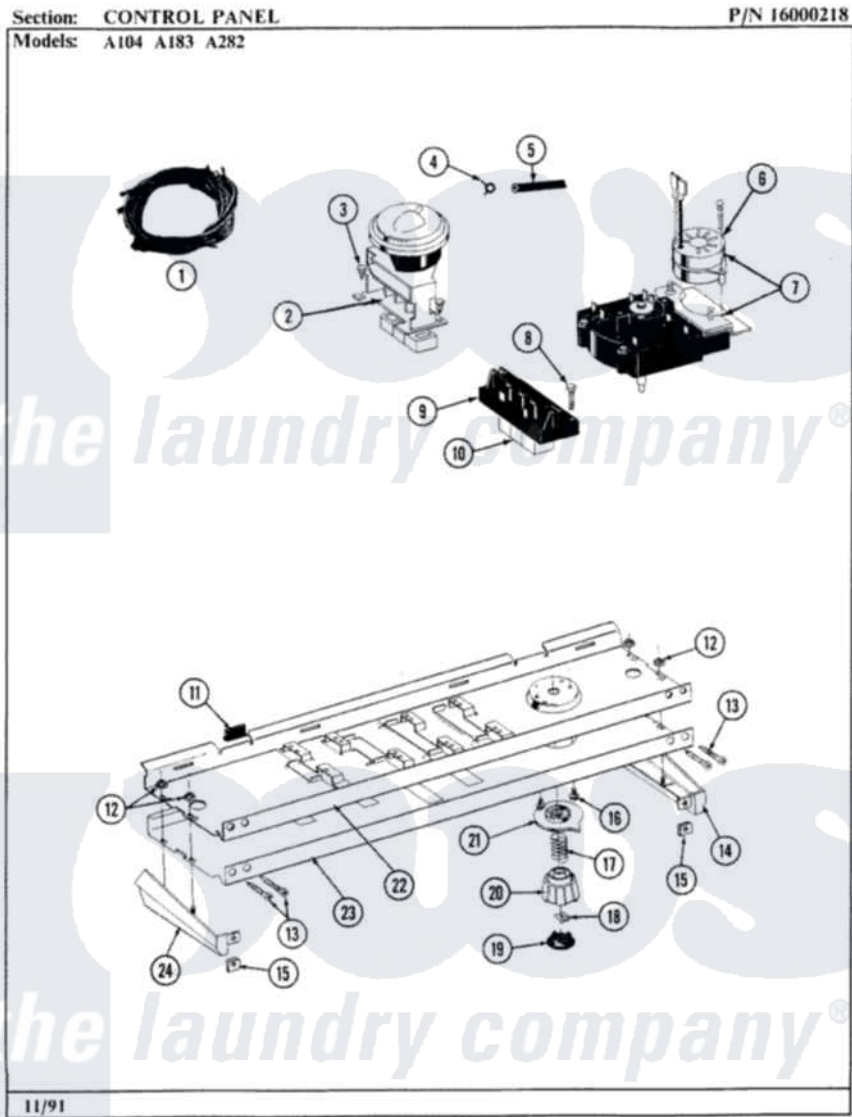

Maytag [Residential Maytag GA282 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	206231			Wire Harness
2	206221		Not Available	WATER LEVEL SWITCH---NA
3	211168	W10139210		Screw, 8-18 X 5/16
4	410296	596669		Clamp, Manifold
5	212942	22001619		Tube, Water Level Switch
6	205410		Not Available	TIMER MOTOR 120-60
7	206230			Timer
8	213117	67006908		Screw, Ice Rack
9	206216			Water Temperature Switch
10	215211			Button For Switch
11	214897			Pad, Control Panel
12	214872			Palnut, End Cap Note: Nut, Lamp Holder
13	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
14	214816			End Cap F/Control Panel-RH

15	214894		Fastener, End Cap
16	213966	3400014	Screw
17	211065		Spring, Index Wheel
18	211605		Bezel, Timer Dial
19	215163	Not Available	CAP FOR KNOB
20	215162		Timer Knob
21	215161	22001571	Bezel, Timer Dial
22	214818		Back Up Plate
23	206753	Not Available	CONTROL PANEL
24	214815		End Cap F/Control Panel-LH

