


MODELS A283-A284

CONTROL PANEL

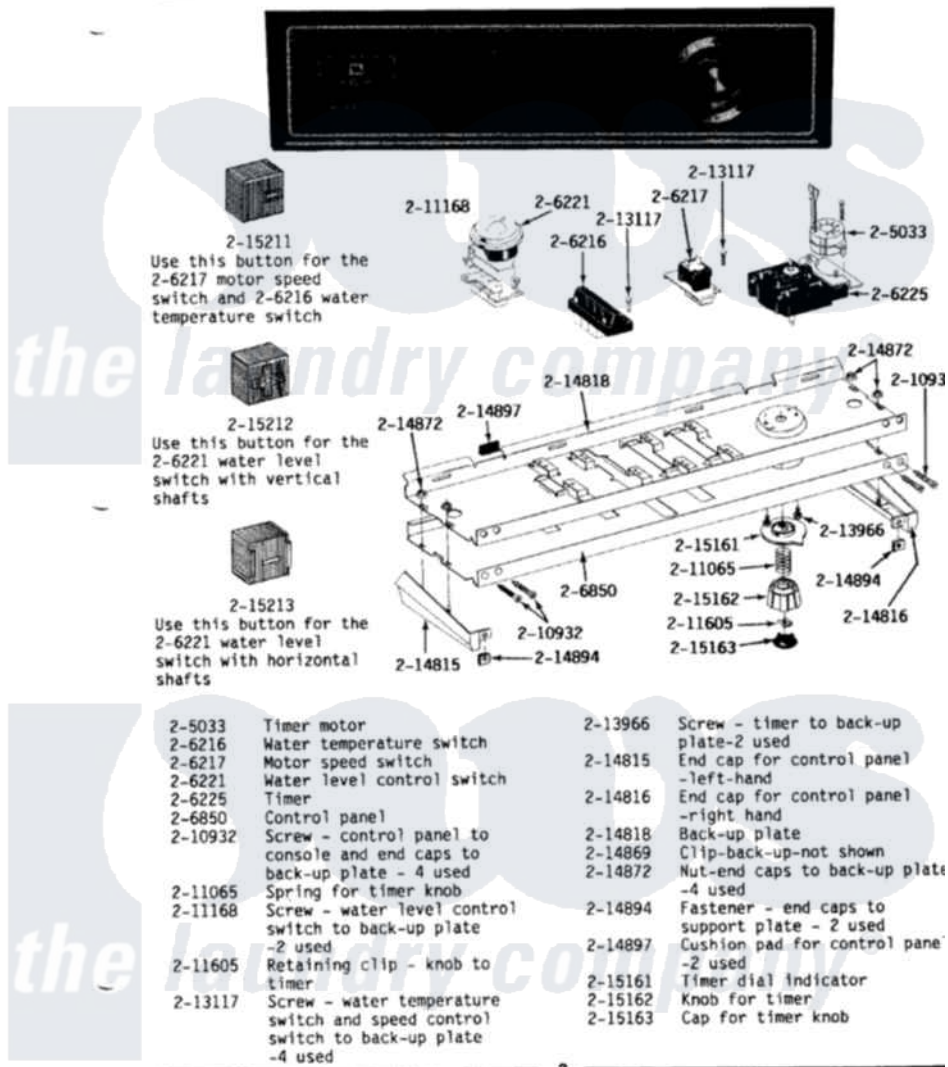

Maytag Residential Maytag GA283 Washer Parts Parts Diagram 04 - CONTROL PANEL

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205033	<a href="#">22205033</a>		Motor- Tim
2	<a href="#">206216</a>			Water Temperature Switch
3	206217		Not Available	SPEED CONTROL SWITCH
4	206221		Not Available	WATER LEVEL SWITCH----NA
5	<a href="#">206225</a>			Timer
6	206850		Not Available	CONTROL PANEL
8	<a href="#">211065</a>			Spring, Index Wheel
10	<a href="#">211605</a>			Bezel, Timer Dial
12	213966	<a href="#">3400014</a>		Screw
13	<a href="#">214815</a>			End Cap F/Control Panel-LH
14	<a href="#">214816</a>			End Cap F/Control Panel-RH
15	<a href="#">214818</a>			Back Up Plate
NI	<a href="#">214869</a>			Clip For Back Up Plate
17	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
18	<a href="#">214894</a>			Fastener, End Cap

19	<a href="#">214897</a>		Pad, Control Panel
20	215161	<a href="#">22001571</a>	Bezel, Timer Dial
21	<a href="#">215162</a>		Timer Knob
22	215163	Not Available	CAP FOR KNOB

