


Maytag GA284 06 - TOP COVER, CONSOLE & LID SWITCH

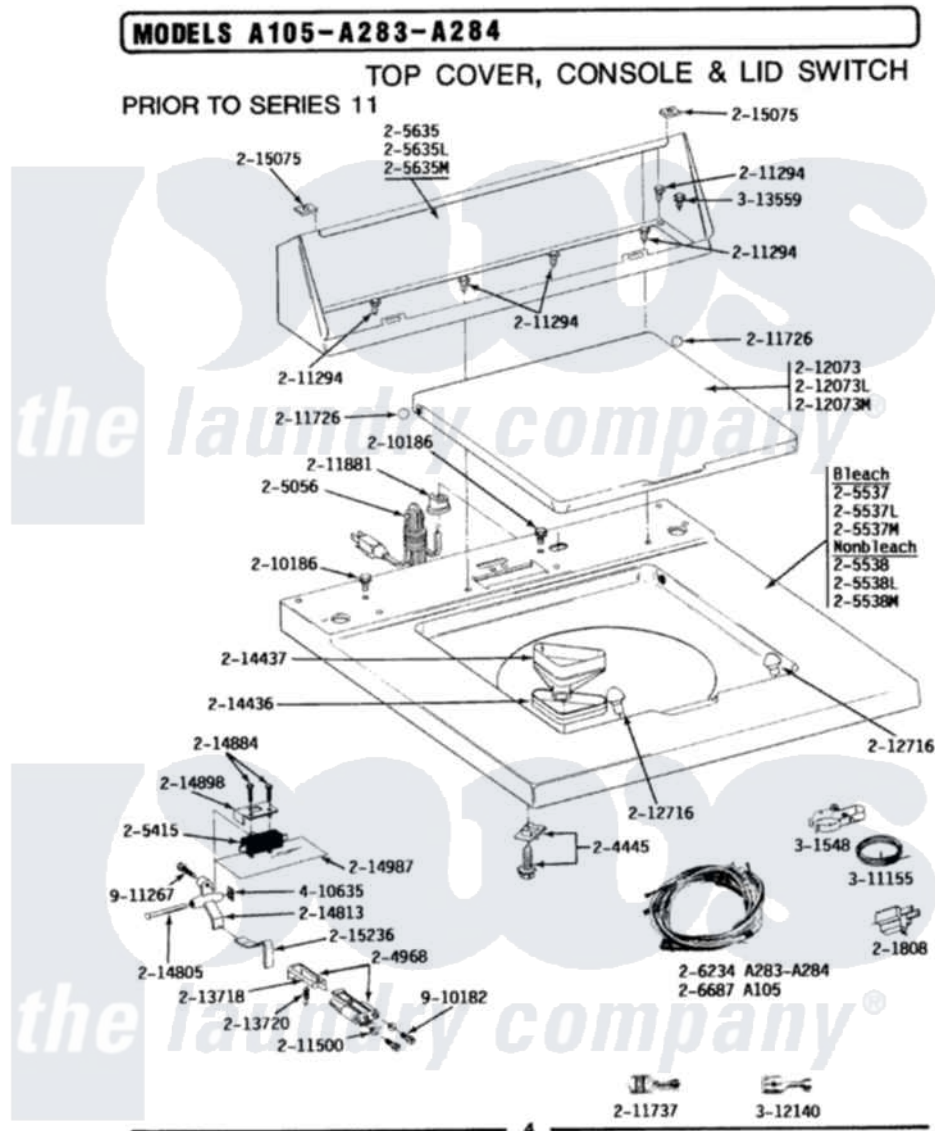

Maytag Residential Maytag GA284 Washer Parts Parts Diagram 06 - TOP COVER, CONSOLE & LID SWITCH
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y201808			Converter
2	204445			Screw And Fastener Assembly
3	204968			Plunger And Bracket Assembly--W
4	205056	204590		Cord, Power
5	205415	279347		Switch-Lid
8	205537M		Not Available	TOP COVER-HARVEST WHEAT
11	205635M		Not Available	CONSOLE (HVST WHEAT)
12	206234		Not Available	WIRE HARNESS
13	210186	3370225		Screw
14	211294	90767		Screw, 8A X 3/8 Hex Washer Head Tapping
15	211500			Washer, Bracket To Top Cover
16	211726			Hinge, Ball Lid
17	211737	248562		Terminal
18	211881			Grommet, Cord Part Not Used-Gas Models Only

21	212073M	Not Available	LID-HARVEST WHEAT
22	212716		Bumper, Lid
23	213718		Plunger, Lid Switch
24	213720		Spring, Lid Switch
25	214436		Gasket
26	214437	215577	Bleach Inlet White
27	214805		Pin For Unbalance Lever
28	214813	Not Available	LEVER FOR LID SWITCH
29	214884	213501	Screw, No.6-20 X 1-1/8 Inch
30	214898		Cover For Lid Switch
31	214987		Moisture Barrier For Switch
32	215075		Fastener, Control Panel To Console
33	215236	214804	Unbalance Lever
34	301548		Clamp, Ground Wire
35	311155		Ground Wire And Clamp
36	Y312140		Wire Connector
37	Y313559		Screw
38	410635		Fastener
39	910182	25-7809	Screw, No.6-20 1/2 Flthd Torx
40	911267		Screw, Pump Cover

