


Maytag GA308 04 - FRONT VIEW

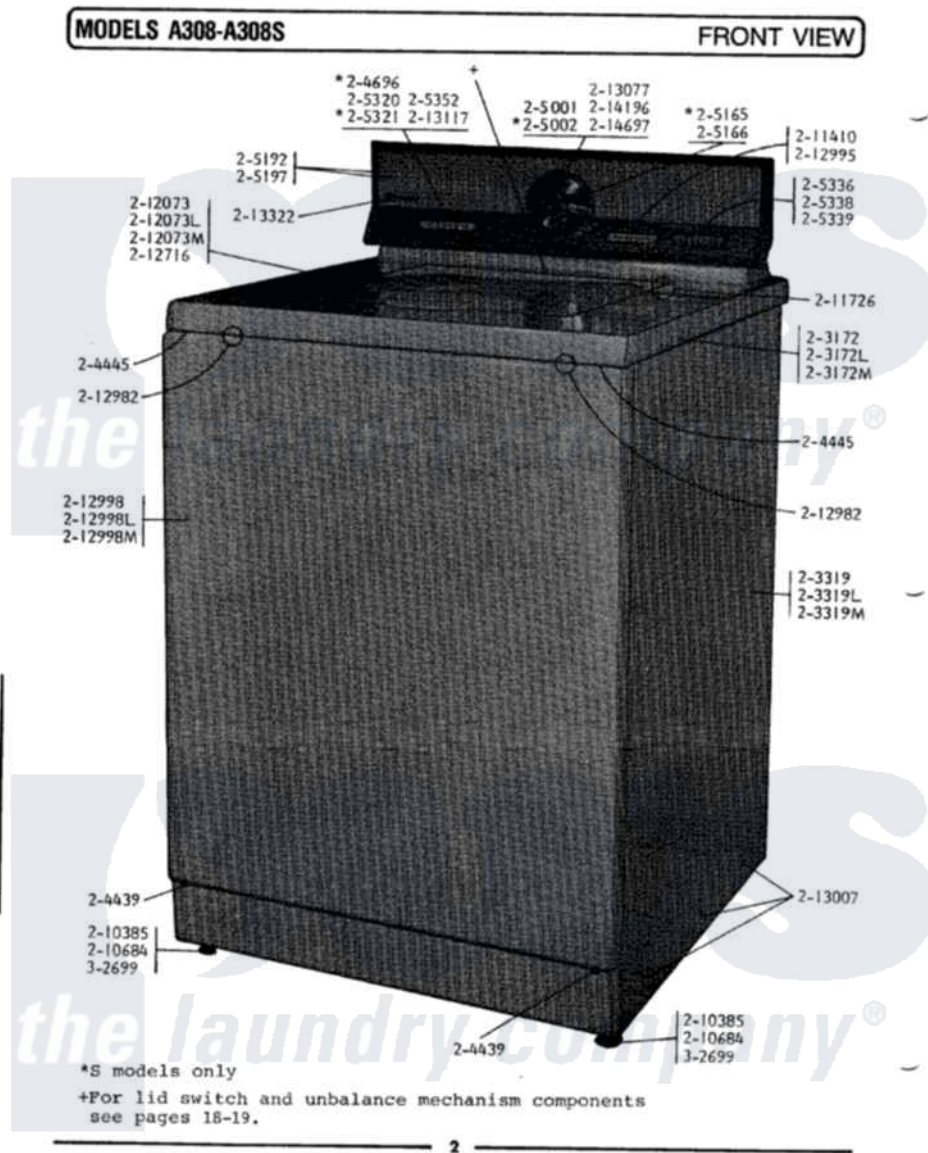

Maytag [Residential Maytag GA308 Washer Parts](#) Parts Diagram 04 - FRONT VIEW
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
3	203172M		Not Available	TOP COVER-HARVEST WHEAT
6	203319M		Not Available	CABINET-HARVEST WHEAT
7	204439			Screw And Fstner Assembly
8	204445			Screw And Fastener Assembly
10	205001			Timer
13	205166		Not Available	TIMER DIAL, SUN-GLOW
14	205192		Not Available	CONTROL PANEL, SUN-GLOW
15	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
16	205320			Temperature Control Switch
18	205336			Water Level Switch
19	205338			Button Kit For 2-5336-1
20	205339			Button Kit For 2-5336
21	205352		Not Available	BUTTON KIT FOR 2-5320
22	210385			Lock Nut For Adjustable Leg

23	210684		Foot, Adjustable Leg
NI	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
25	211410		Screw, HeX Head No.8 X 3/8 Inch
26	211726		Hinge, Ball Lid
29	212073M	Not Available	LID-HARVEST WHEAT
30	212716		Bumper, Lid
31	212982	22001650	Fastener, Spring
32	212995	Not Available	PLUG FOR CONTROL PANEL
35	212998M	Not Available	FRONT PANEL-HARVEST WHEAT
36	213007		Xfor Cabinet See Cabinet, Back
37	213077	Not Available	CAP FOR TIMER KNOB
38	213117	67006908	Screw, Ice Rack
39	213322	Not Available	MAYTAG DECAL
NI	213846		Guard, Belt
41	214196	Not Available	TIMER KNOB-CLEAR ACRYLIC
42	214697		Easy-Grip Knob
43	Y302699	22003428	Leg, Adjustable

