


Maytag GA308S 04 - CONTROL PANEL & COMPONENTS

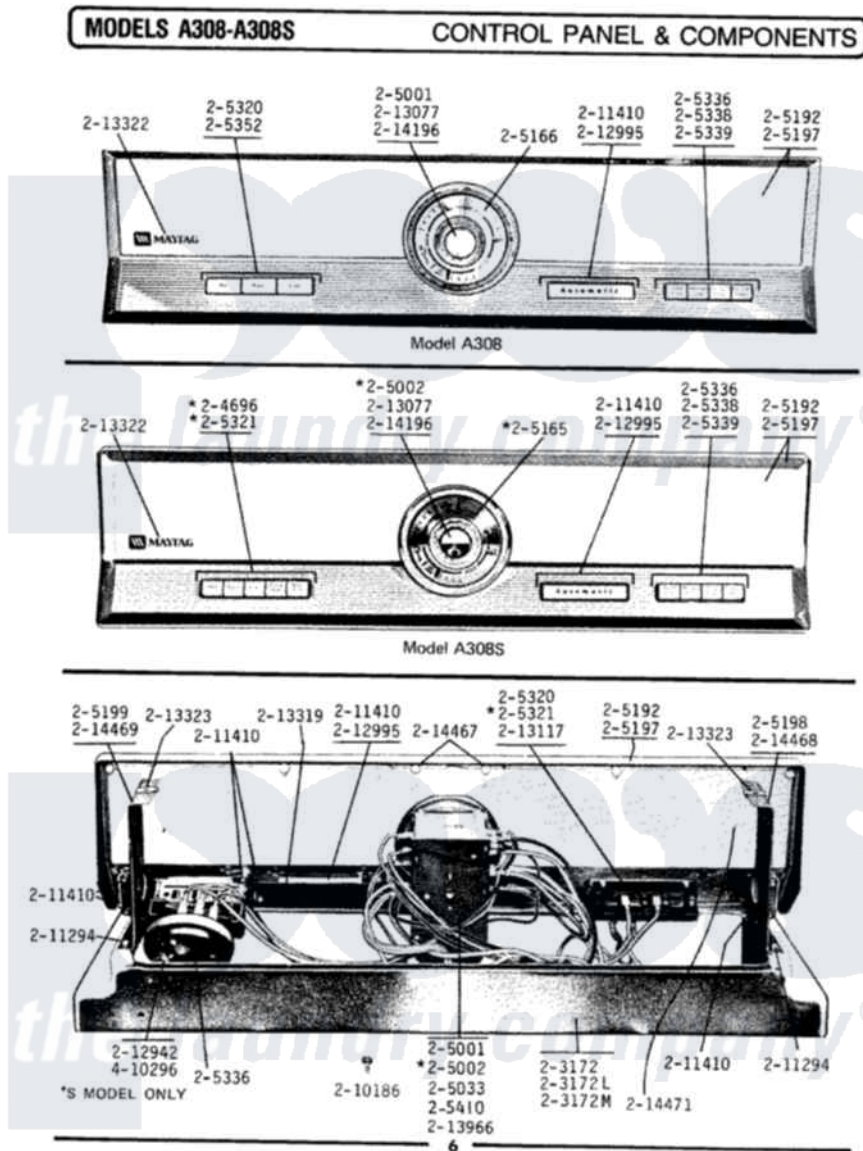

Maytag Residential Maytag GA308S Washer Parts Parts Diagram 04 - CONTROL PANEL & COMPONENTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
3	203172M		Not Available	TOP COVER-HARVEST WHEAT
4	204696			Button Kit For 2-3168
5	205002	22205002		Timer
6	205033	22205033		Motor- Tim
7	205165		Not Available	TIMER DIAL, SUN-GLOW
8	205192		Not Available	CONTROL PANEL, SUN-GLOW
9	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
10	205198		Not Available	BRACKET KIT - LEFT HAND
11	205199		Not Available	BRACKET KIT - RIGHT HAND
12	205320			Temperature Control Switch
13	205336			Water Level Switch
14	205338			Button Kit For 2-5336-1
15	205339			Button Kit For 2-5336
NI	205352		Not Available	BUTTON KIT FOR 2-5320

17	205410		Not Available	TIMER MOTOR 120-60
18	210186	3370225		Screw
19	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
20	211410			Screw, HeX Head No.8 X 3/8 Inch
21	212942	22001619		Tube, Water Level Switch
22	212995		Not Available	PLUG FOR CONTROL PANEL
NI	213077		Not Available	CAP FOR TIMER KNOB
24	213117	67006908		Screw, Ice Rack
25	213319		Not Available	FIBER SHIELD
NI	213322		Not Available	MAYTAG DECAL
27	213323			Fastener, Exhaust Duct Kit
28	213966	3400014		Screw
NI	214196		Not Available	TIMER KNOB-CLEAR ACRYLIC
30	214467		Not Available	NUT
31	214468		Not Available	BRACKET-LEFT HAND
32	214469		Not Available	BRACKET-RIGHT HAND
33	214471		Not Available	BACK-UP PLATE
34	410296	596669		Clamp, Manifold

