


Maytag GA308S 06 - FRONT VIEW

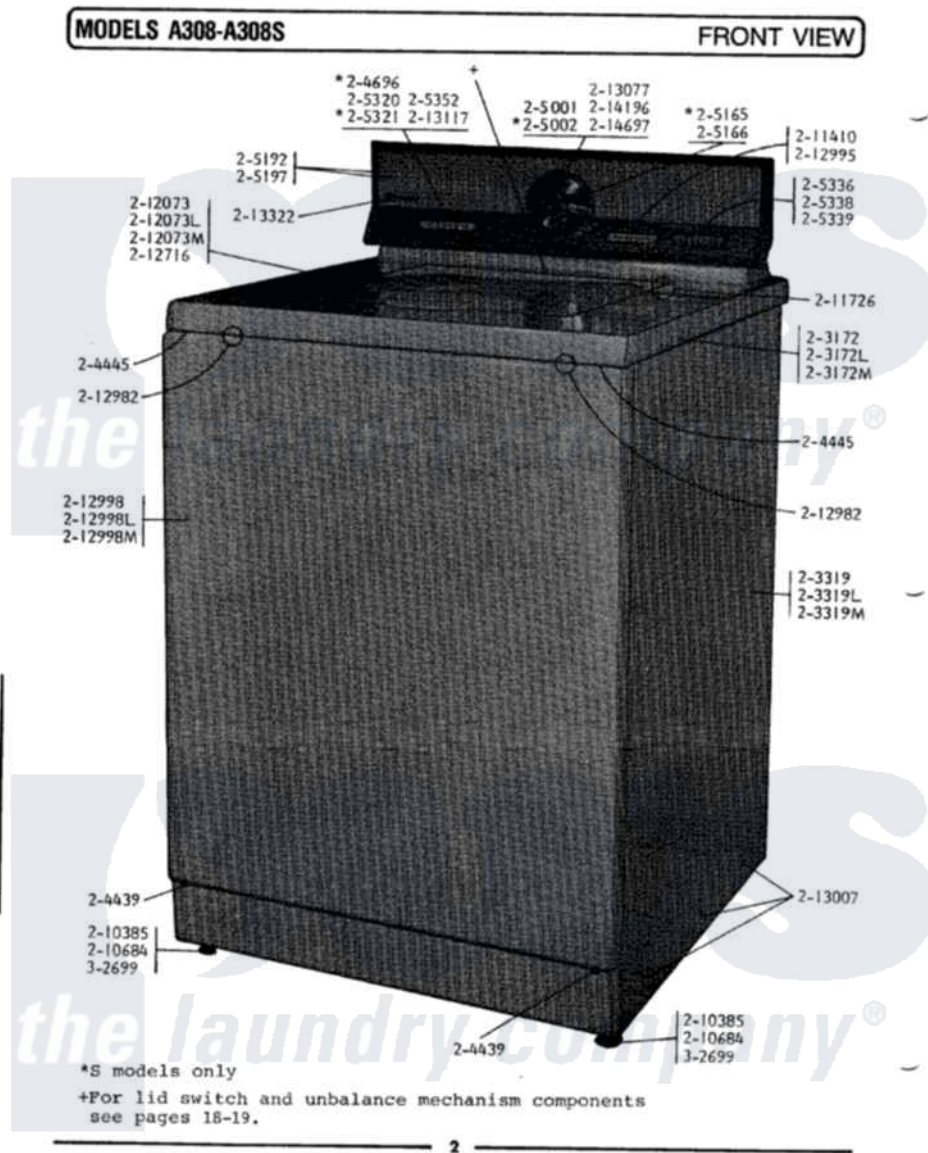

Maytag Residential Maytag GA308S Washer Parts Parts Diagram 06 - FRONT VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
3	203172M		Not Available	TOP COVER-HARVEST WHEAT
6	203319M		Not Available	CABINET-HARVEST WHEAT
7	204439			Screw And Fstner Assembly
8	204445			Screw And Fastener Assembly
9	204696			Button Kit For 2-3168
10	205002	22205002		Timer
13	205165		Not Available	TIMER DIAL, SUN-GLOW
14	205192		Not Available	CONTROL PANEL, SUN-GLOW
15	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
16	205320			Temperature Control Switch
17	205321			Temperature Control Switch
18	205336			Water Level Switch
19	205338			Button Kit For 2-5336-1
20	205339			Button Kit For 2-5336

21	205352		Not Available	BUTTON KIT FOR 2-5320
22	210385			Lock Nut For Adjustable Leg
23	210684			Foot, Adjustable Leg
NI	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
25	211410			Screw, HeX Head No.8 X 3/8 Inch
26	211726			Hinge, Ball Lid
29	212073M		Not Available	LID-HARVEST WHEAT
30	212716			Bumper, Lid
31	212982	22001650		Fastener, Spring
32	212995		Not Available	PLUG FOR CONTROL PANEL
35	212998M		Not Available	FRONT PANEL-HARVEST WHEAT
36	213007			Xfor Cabinet See Cabinet, Back
37	213077		Not Available	CAP FOR TIMER KNOB
38	213117	67006908		Screw, Ice Rack
39	213322		Not Available	MAYTAG DECAL
NI	213846			Guard, Belt
41	214196		Not Available	TIMER KNOB-CLEAR ACRYLIC
42	214697			Easy-Grip Knob
43	Y302699	22003428		Leg, Adjustable

