


Maytag GA382 07 - TRANSMISSION-HELICAL DRIVE

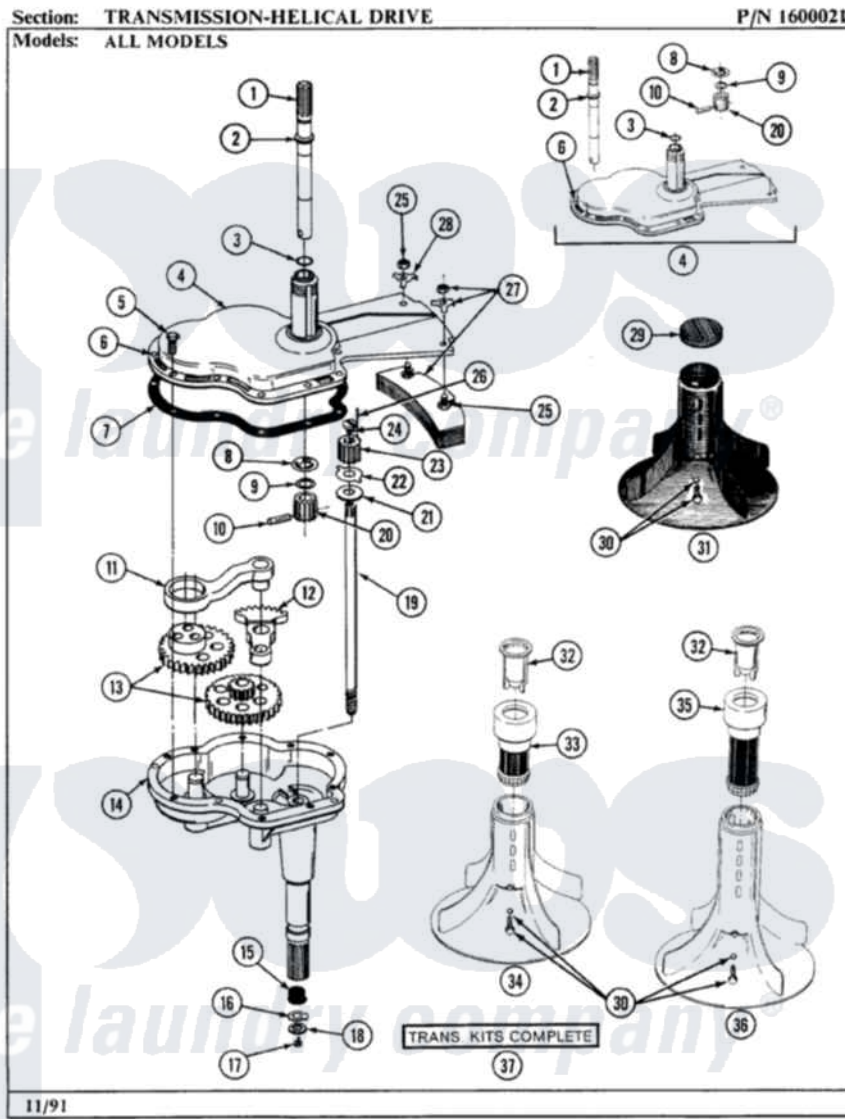

22

Maytag [Residential Maytag GA382 Washer Parts](#) Parts Diagram 07 - TRANSMISSION-HELICAL DRIVE
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200730	22002124		Shaft- Agi
2	Y014839			Collar-Drive Shaft
3	210690			Seal, Rubber
4	200813		Not Available	GEAR CASE COVER ASSEMBLY
5	Y015629			Bolt, Grinding Chamber
6	015639			Dowel Pin
7	210632	22210632		Gasket
8	Y015902			Spring For Agitator
9	Y014827			Washer-Center Shaft
10	210183			Groove Pin
11	201463		Not Available	PITMAN WITH WRIST PIN
12	210670			Segment
13	204967			Gear Kit-Power Fin Agitator
14	203193		Not Available	GEAR HOUSING W/STUDS & TUBE
15	206602	207843		Lip Seal Repair Kit

16	211089		Lug, Stop Pulley
17	211375	681582	Screw
18	211090	22003555	Washer, Stop Lug
19	213044		Shaft, Center
20	210054		Pinion
21	211483	6-2114830	Washer- SP
22	211484		Washer, Lug
23	210315		Pinion
24	211486		Screw, 3/8-16 X 1/2 Inch
25	Y052740	62739	Nut, Lock
26	211487		Groov-Pin
27	205811		Counterweight
28	210172		Lock Washer
30	206478	Not Available	SCREW & WASHER FOR AGITATOR
32	212815	Not Available	DISPENSER CUP
35	203265		Lint Filter-Dispenser
36	203323	22004085	Large Agitator
37	203438	W10172457	Transmison

