


Maytag GA482 04 - CONTROL PANEL

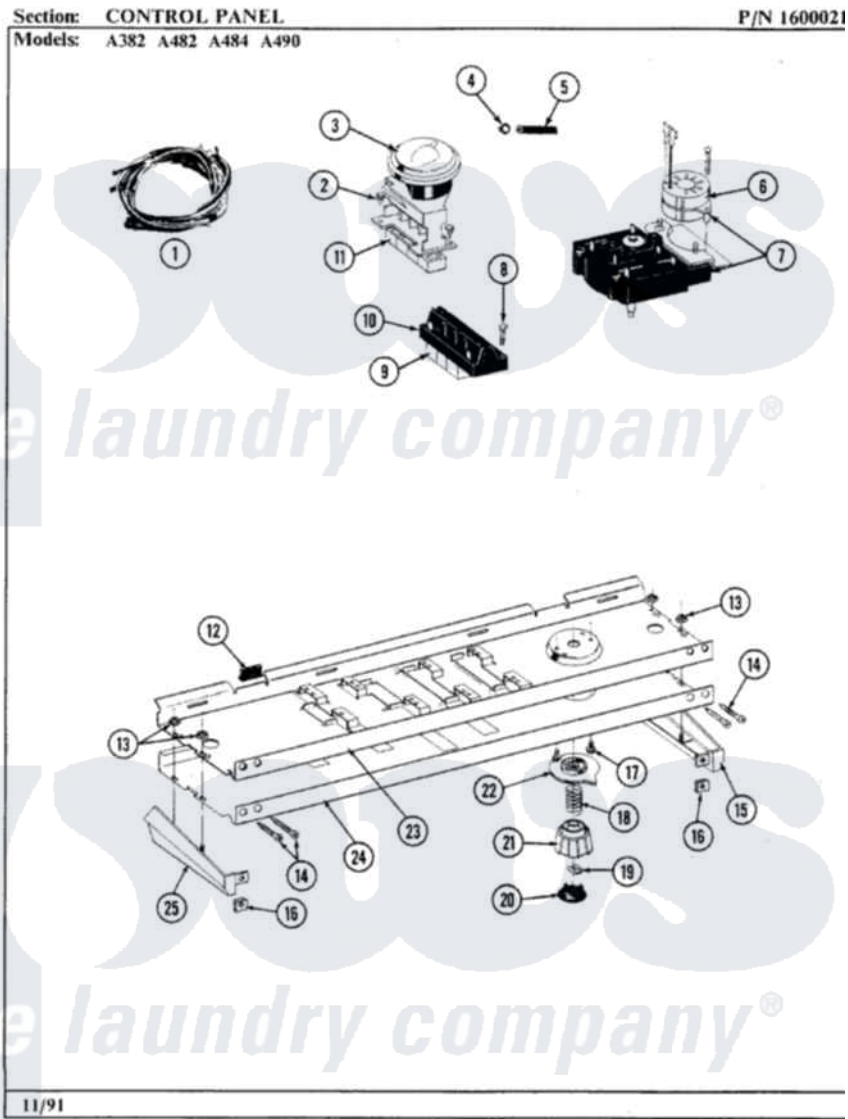

6

Maytag [Residential Maytag GA482 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	206231			Wire Harness
2	211168	W10139210		Screw, 8-18 X 5/16
3	206220		Not Available	WATER LEVEL SWITCH
4	410296	596669		Clamp, Manifold
5	212942	22001619		Tube, Water Level Switch
6	205033	22205033		Motor- Tim
7	206230			Timer
8	213117	67006908		Screw, Ice Rack
9	215211			Button For Switch
10	206216			Water Temperature Switch
11	215213	214993		Button For Switch
"	215212			Button For Switch
12	214897			Pad, Control Panel
13	214872			Palnut, End Cap Note: Nut, Lamp Holder
14	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct

15	214816		End Cap F/Control Panel-RH
16	214894		Fastener, End Cap
17	213966	3400014	Screw
18	211065		Spring, Index Wheel
19	211605		Bezel, Timer Dial
20	215164	Not Available	CAP FOR KNOB
21	215162		Timer Knob
22	215161	22001571	Bezel, Timer Dial
23	214818		Back Up Plate
24	206564		Control Panel
25	214815		End Cap F/Control Panel-LH

Howes
the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]