



Maytag [Residential Maytag GA482 Washer Parts](#) Parts Diagram 06 - TOP
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	215075			Fastener, Control Panel To Console
2	205635M		Not Available	CONSOLE (HVST WHEAT)
3	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	313551	31-3551		Dw Minimanu
5	211726			Hinge, Ball Lid
6	212073M		Not Available	LID-HARVEST WHEAT
7	205538M		Not Available	TOP COVER-HARVEST WHEAT
8	212716			Bumper, Lid
9	204445			Screw And Fastener Assembly
10	214436			Gasket
11	214437	215577		Bleach Inlet White
12	210186	3370225		Screw
13	204590			Cord, Power
14	211881			Grommet, Cord Part Not Used-Gas Models Only

15	213501		Screw, No.6-20 X 1-1/8 Inch
16	214898		Cover For Lid Switch
17	205415	279347	Switch-Lid
18	911267		Screw, Pump Cover
19	214987		Moisture Barrier For Switch
20	410635		Fastener
21	214813	Not Available	LEVER FOR LID SWITCH
22	214805		Pin For Unbalance Lever
23	215236	214804	Unbalance Lever
24	204968		Plunger And Bracket Assembly--W
25	213718		Plunger, Lid Switch
26	213720		Spring, Lid Switch
27	211500		Washer, Bracket To Top Cover
28	910182	25-7809	Screw, No.6-20 1/2 Flthd Torx
29	207159	489355	Screw, 8 X 1/2
30	207172M	Not Available	TOP COVER ASSY HVT WHEAT
31	215704		Lever, Unbalance
32	215700	Not Available	LID SWITCH PLUNGER
33	Y215699	22001678	Bracket, Switch And Fuse

