


# Maytag GA608 07 - FRONT VIEW

2

MODELS A608-A608S

SPECIFY COLOR IF OTHER THAN WHITE

FRONT VIEW

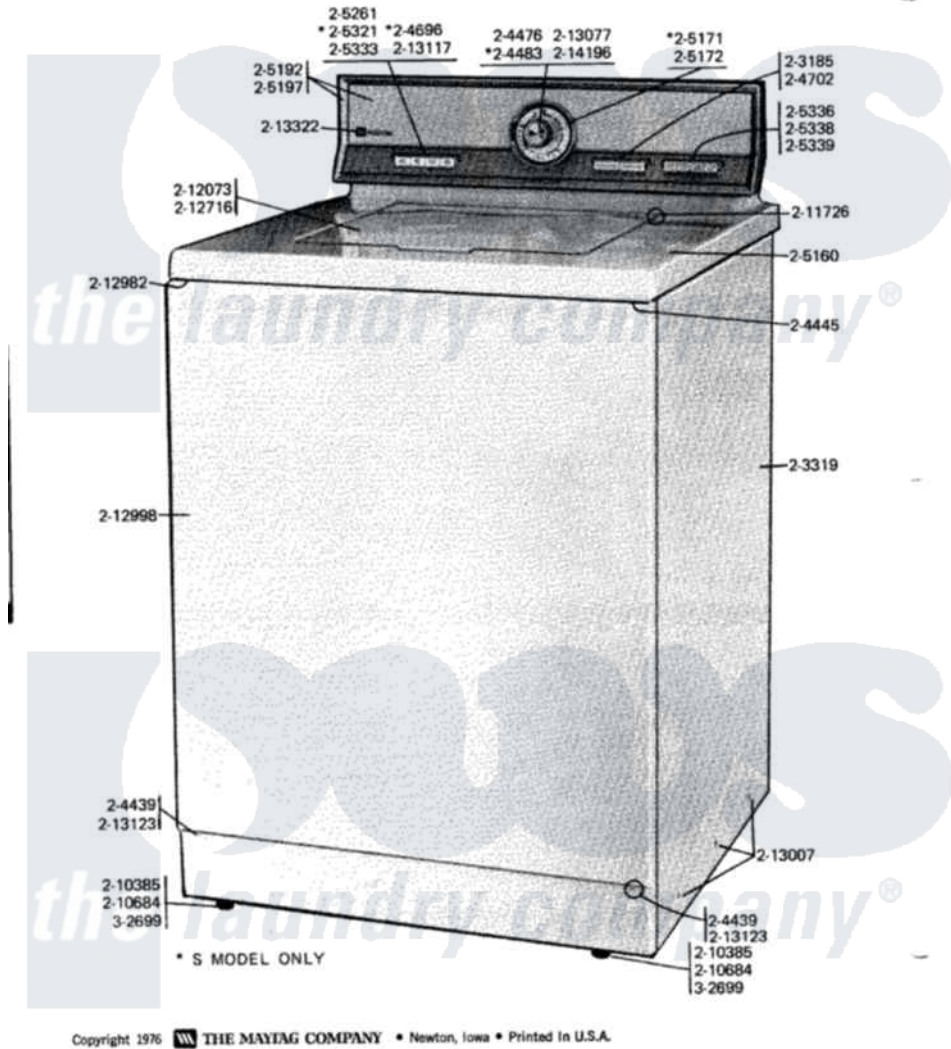

Maytag Residential Maytag GA608 Washer Parts Parts Diagram 07 - FRONT VIEW

Click on the part number to view part

| Item | Original Part Number   | Replaced By              | Status        | Part Description            |
|------|------------------------|--------------------------|---------------|-----------------------------|
| 1    | 203185                 |                          | Not Available | FABRIC SWITCH               |
| 2    | 203319                 | <a href="#">22203319</a> |               | Cabinet                     |
| 3    | <a href="#">204439</a> |                          |               | Screw And Fstner Assembly   |
| 4    | <a href="#">204445</a> |                          |               | Screw And Fastener Assembly |
| 5    | <a href="#">204476</a> |                          |               | Timer                       |
| 6    | <a href="#">204696</a> |                          |               | Button Kit For 2-3168       |
| 7    | 204702                 |                          | Not Available | BUTTON KIT FOR 2-3185       |
| 8    | 205160                 |                          | Not Available | TOP COVER-WHITE             |
| 9    | 205172                 |                          | Not Available | TIMER DIAL, SUN-GLOW        |
| 10   | 205192                 |                          | Not Available | CONTROL PANEL, SUN-GLOW     |
| 11   | 205197                 |                          | Not Available | CONTROL PANEL KIT, SUN-GLOW |
| 12   | 205261                 |                          | Not Available | TEMPERATURE CONTROL SWITCH  |
| 13   | 205333                 |                          | Not Available | BUTTON KIT FOR 2-5261       |
| 14   | <a href="#">205336</a> |                          |               | Water Level Switch          |

|    |                        |                          |                                |
|----|------------------------|--------------------------|--------------------------------|
| 15 | <a href="#">205338</a> |                          | Button Kit For 2-5336-1        |
| 16 | <a href="#">205339</a> |                          | Button Kit For 2-5336          |
| 17 | <a href="#">210385</a> |                          | Lock Nut For Adjustable Leg    |
| 18 | <a href="#">210684</a> |                          | Foot, Adjustable Leg           |
| 19 | <a href="#">211726</a> |                          | Hinge, Ball Lid                |
| 20 | 212073                 |                          | LID (WHITE)                    |
| NI | <a href="#">212277</a> |                          | Screw, No.8 X 1/2 Inch         |
| 22 | <a href="#">212716</a> |                          | Bumper, Lid                    |
| 23 | 212982                 | <a href="#">22001650</a> | Fastener, Spring               |
| 24 | 212998                 | Not Available            | PANEL, FRONT (WHT)             |
| 25 | <a href="#">213007</a> |                          | Xfor Cabinet See Cabinet, Back |
| 26 | 213077                 | Not Available            | CAP FOR TIMER KNOB             |
| 27 | 213117                 | <a href="#">67006908</a> | Screw, Ice Rack                |
| 28 | 213123                 | <a href="#">22001496</a> | Front Panel Fastener And Screw |
| 29 | 213322                 | Not Available            | MAYTAG DECAL                   |
| 30 | 214196                 | Not Available            | TIMER KNOB-CLEAR ACRYLIC       |
| 31 | Y302699                | <a href="#">22003428</a> | Leg, Adjustable                |

