



Maytag [Residential Maytag GA608 Washer Parts](#) Parts Diagram 08 - MODEL COMPONENTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	200806			Solenoid
2	201168			Diverter Valve
3	201807	12002353		Motor-Drve
4	202770	279347		Switch-Lid
5	203177	205613		Water Valve
6	204475			Major Wire Harness
7	204476			Timer
8	204590			Cord, Power
9	205131			Switch, Motor External Start
10	205134		Not Available	MOTOR EXTERNAL START SWITCH
11	205172		Not Available	TIMER DIAL, SUN-GLOW
12	205261		Not Available	TEMPERATURE CONTROL SWITCH
13	205336			Water Level Switch
14	210186	3370225		Screw
15	210745			Wire Terminal

16	211065		Spring, Index Wheel
17	211605		Bezel, Timer Dial
18	211737	248562	Terminal
19	211881		Grommet, Cord Part Not Used- Gas Models Only
20	213077	Not Available	CAP FOR TIMER KNOB
21	213501		Screw, No.6-20 X 1-1/8 Inch
22	214196	Not Available	TIMER KNOB-CLEAR ACRYLIC
23	301548		Clamp, Ground Wire
24	303846	22003781	Screw, Ground Strap
25	311155		Ground Wire And Clamp
26	313122		Screw - Baffle To Tumbler
27	Y313262	W10116752	Retainer-
28	203185	Not Available	FABRIC SWITCH
29	203236	Not Available	WIRE HARNESS - SUDS SAVE
30	203237		No.17 Wire With Terminal

