


SPECIFY COLOR IF OTHER THAN WHITE

FRONT VIEW

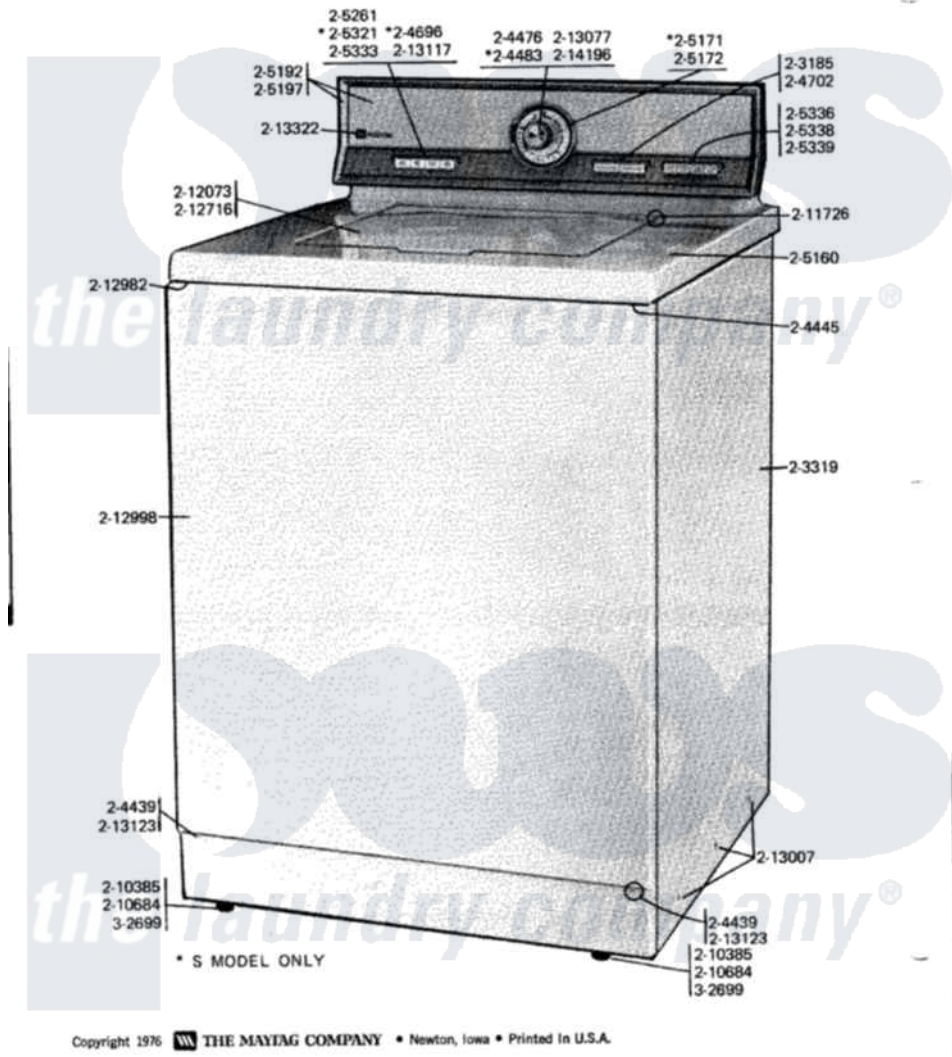

Maytag Residential Maytag GA608S Washer Parts Parts Diagram 08 - FRONT VIEW
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|------------------------|--------------------------|---------------|-----------------------------|
| 1 | 203185 | | Not Available | FABRIC SWITCH |
| 2 | 203319 | 22203319 | | Cabinet |
| 3 | 204439 | | | Screw And Fstner Assembly |
| 4 | 204445 | | | Screw And Fastener Assembly |
| 5 | 204483 | | Not Available | TIMER |
| 6 | 204696 | | | Button Kit For 2-3168 |
| 7 | 204702 | | Not Available | BUTTON KIT FOR 2-3185 |
| 8 | 205160 | | Not Available | TOP COVER-WHITE |
| 9 | 205171 | | Not Available | TIMER DIAL, SUN-GLOW |
| 10 | 205192 | | Not Available | CONTROL PANEL, SUN-GLOW |
| 11 | 205197 | | Not Available | CONTROL PANEL KIT, SUN-GLOW |
| 12 | 205321 | | | Temperature Control Switch |
| 13 | 205333 | | Not Available | BUTTON KIT FOR 2-5261 |
| 14 | 205336 | | | Water Level Switch |
| 15 | 205338 | | | Button Kit For 2-5336-1 |

| | | | |
|----|------------------------|--------------------------|--------------------------------|
| 16 | 205339 | | Button Kit For 2-5336 |
| 17 | 210385 | | Lock Nut For Adjustable Leg |
| 18 | 210684 | | Foot, Adjustable Leg |
| 19 | 211726 | | Hinge, Ball Lid |
| 20 | 212073 | | LID (WHITE) |
| 21 | 212277 | | Screw, No.8 X 1/2 Inch |
| 22 | 212716 | | Bumper, Lid |
| 23 | 212982 | 22001650 | Fastener, Spring |
| 24 | 212998 | Not Available | PANEL, FRONT (WHT) |
| 25 | 213007 | | Xfor Cabinet See Cabinet, Back |
| 26 | 213077 | Not Available | CAP FOR TIMER KNOB |
| 27 | 213117 | 67006908 | Screw, Ice Rack |
| 28 | 213123 | 22001496 | Front Panel Fastener And Screw |
| 29 | 213322 | Not Available | MAYTAG DECAL |
| 30 | 214196 | Not Available | TIMER KNOB-CLEAR ACRYLIC |
| 31 | Y302699 | 22003428 | Leg, Adjustable |

