


Maytag GA8440 04 - CONTROL PANEL

SECTION: CONTROL PANEL

MODEL: A8420 A8440

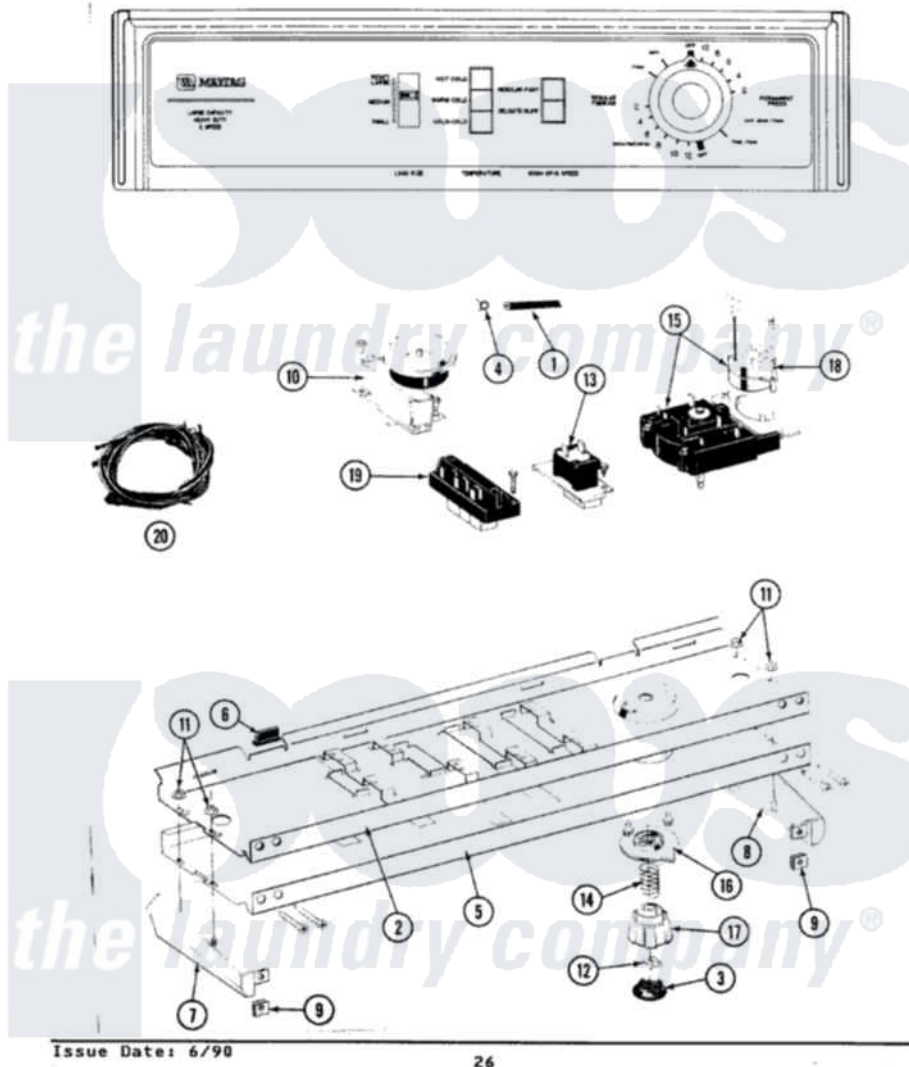

Maytag [Residential Maytag GA8440 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	212942	22001619		Tube, Water Level Switch
2	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
"	214809			Back Up Plate
3	215821		Not Available	CAP, KNOB
4	410296	596669		Clamp, Manifold
9	214894			Fastener, End Cap
10	207362		Not Available	INFINITE LEVEL PRESSURE SWITCH
"	211168	W10139210		Screw, 8-18 X 5/16
11	214872			Palnut, End Cap Note: Nut, Lamp Holder
12	211605			Bezel, Timer Dial
13	207370			Speed Control Switch - 2 Butto
"	213117	67006908		Screw, Ice Rack
14	211065			Spring, Index Wheel
15	213966	3400014		Screw

"	207374		Not Available	TIMER
16	215827		Not Available	TIMER DIAL SKIRT
17	215828			Knob, Timer
18	205033	22205033		Motor- Tim
19	213117	67006908		Screw, Ice Rack
"	207368		Not Available	TEMP CONTROL SWITCH - 3 BUTTON
20	207384		Not Available	WIRE HARNESS

