


Maytag GA8640 04 - CONTROL PANEL

SECTION: CONTROL PANEL
MODEL: A8640 A8650

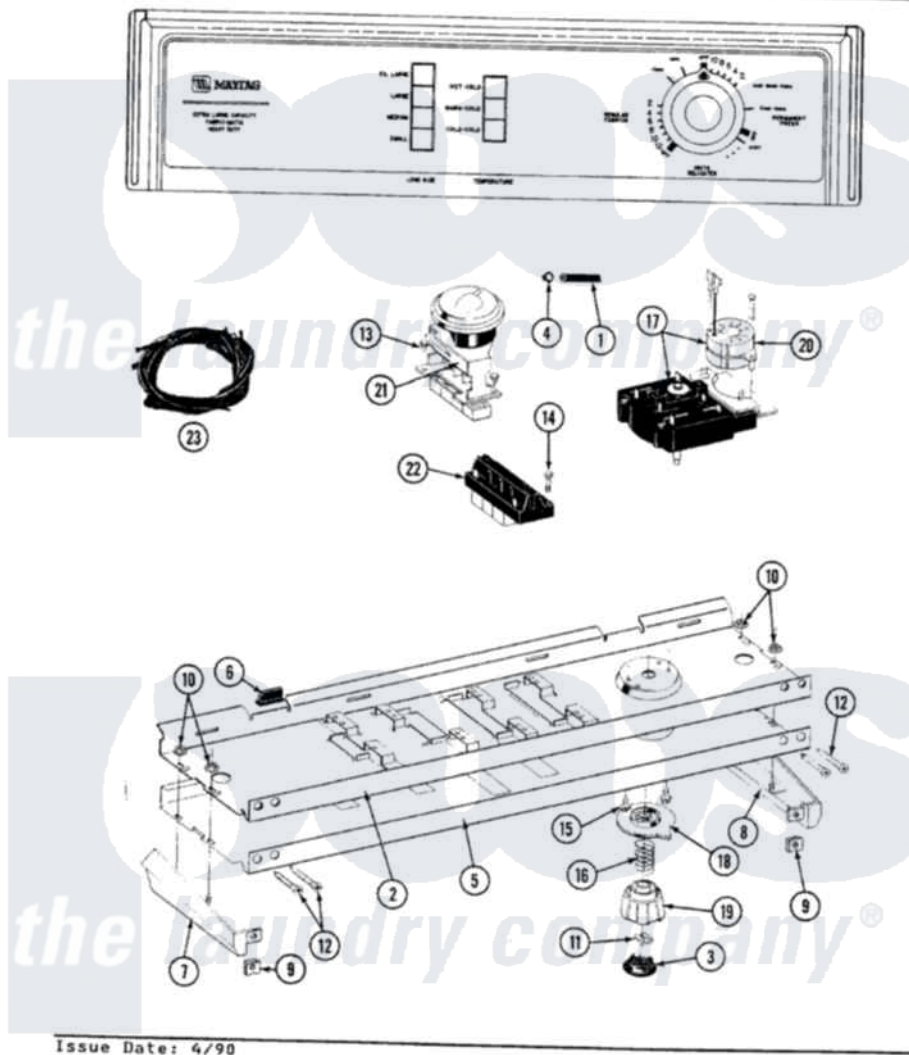

Issue Date: 4/90

14

Maytag [Residential Maytag GA8640 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	212942	22001619		Tube, Water Level Switch
2	214818			Back Up Plate
3	215821		Not Available	CAP, KNOB
4	410296	596669		Clamp, Manifold
5	207392		Not Available	CONTROL PANEL
"	208116		Not Available	FACIA A8650/8640
6	214897			Pad, Control Panel
7	207215		Not Available	END CAP LH
8	207216		Not Available	END CAP RH
9	214894			Fastener, End Cap
10	214872			Palnut, End Cap Note: Nut, Lamp Holder
11	211605			Bezel, Timer Dial
12	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
13	211168	W10139210		Screw, 8-18 X 5/16
14	213117	67006908		Screw, Ice Rack

15	213966	3400014		Screw
16	211065			Spring, Index Wheel
17	207377		Not Available	TIMER
"	207376	22207376		Timer
18	215827		Not Available	TIMER DIAL SKIRT
19	215828			Knob, Timer
20	205033	22205033		Motor- Tim
21	207361			4 Level Pressure Switch
22	207368		Not Available	TEMP CONTROL SWITCH - 3 BUTTON
"	207367		Not Available	TEMP CONTROL SWITCH - 4 BUTTON
23	207383			Wire Harness
"	207382			Wire Harness

the laundry company[®]

the laundry company[®]

the laundry company[®]